


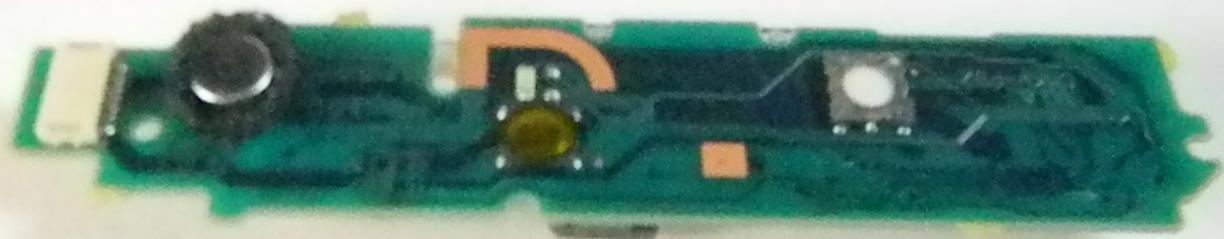

Sony Cyber-shot DSC-W730 Flash Control Board Replacement

This guide will show the proper steps to efficiently remove the flash control board. This will not take too long to accomplish.

Written By: Douglas Howe




INTRODUCTION

This is just a small step after taking the outer case off. This can be done with ease. Be careful with the ribbons though

TOOLS:

- [Spudger \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Removing the Case

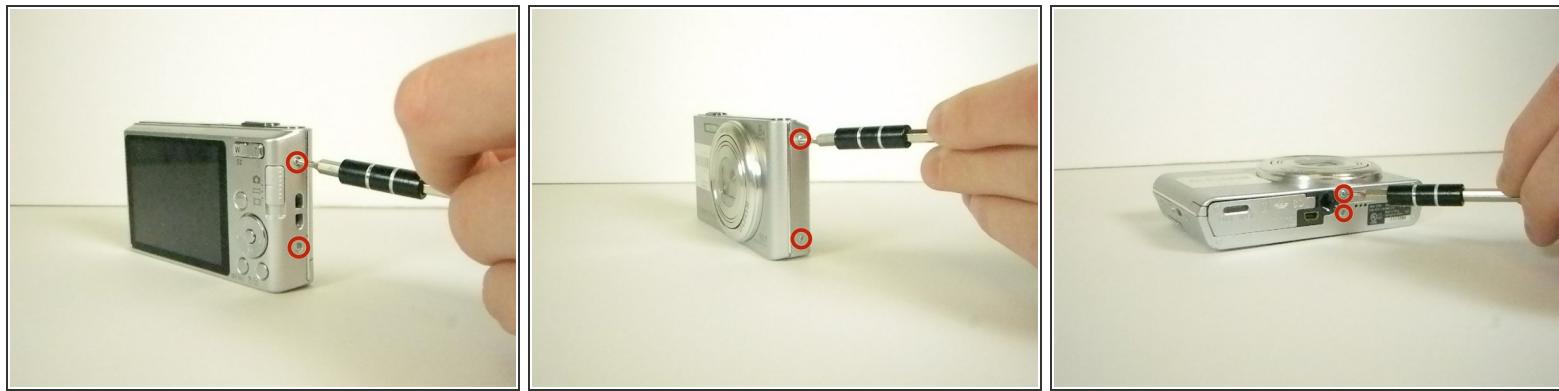


- Open the battery/memory card door and remove the 6 screws (.35cm) with a Philips 000 screwdriver. There will be two screws on the left and right sides, and two on the bottom.

Step 2




- Take off the front part of the case with a plastic opening tool.

Step 3

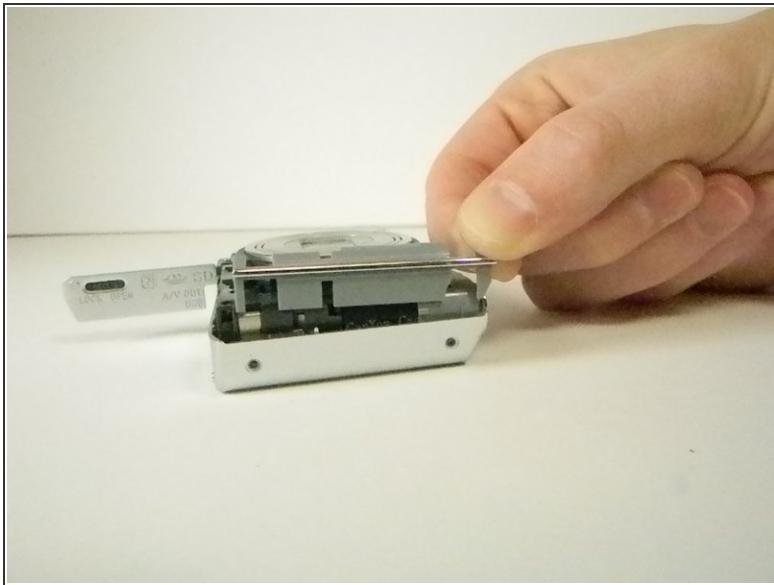

- Pull off the two silver side pieces on the left and right sides.

Step 4

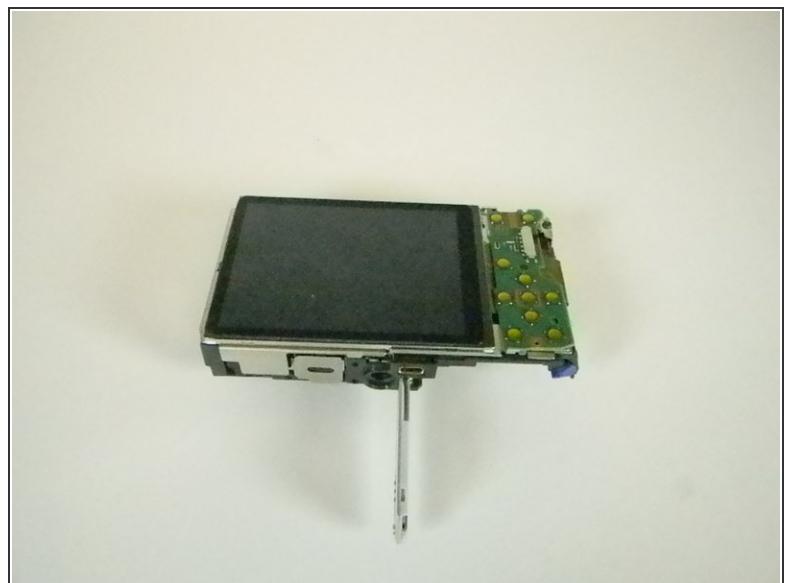


- Remove the main back piece. It should easily lift off.

Step 5




- Unscrew the .45cm screw located on the upper right corner on the back of the camera. Once the screw is off, use the spudger and unclip the piece holding the top down on the upper left on the front of the camera. It should lift off with ease.

Step 6 — LCD Control Board

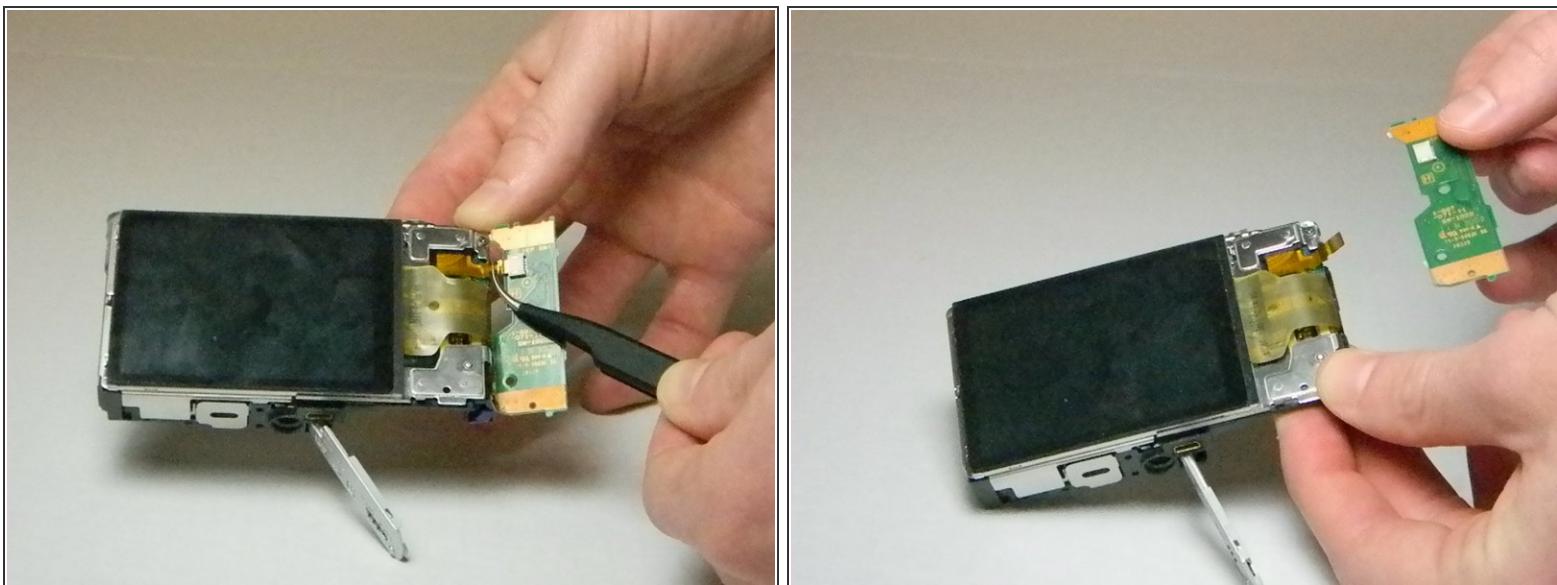


- Flip over the control board then use tweezers to pull out the ribbon connecting the circuit board to the motherboard.

Step 7 — Caption/Flash Control Board

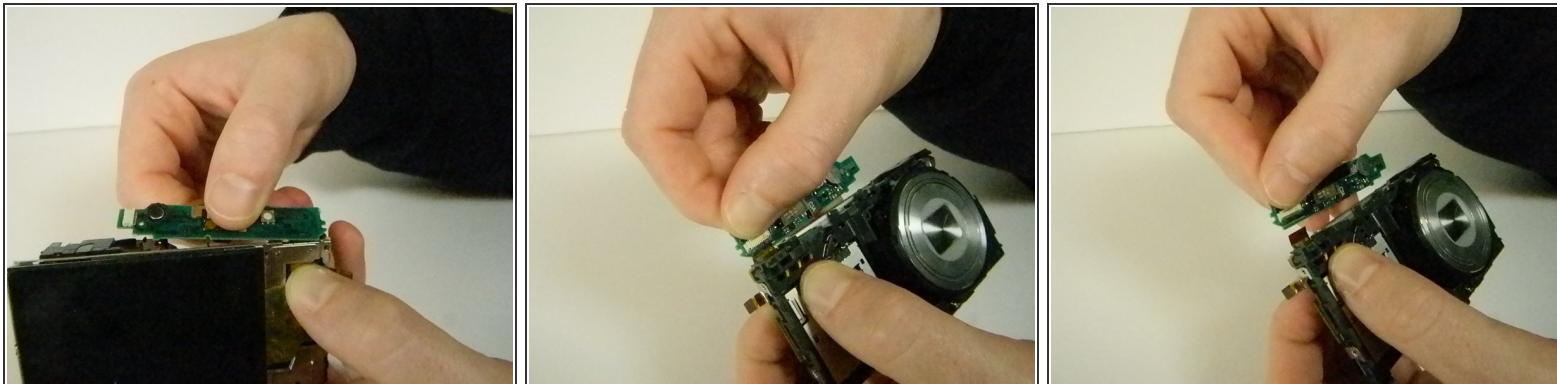

- Once the case is off, hold down the ribbon near the LCD screen that connects the flash to the camera. While doing this, carefully lift the control board that contains the flash until the ribbon is no longer connected.

Step 8

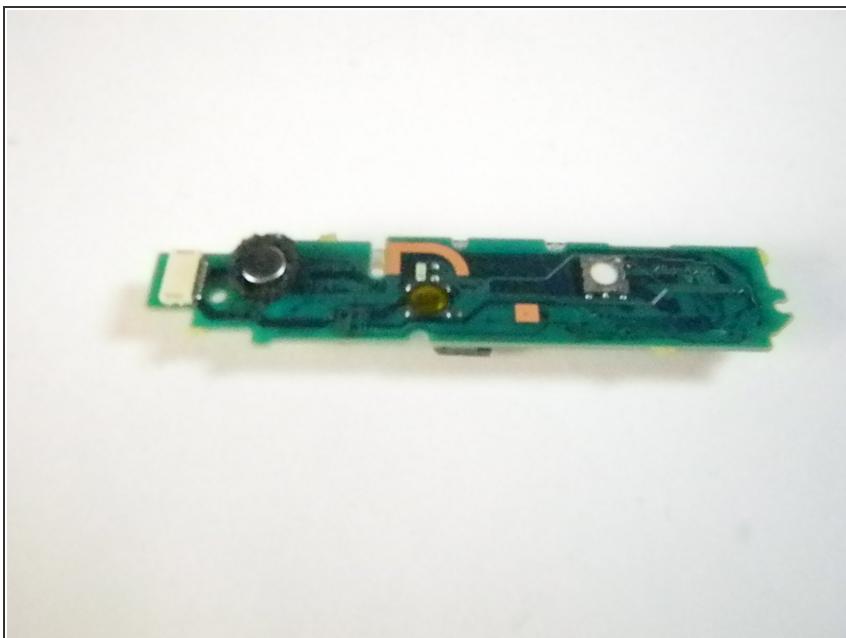

- Once you have removed the piece this is what it will look like.

To reassemble your device, follow these instructions in reverse order.