



Sony Cyber-shot DSC-W800 Battery Replacement

Batteries need replacing because of damage and overuse. In this guide we show you how to replace the battery.

Written By: Nicholas Pfingsten



This document was generated on 2019-09-22 04:04:48 AM (MST).

INTRODUCTION

Some things to consider before you work on the Sony Cyber-shot DSC W800 to replace the batter:

- The battery is integral part of the device and it insure the device is well powered.

Step 1 — Battery



- Insert new battery into battery slot.
- Push up on battery until it is fully inserted in battery slot.

Step 2



- Push battery in slot fully.
- Ensure purple clip has been set to secure the battery in place.

Step 3



- Close SD door.
- Slide SD door towards the right and lock in place.

Replacing the battery is a simple task and take little to no time to accomplish.