



# Sony Cyber-shot DSC-W800 Button Board Replacement

Replace the malfunctioning Button Board on your Sony Cyber-shot DSC W800. This should restore your device to its default operating condition.

Written By: Thomas Campo



This document was generated on 2019-09-22 04:04:55 AM (MST).

## INTRODUCTION


Some things to consider before you work on the Sony Cyber-shot DSC W800 to replace the Button Board:

- The Button Board is an integral part of the device and any improper handling can cause issues in other parts of the camera.
- Be cautious when removing ribbon wires.
- Be sure to keep track of all pieces that are taken apart.

## TOOLS:


- [Spudger \(1\)](#)
- [Tweezers \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)

## Step 1 — Button Board

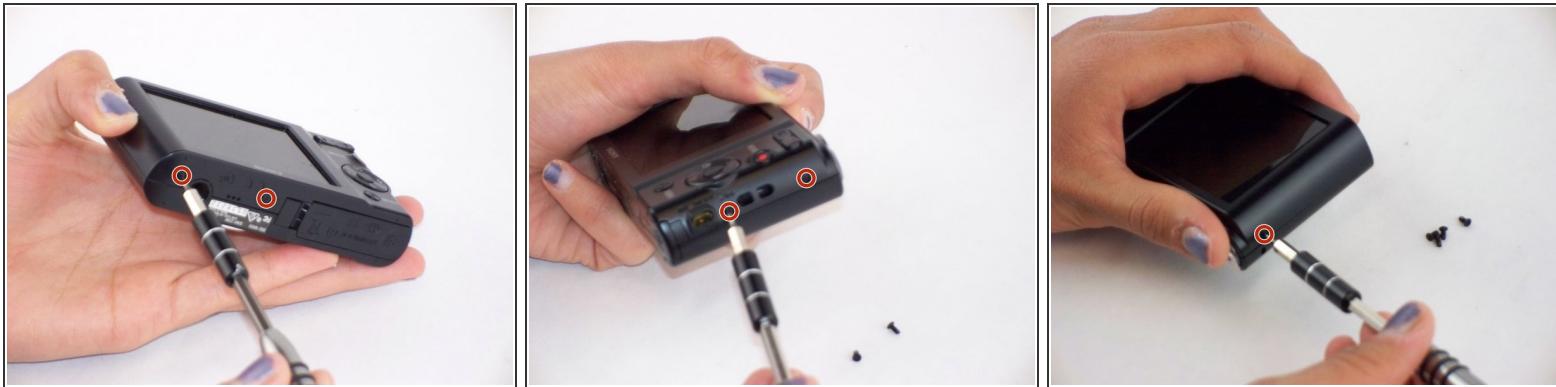


- Remove the five 4.0 mm Phillips #000 screws on the back panel.

## Step 2

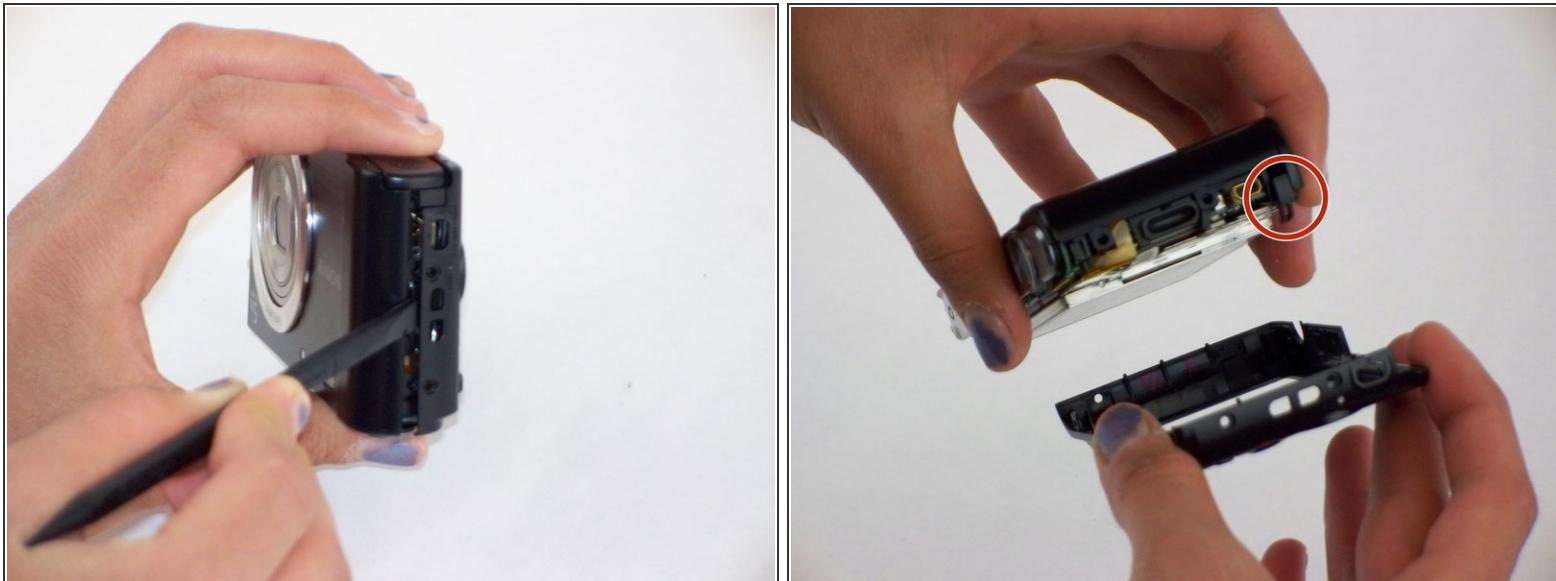

- Using the Spudger, remove the back panel from the device.
- The loose piece circled in the picture will most likely fall off the camera housing.

## Step 3

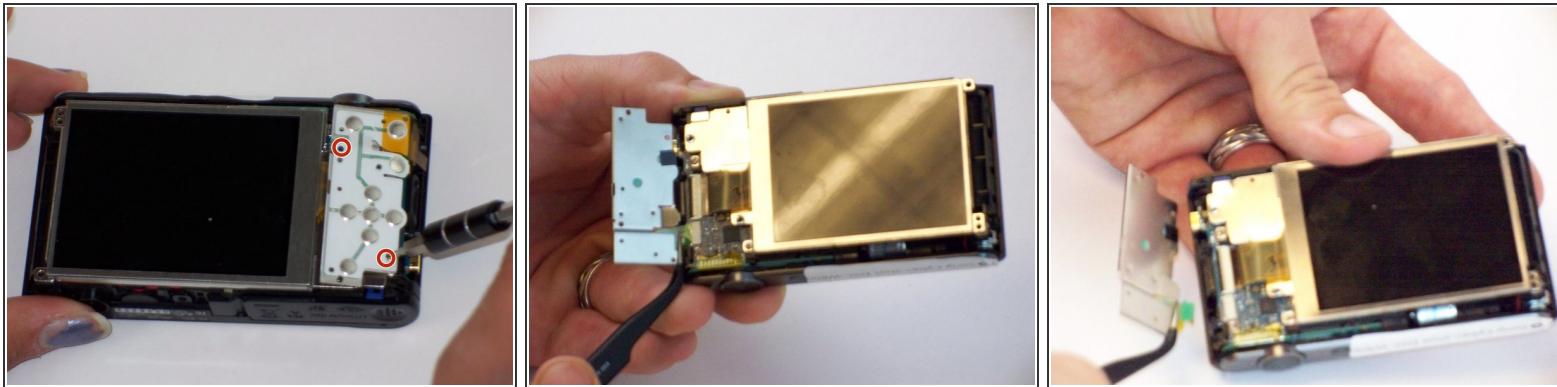

- Remove the two 2.15mm Phillips #000 screws from the circuit board.
- Gently pull on the ribbon wire from ZIF connector with the tweezers to remove the button board.



Ribbon wires can easily be damaged.

To reassemble your device, follow these instructions in reverse order.