



Sony Cyber-shot DSC-WX100 Battery Replacement

How to replace an exhausted or damaged battery.

Written By: Peter Prins



INTRODUCTION

The purpose of this guide is to provide instruction on replacing an exhausted or damaged battery.

Step 1 — Battery



- Open the flap indicated to allow access to the battery slot.
- *(i)* The gray switch indicated has to be moved to the right in order to release the flap.

Step 2



- *(i)* If the old battery is still in the slot, then make sure the camera is turned off prior to removal.
- ● If there is a battery currently in the slot, remove by first pulling downwards on the blue component. This will allow you to remove the battery from the slot.

To reassemble your device, follow these instructions in reverse order.