




# Sony Cyber-shot DSC-WX100 Flash Bulb Replacement

Replacing the flash bulb on the DSC-WX100.

Written By: Matthew

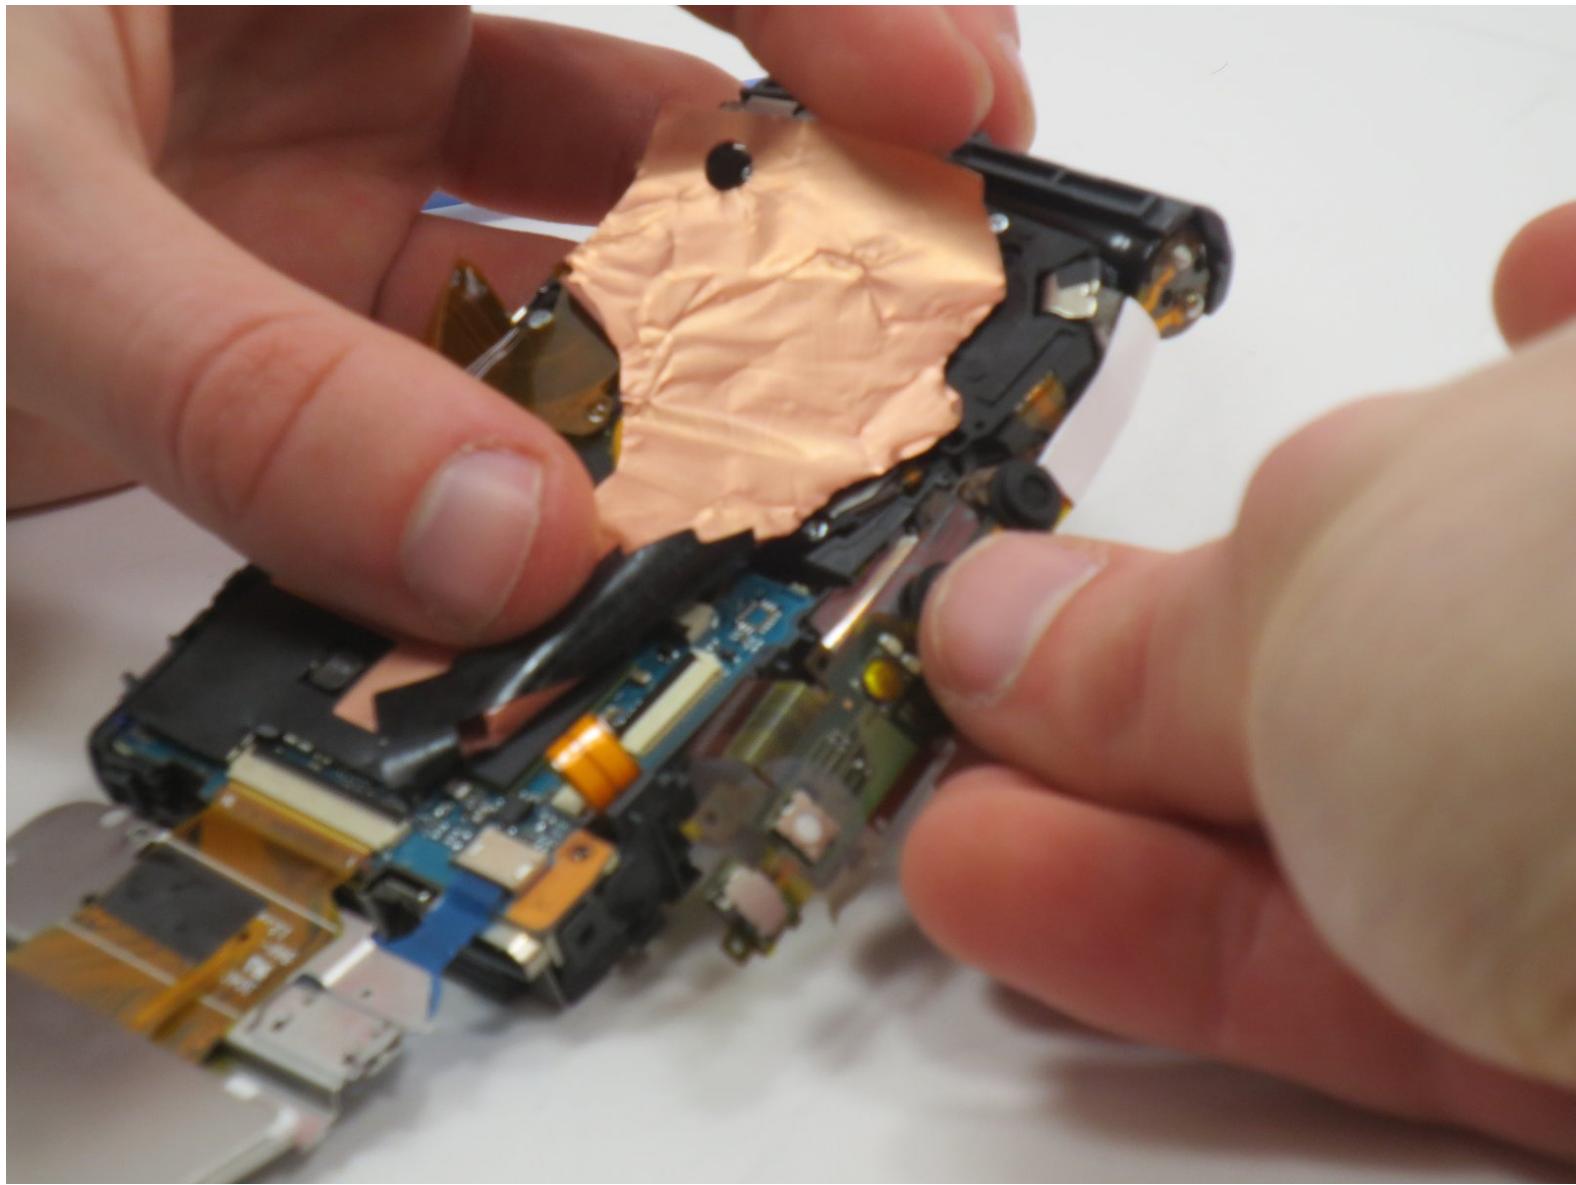

 **TOOLS:**

- [Solder](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Battery



- Open the flap indicated to allow access to the battery slot.
- *(i)* The gray switch indicated has to be moved to the right in order to release the flap.

## Step 2




- *(i)* If the old battery is still in the slot, then make sure the camera is turned off prior to removal.
- ● If there is a battery currently in the slot, remove by first pulling downwards on the blue component. This will allow you to remove the battery from the slot.

## Step 3 — Outer Casing




- Remove all of the 1mm screws using a Philips #000 Screwdriver.
- Remove the rest of the screws (2mm) from the camera covers using a Phillips #000 Screwdriver.

## Step 4

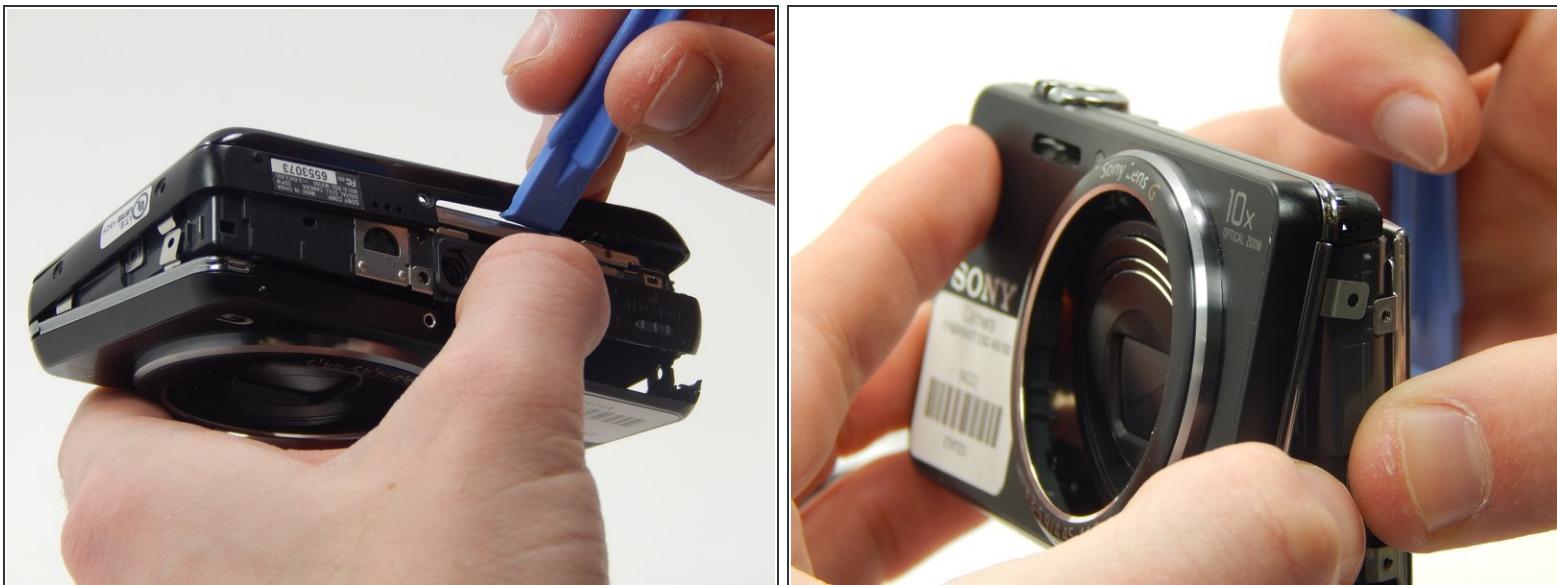

- Use the plastic opening tool to gently remove the front and back plates of the camera.

## Step 5

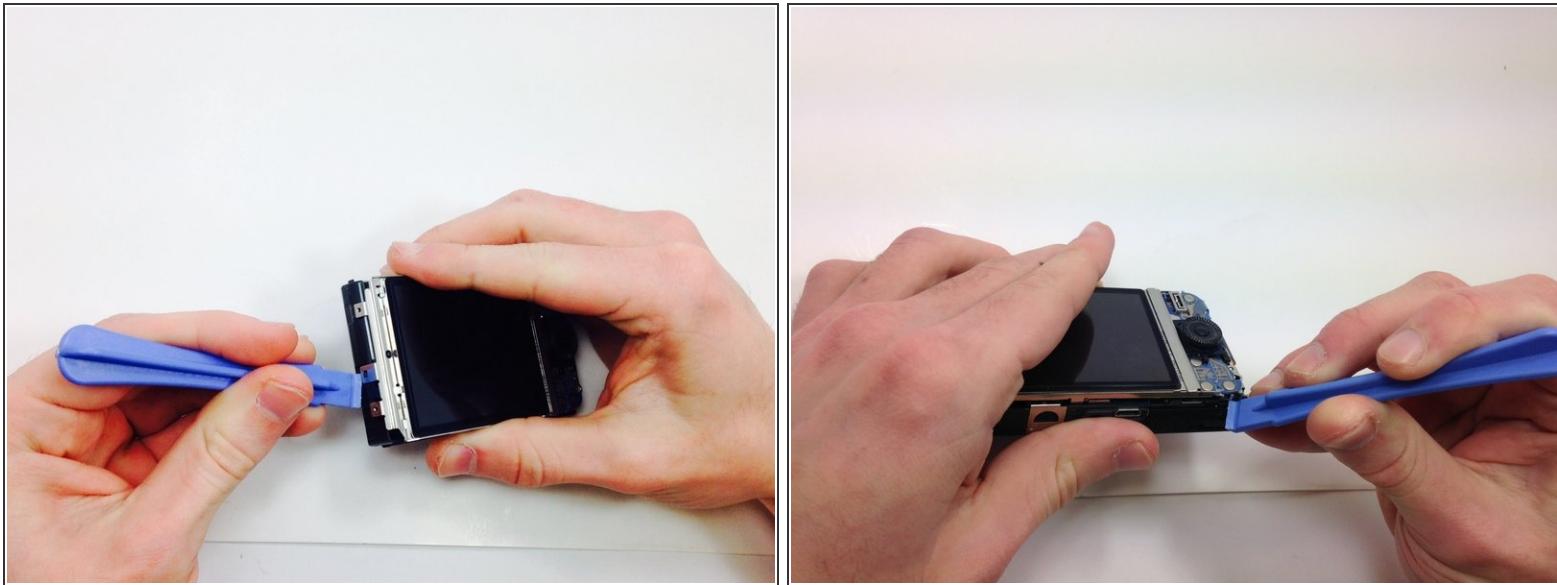

- Use a plastic opening tool to gently release the two indicated tabs.


## Step 6 — Flash Bulb



- Pull up on the lower end of the plate. Lift so the plate is high enough that the marked bump is not holding it in place.
- Pull away from the camera at the end of the metal plate with the blue circuits to then remove the plate from the rest of the camera.


*(i)* For help with this step, refer to the video.

## Step 7

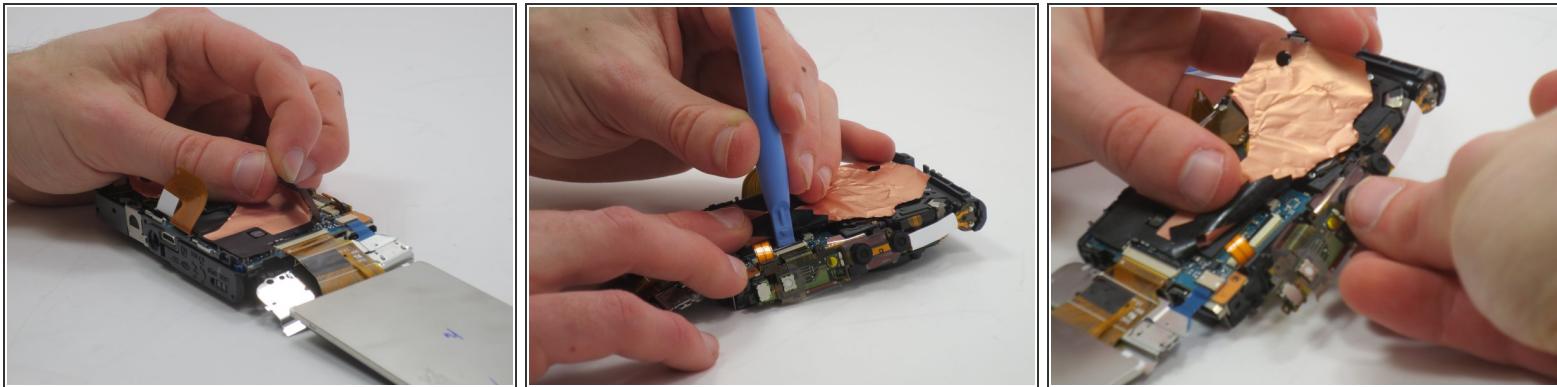

- Peel back the copper cover and black tape from the motherboard to reveal the connection port.
- Using the plastic opening tool, release the black bar on the connection port so that the bar is vertical.
- Pull the tab out.

## Step 8

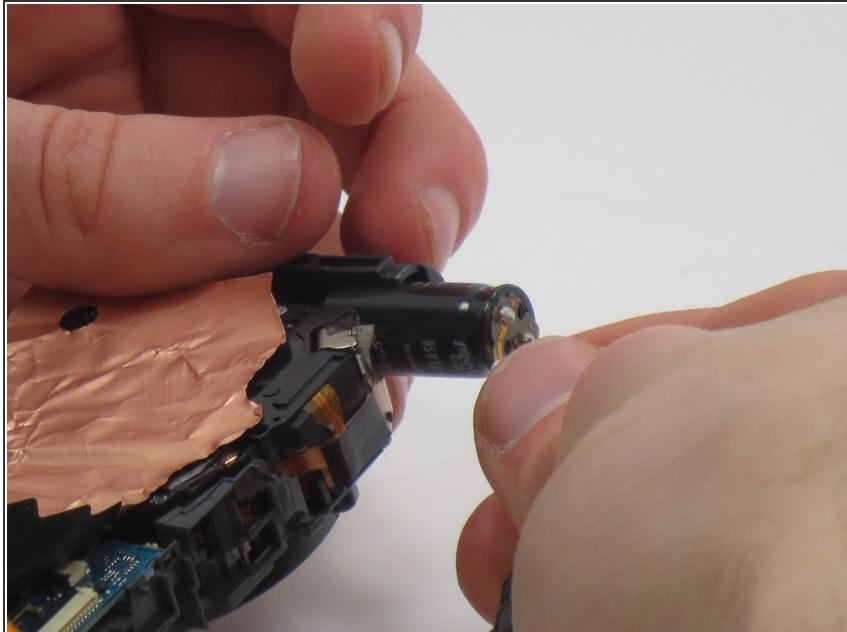

- Pull back on the case, then pull the entire tab out from the case.

## Step 9



- Solder the 4 marked nodes and the remove the flash bulb from the sheet.

***i*** For help on soldering, refer to this [Guide](#).

To reassemble your device, follow these instructions in reverse order.