



Sony Cyber-shot DSC-WX80 Front Cover Replacement

This guide will show you the step by step process to take in order to replace the front cover of your device.

Written By: Matthew Schmid



This document was generated on 2019-09-18 05:50:49 AM (MST).

INTRODUCTION

Make sure you have the necessary tools in order to complete the front cover replacement for the Sony Cyber Shot WX80 and be sure to have a steady hand when dealing with the smaller and more fragile parts.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [iFixit Opening Tools](#) (1)
- [Magnetic Project Mat](#) (1)

PARTS:

- [Replacement Sony Cyber Shot WX80 Front Cover](#) (1)

Step 1 — Front Cover



- Begin by removing all six #00 screws holding the outer chassis together with the Phillips #00 Precision Screwdriver.
- Remember to keep track of all screws as they are small and very easy to lose

Step 2



- Take note of the small free moving flap near the battery port seen in the first of the three photos. Be sure to store the free moving flap in a safe place.
- Pry the front cover off gently. Use a plastic opening tool if available.
- Now that you have removed the front cover you can replace it!

To reassemble your device, follow these instructions in reverse order.