



# Sony Cybershot DSC-T5 Button Replacement

This guide will instruct the reader how to replace the buttons to the right of the main screen for the Sony Cybershot DSC-T5. These buttons include: menu, zoom, and delete among others.

Written By: Jason Vaccaro




 **TOOLS:**

- [Phillips #000 Screwdriver \(1\)](#)

 **PARTS:**


- [Sony Cybershot DSC-T5 button layout \(1\)](#)

## Step 1 — Button

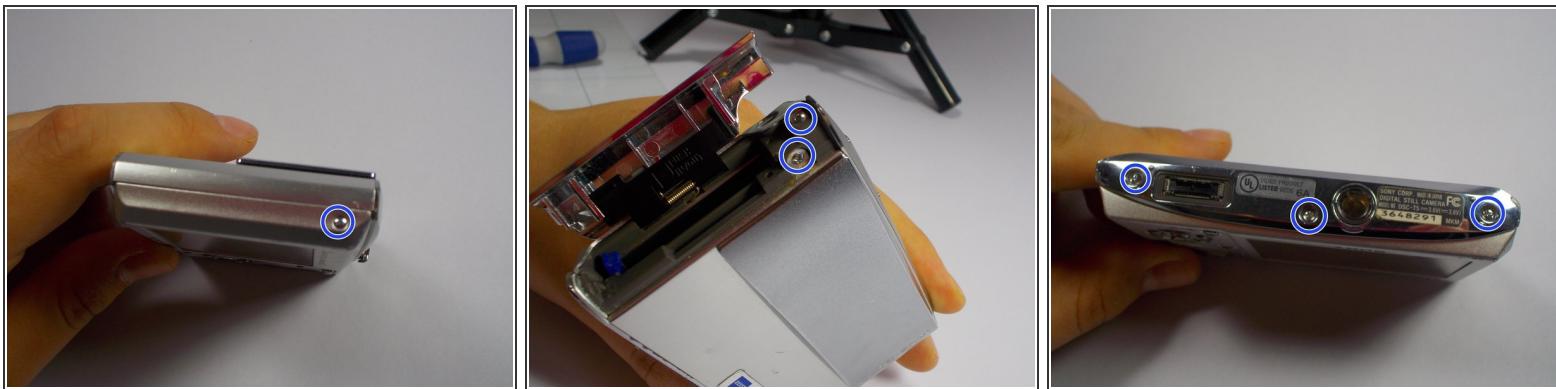


- Remove all 6 exterior screws from the casing.

## Step 2

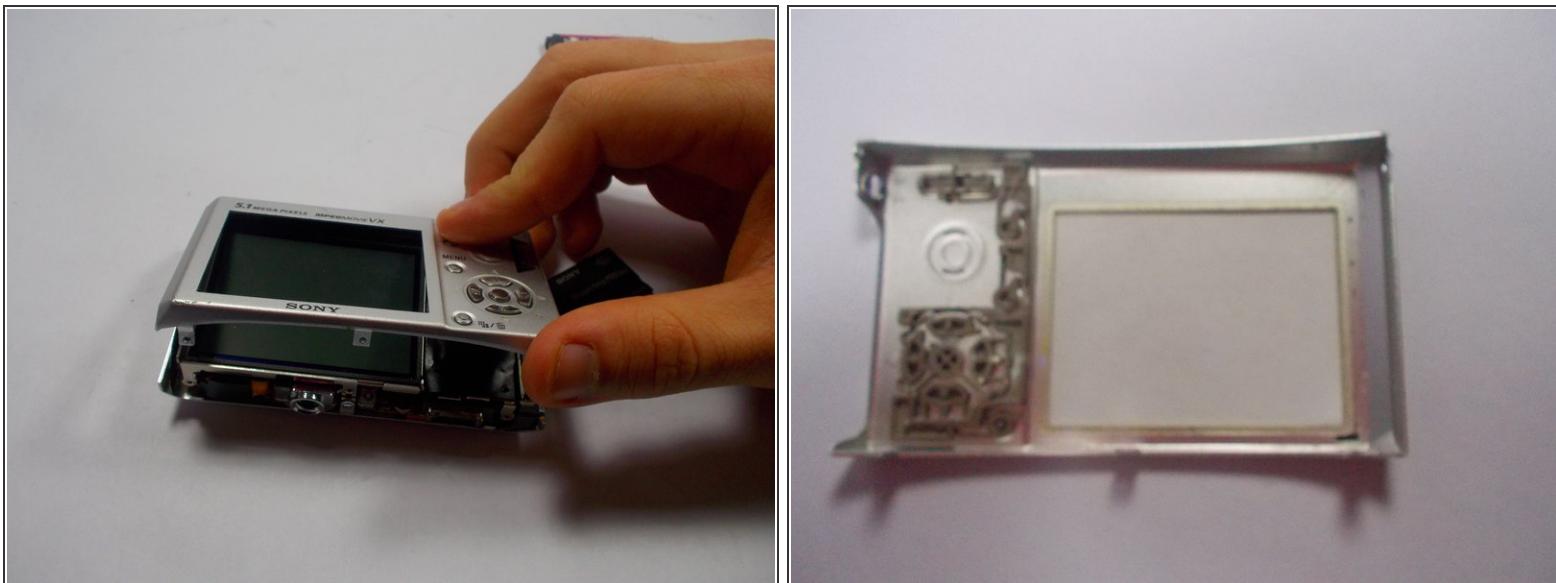

- Remove the front casing by carefully pulling it off from the camera.

## Step 3

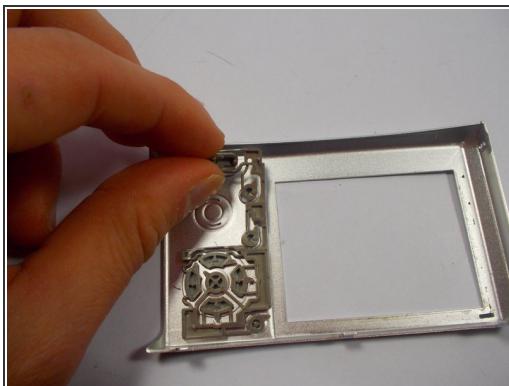

- Start at one end of the button layout and carefully pull the buttons off the casing.
- ⚠ Note that there is some adhesive on the buttons.
- Insert a new button layout and re-assemble device.

To reassemble your device, follow these instructions in reverse order.