



# Sony Cybershot DSC-W80 Battery Replacement

Use this guide to replace a dead or dying battery for Sony Cybershot DSC-W80.

Written By: Saiman Sigdel



## INTRODUCTION


This guide will walk you through the process of changing the battery of Sony Cybershot DSC-W80.

## Step 1 — Battery



- Open the battery cover by sliding it towards you.

## Step 2

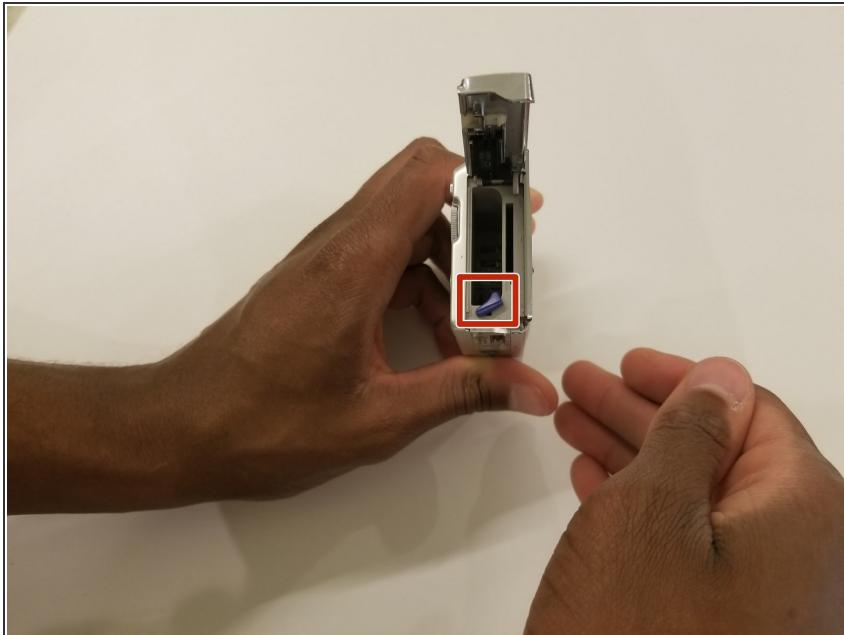

- Push the purple latch with your thumb to unlock the battery.
- Pull the battery out.

To reassemble your device, follow these instructions in reverse order.