


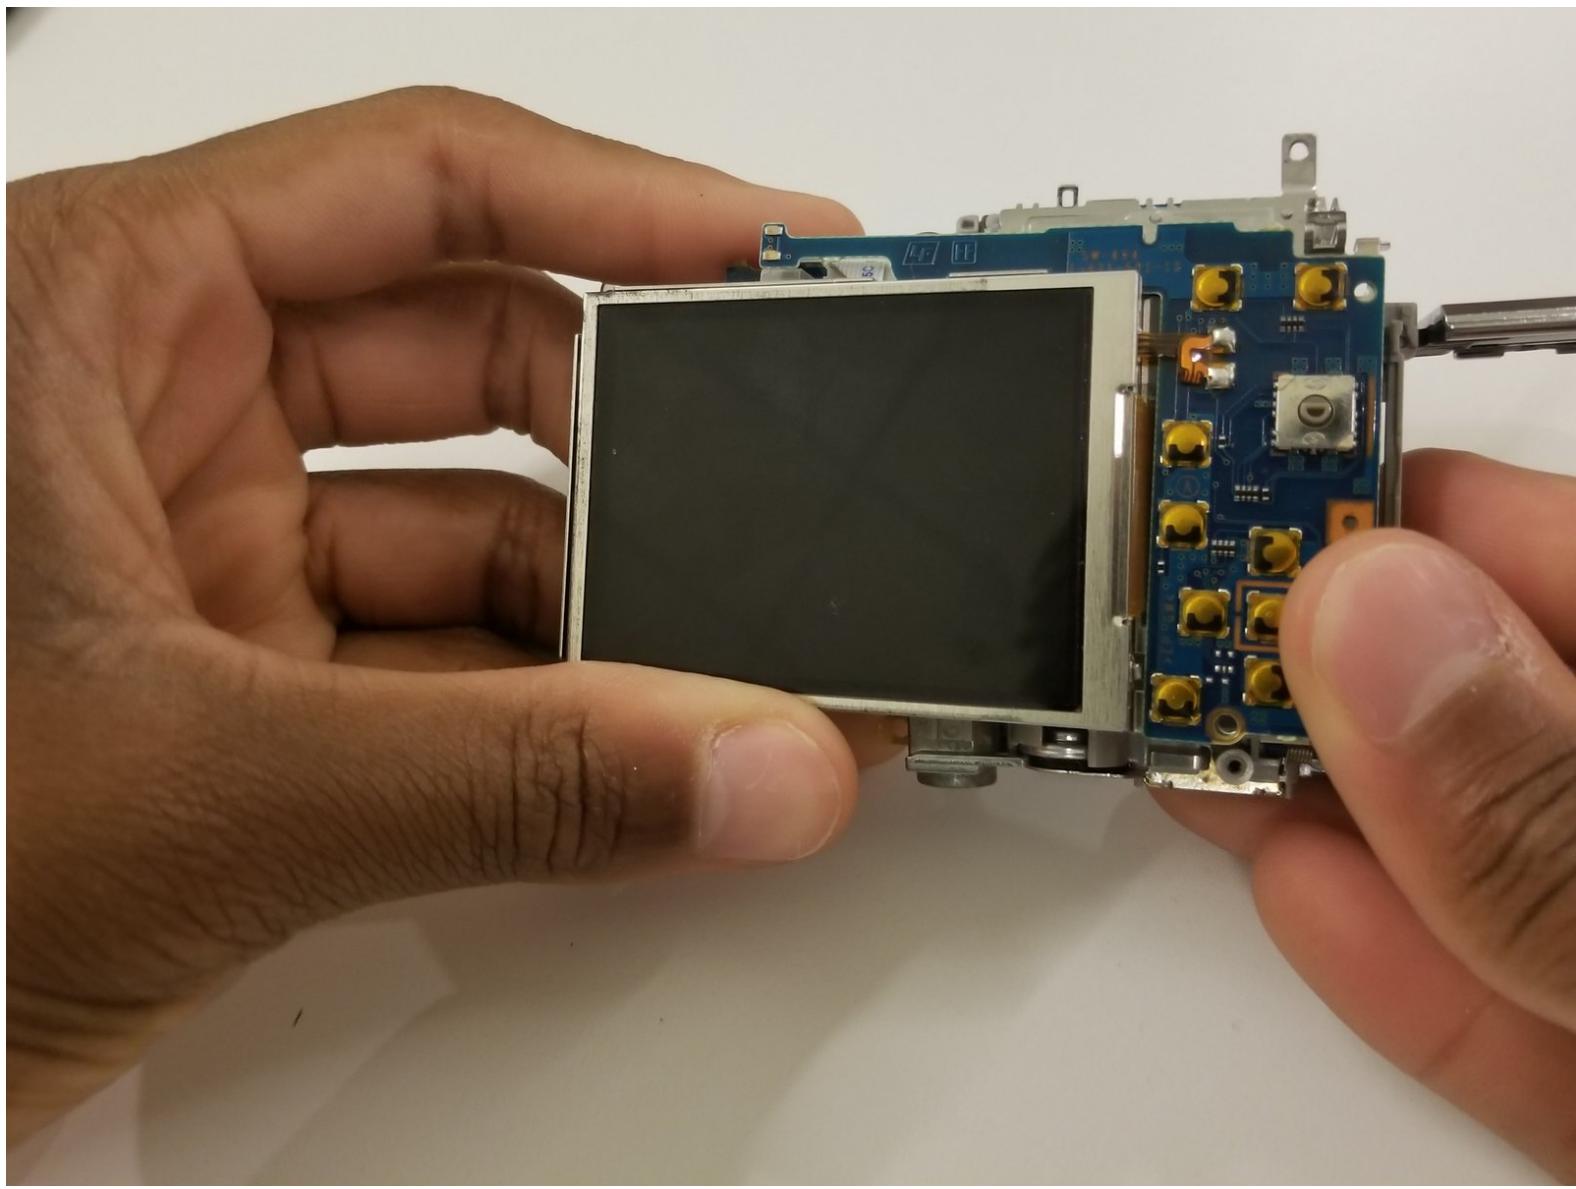

# Sony Cybershot DSC-W80 LCD Screen Replacement

This guide will show you how to remove the LCD Screen from the Sony Cybershot DSC-W80 device.

Written By: Alfred Bee



This document was generated on 2019-09-22 04:11:01 AM (MST).

 **TOOLS:**


- [Phillips #000 Screwdriver \(1\)](#)
- [Spudger \(1\)](#)

## Step 1 — Battery



- Open the battery cover by sliding it towards you.

## Step 2

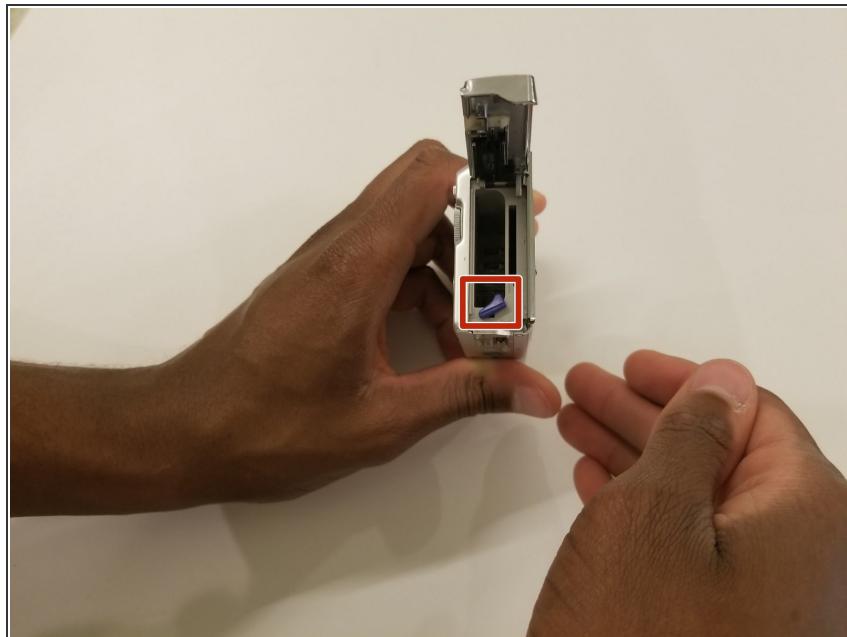

- Push the purple latch with your thumb to unlock the battery.
- Pull the battery out.

## Step 3 — Front/Back Panels



- Remove the eight Phillips #000 screws.

## Step 4





- Remove the single Phillips #000 screw found next to the battery latch.

## Step 5




- Remove the middle panel on the side of the device.
- Slowly pry the camera apart at its seem.

## Step 6 — LCD Screen

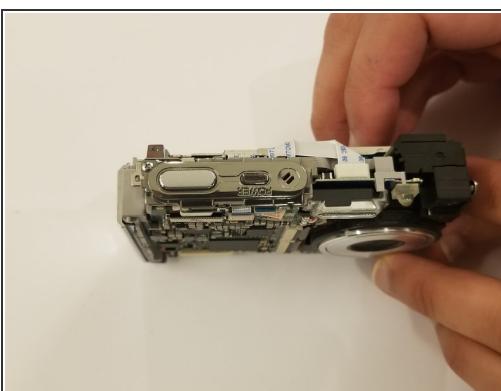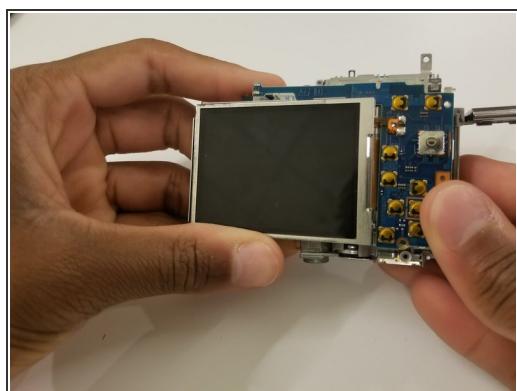


- Lift the power button board up off of the daughterboard.

## Step 7

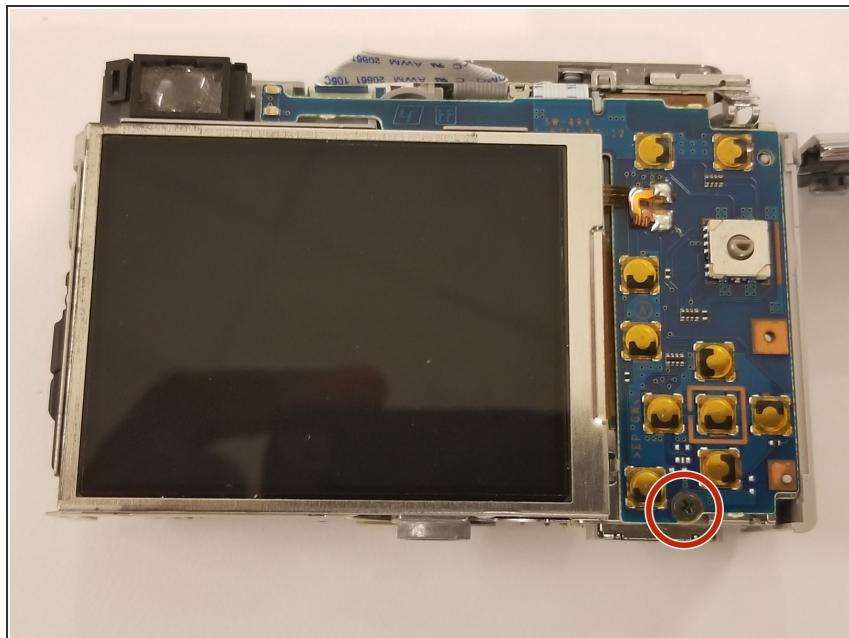

- Remove the single Phillips #000 screw.
- Use your hands to remove the blue daughterboard.

## Step 8

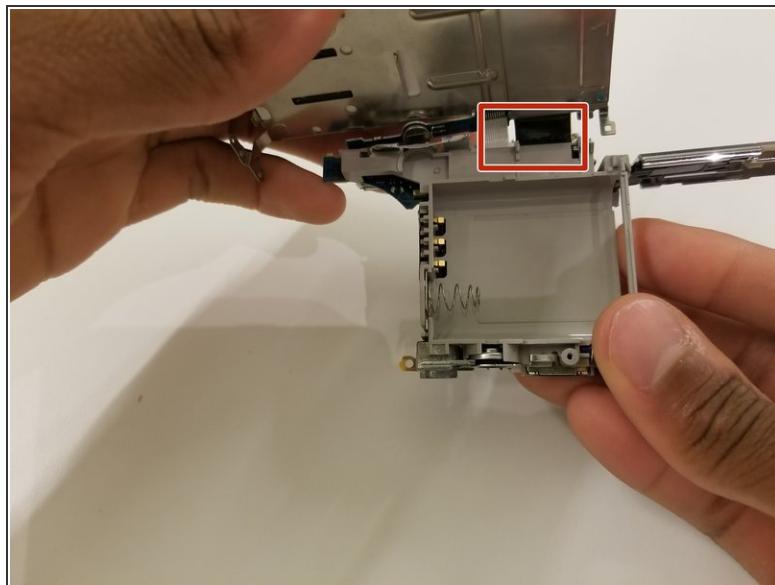

- Flip the camera around.
- Remove the black and orange ribbon cables.

To reassemble your device, follow these instructions in reverse order.