




Sony DCR-DVD 108 Front and Back Lens Replacement

No nonsense way to get the lens out of your camera

Written By: Elijah DeWolf

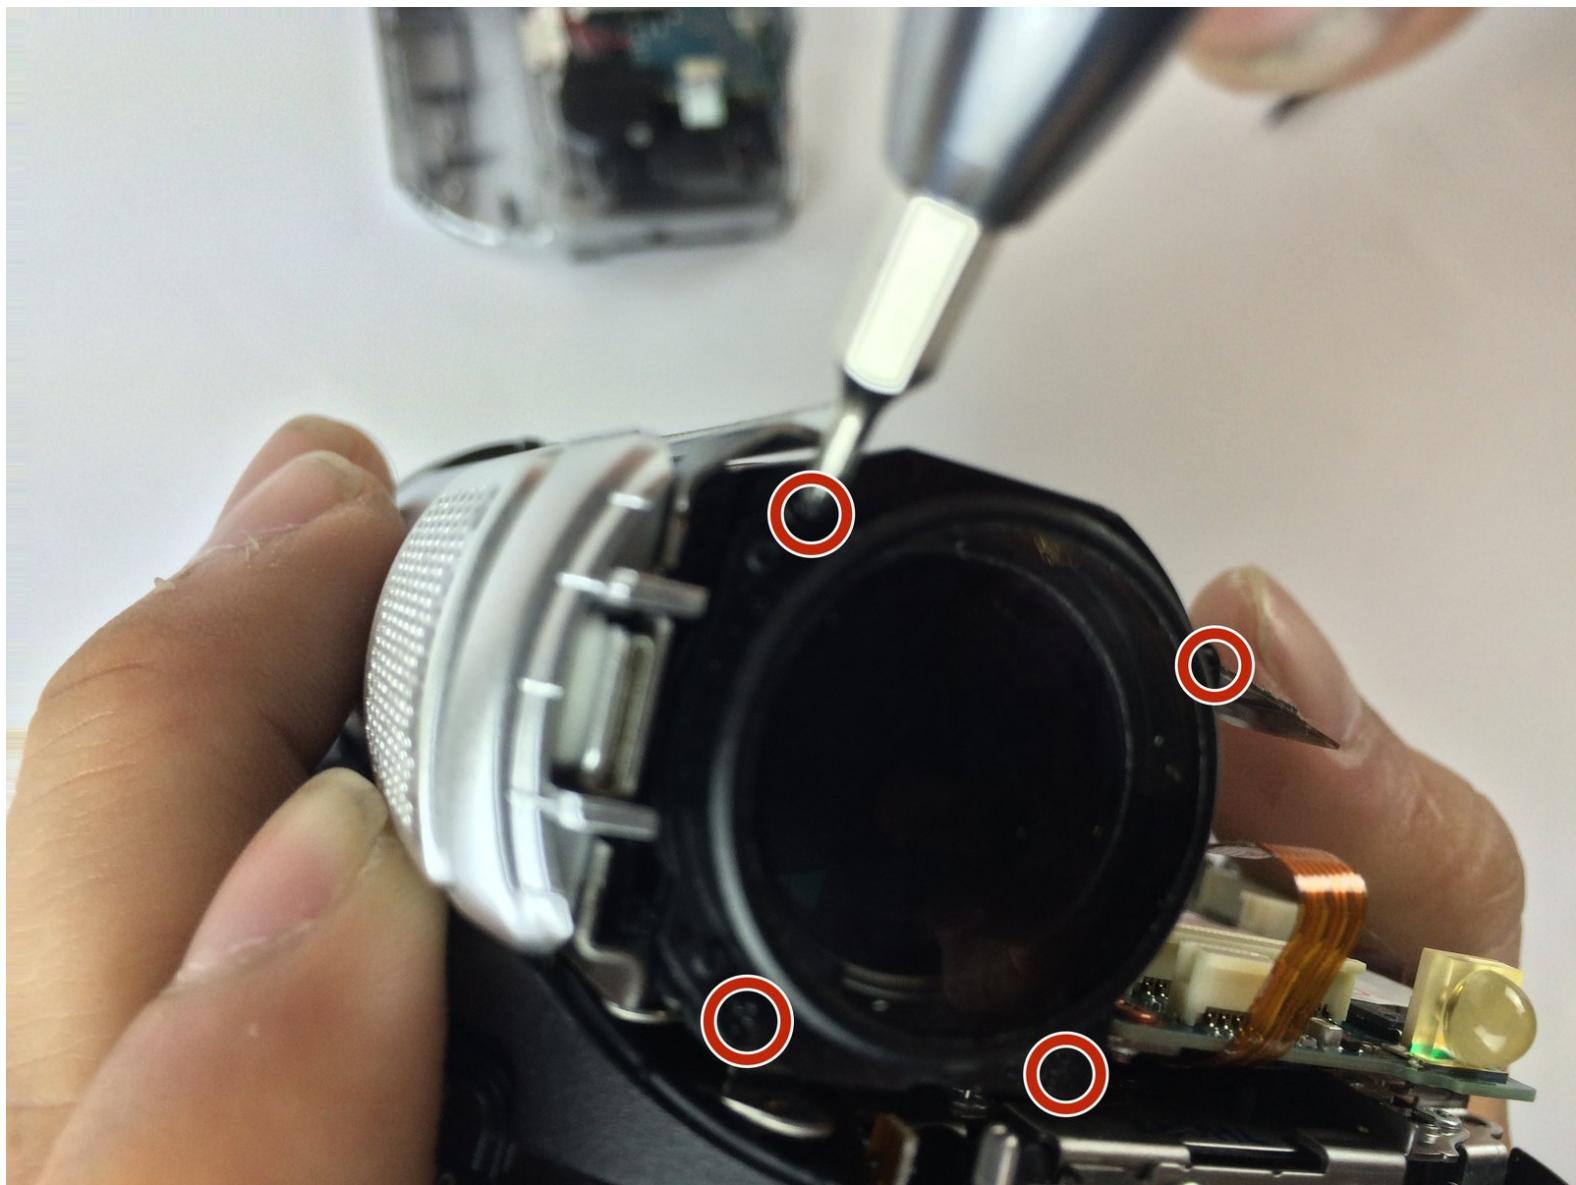


INTRODUCTION

The lens allow for clear and consistent previews for what you are filming. Thus image quality can be compromised if either lens is compromised; maintenance of this component easy yet critical.

TOOLS:

- [Spudger](#) (1)
- [JIS Driver Set](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Sony DCR-DVD 108 Case Disassembly

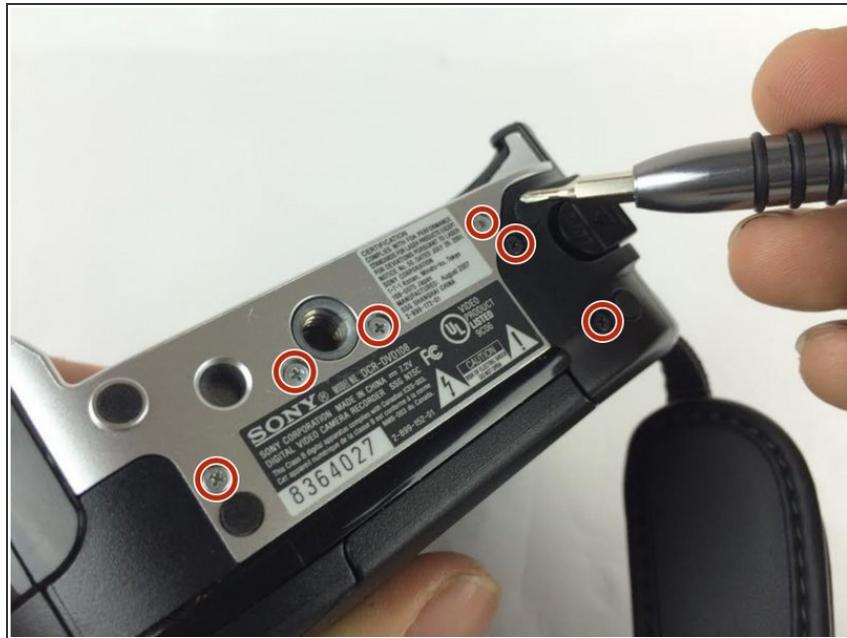

- Remove all the 4.3mm screws on the bottom using a J000 Phillips screwdriver. There should be seven screws (4 silver, 2 black).

Step 2




- Remove the 5mm #0 Phillips screws on the underside of the LCD tuck-a-way.

Step 3




- Remove the 2mm #0 Phillips screw behind the battery.

Step 4

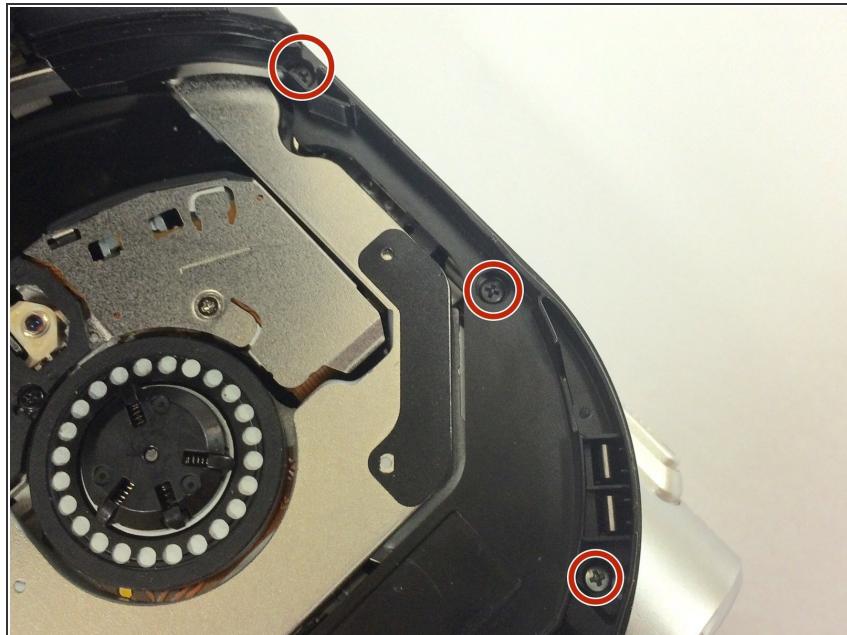


- Open the dvd cover and remove the 3 4.3mm phillips screws. Including ones in the corners that may be hidden.

Step 5

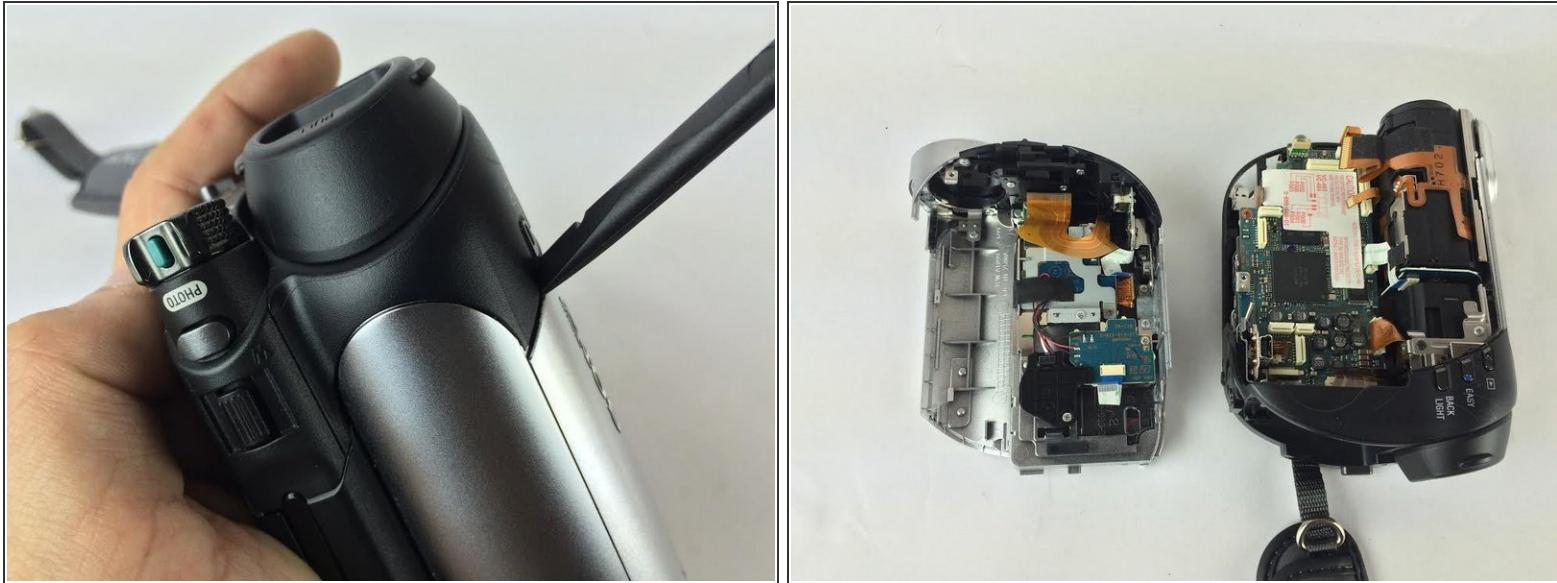

- Once all the screws are removed you can safely pry open the camera case using a spudger.

Step 6 — Front and Back Lens

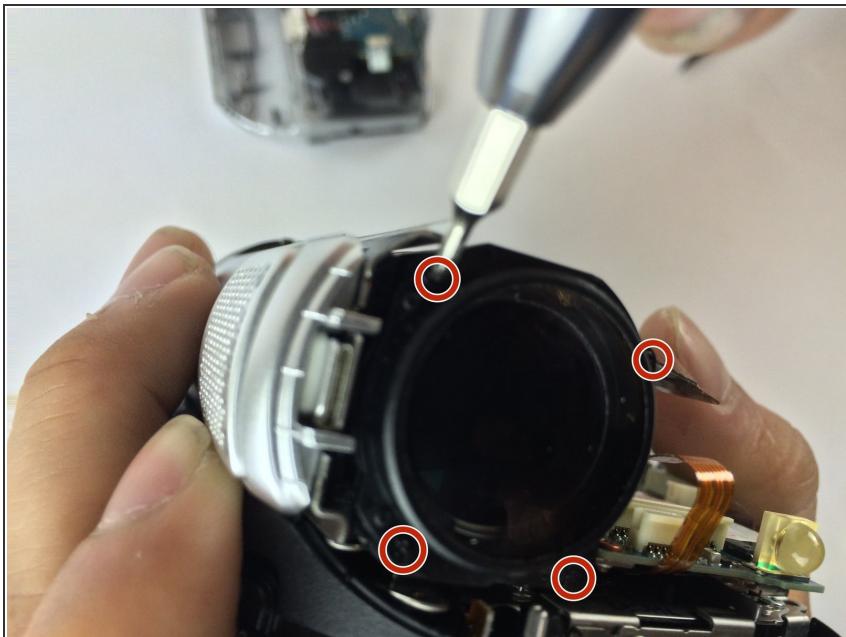

- Take the half of camera containing both lens components and turn front portion towards you.
- Remove the four 4.3mm Phillips #0 screws pictured.

Step 7



- Remove front lens and inspect for "dirt," smudges, or scratches. Use discretion, if lens appears too damaged, replace part.

Step 8



- Gently pull lens housing to expose housing channel.

Step 9



- With the pointed end of a plastic spudger, press latch located on the side of rear lens housing.

Step 10



- Once loosened gently pull and remove lens housing. The lens should now be free to inspect and replace.

In order to reassemble your device, follow these instructions in reverse order.

