



Sony DSC-RX100MA Back Cover Replacement

This guide will show you how to replace the back assembly of the camera.

Written By: KC Egger



INTRODUCTION

Need to clean the inside of the camera? Start by taking off the back cover.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Back Cover



- Remove battery by sliding the tab to open the cover

Step 2



- Using the screwdriver, remove all screws (black 2.5mm) from outermost layer of the assembly.

(i) All screws in the camera can be removed with the PH 0 driver head.

Step 3



- Also using the screwdriver, remove screws (black 2.5mm) underneath articulated LCD screen.
- Remove the marked 1 mm screws with the screwdriver

Step 4



- Using the plastic opening tools, carefully pry off the bottom plate.


⚠ Do not pull too hard as you may break the plastic casing.

Step 5



- Using the same plastic opening tools, separate the screen and back assembly from the front portion of the camera
- Once the back assembly is slightly detached, pull the media covers for the HDMI and Multimedia ports

Step 6

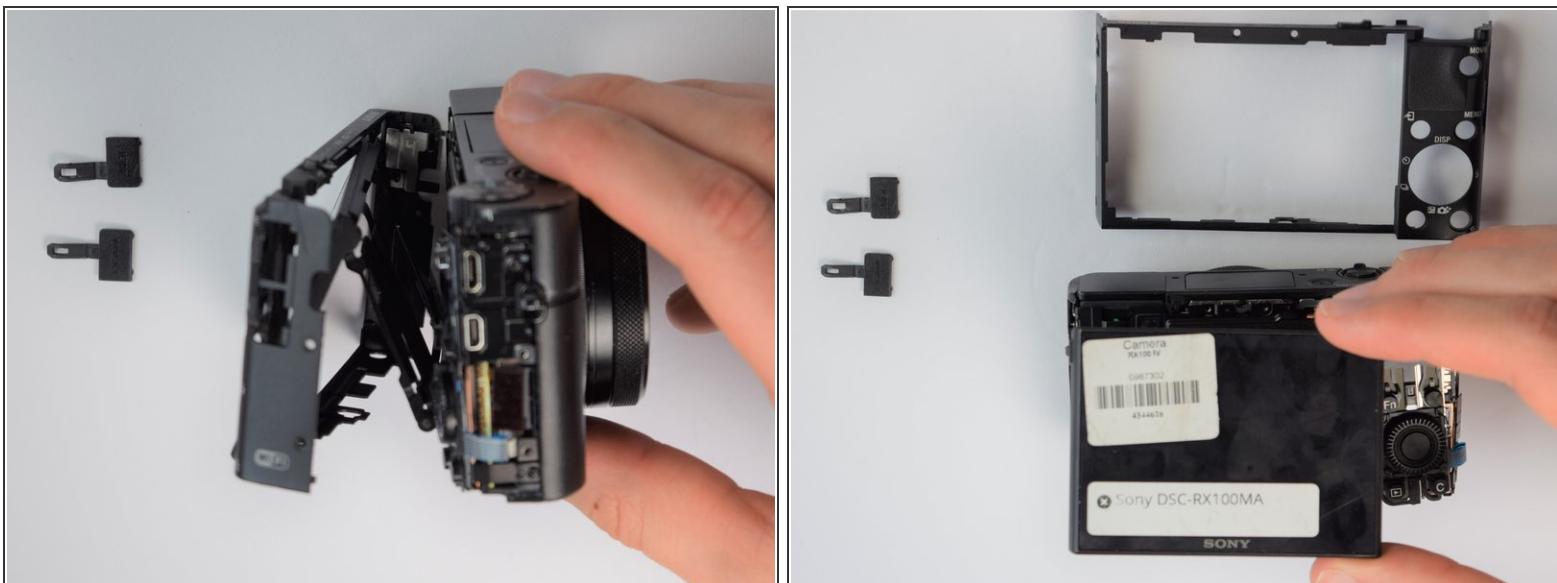

- Remove the back cover

To reassemble your device, follow these instructions in reverse order.