



Sony DSC-RX100MA Screen Replacement

This guide will show you how to replace the LCD screen of the camera.

Written By: KC Egger



INTRODUCTION

If your camera's screen isn't working properly, you may need to replace it. Follow this guide to do so!

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Back Cover



- Remove battery by sliding the tab to open the cover

Step 2



- Using the screwdriver, remove all screws (black 2.5mm) from outermost layer of the assembly.

(i) All screws in the camera can be removed with the PH 0 driver head.

Step 3



- Also using the screwdriver, remove screws (black 2.5mm) underneath articulated LCD screen.
- Remove the marked 1 mm screws with the screwdriver

Step 4



- Using the plastic opening tools, carefully pry off the bottom plate.


⚠ Do not pull too hard as you may break the plastic casing.

Step 5




- Using the same plastic opening tools, separate the screen and back assembly from the front portion of the camera
- Once the back assembly is slightly detached, pull the media covers for the HDMI and Multimedia ports

Step 6

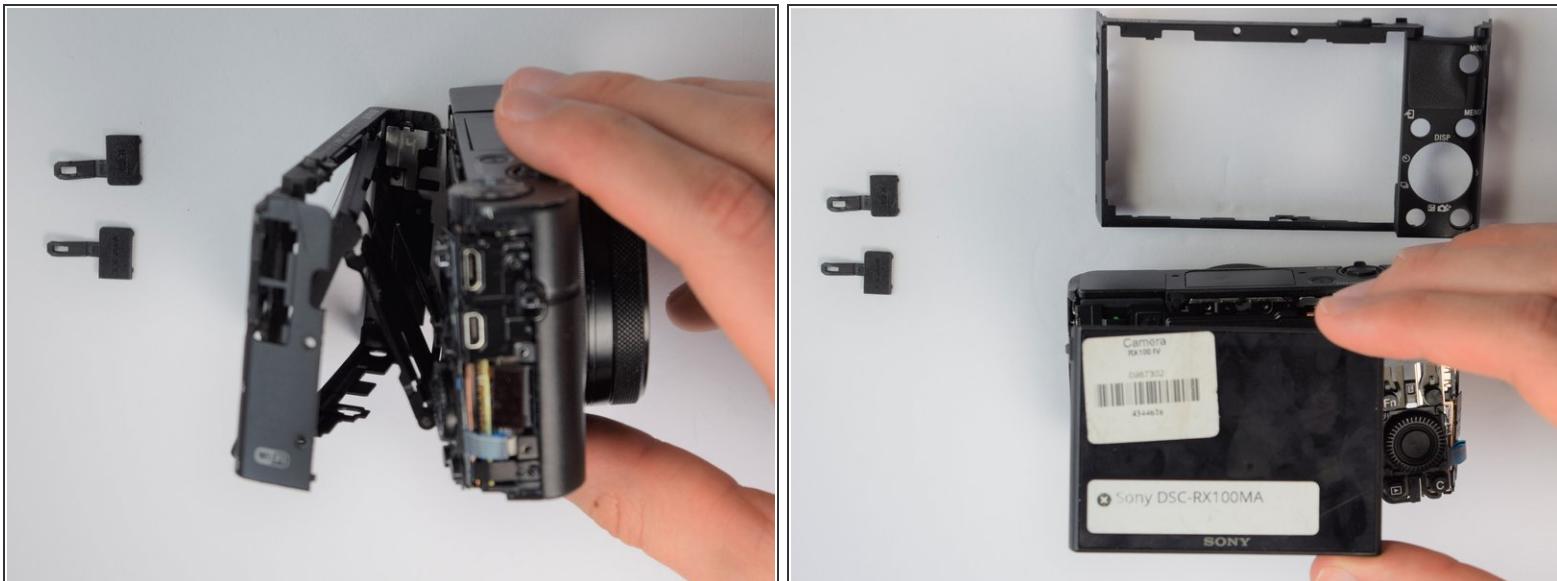


- Remove the back cover

Step 7 — Screen

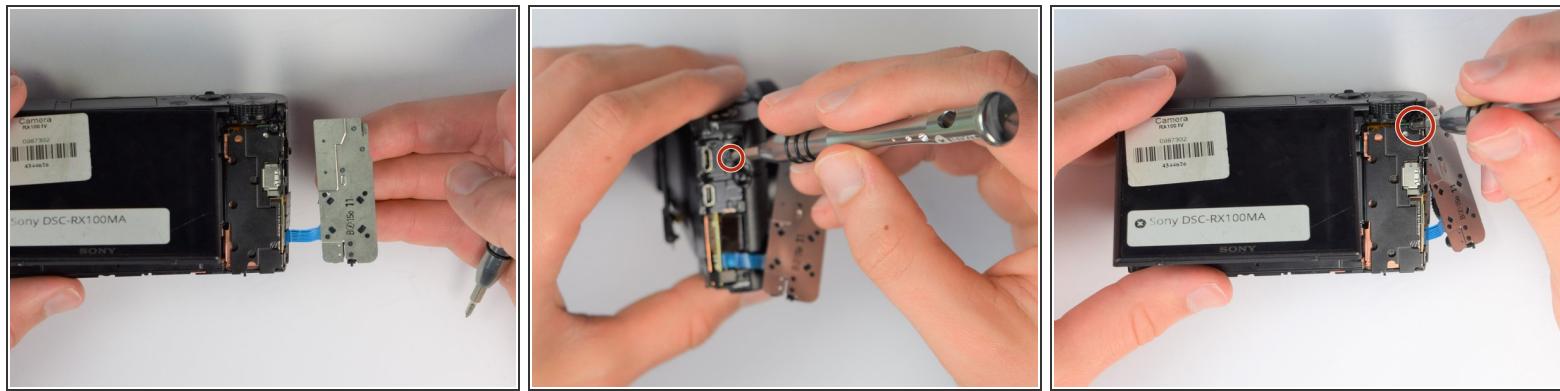

- Move side panel to get access to screws
- Remove two screws (black 2.5mm) with PH #0 screwdriver

Step 8

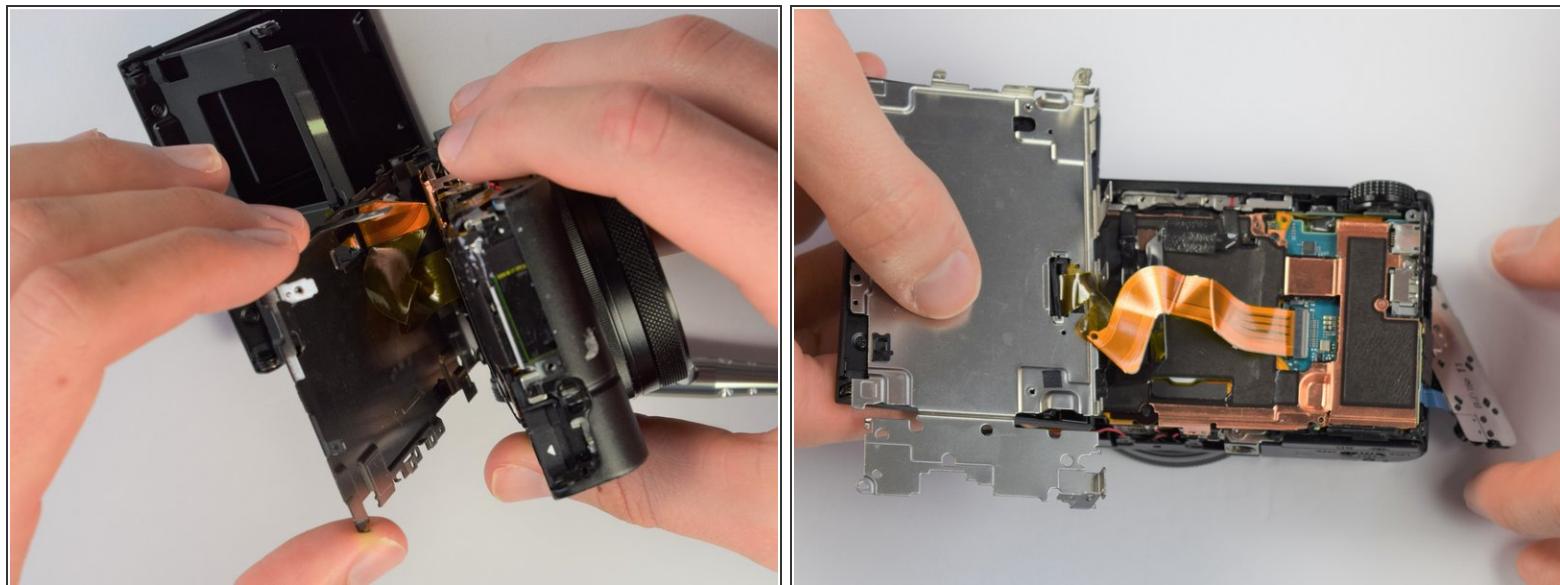

- Remove back panel assembly while still keeping ribbon cable attached

⚠ Be very gentle and care not to tear the gold ribbon cable. This will be a common theme throughout these replacement guides.

Step 9



- Carefully unplug ribbon connector to fully detach LCD screen assembly from camera

To reassemble your device, follow these instructions in reverse order.