



# Sony DVP-FX730 Battery Replacement

This guide will show you how to remove the battery of the device.

Written By: Andrew Ward



## INTRODUCTION

If there is a problem with the device's supply of power, the battery may need to be replaced.

### TOOLS:

- [Spudger \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)

## Step 1 — Cover



- Remove the five exposed 7.9 mm phillips screws with the spudger.
- Punch through the warranty sticker with the spudger and remove the screw underneath.

## Step 2



- Remove the rubber feet with the screwdriver.
- Remove the screws that the rubber feet were covering.


## Step 3



- Lift up the cover gently.

**⚠** The tray is still connected to the base with wires.

## Step 4

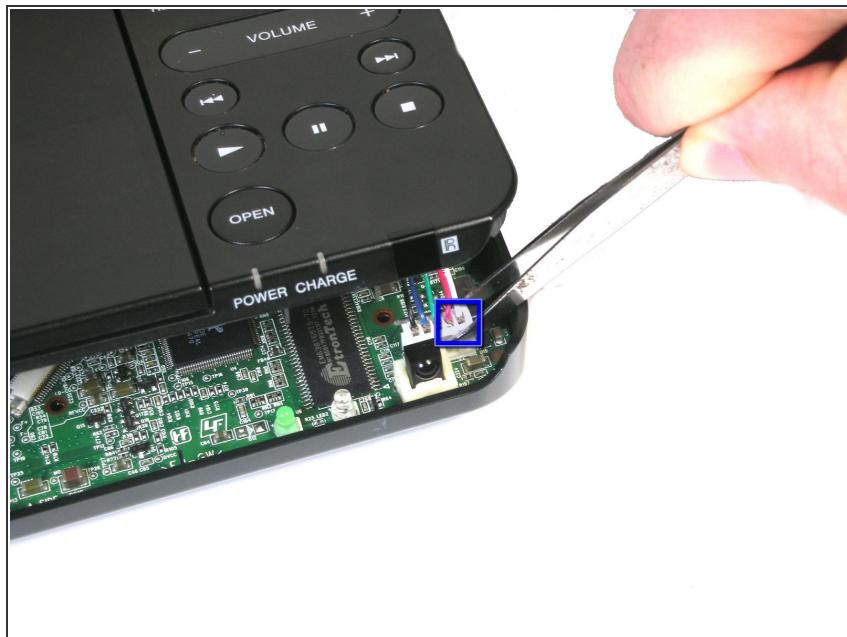



- Remove the wires with tweezers by gently pulling on the base they are attached to.

## Step 5 — Battery




- Identify the battery with the 2 blue stickers.

## Step 6

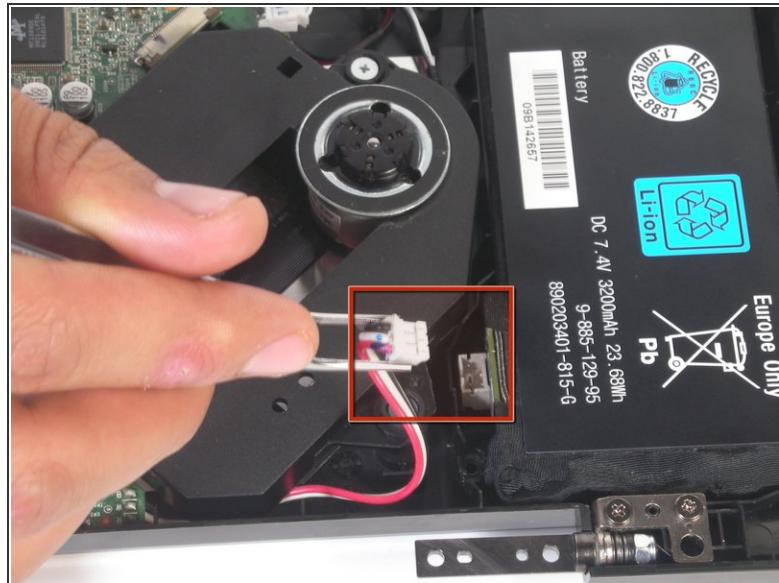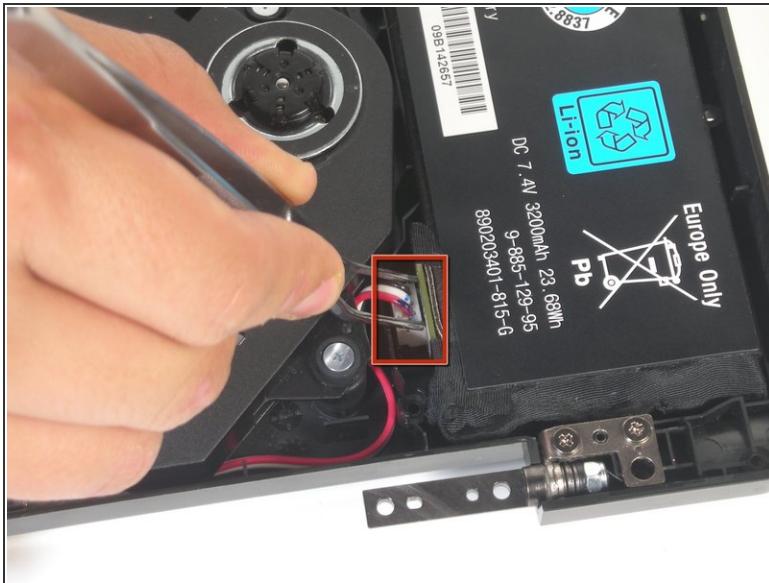

- Remove the white and red wires from the battery by pulling on the base with tweezers.

## Step 7

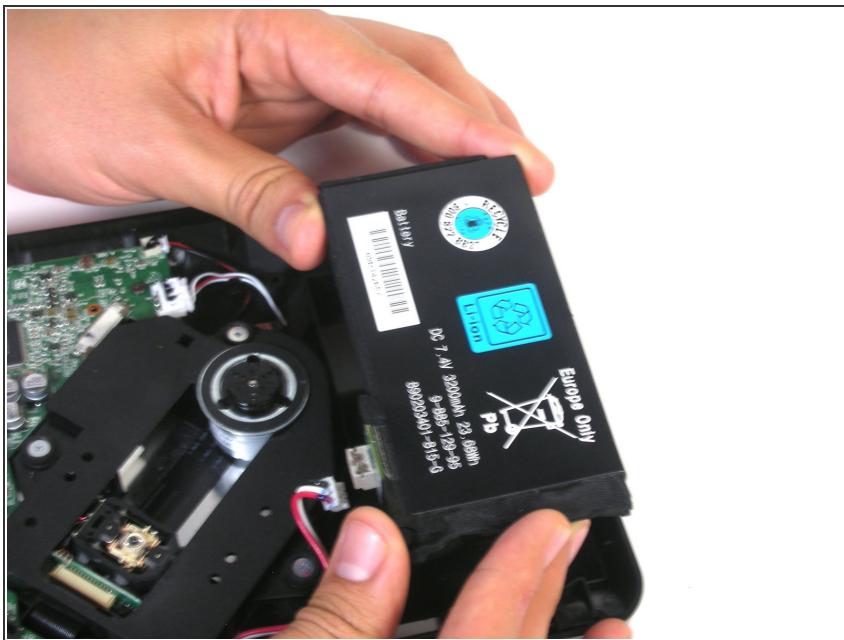

- Remove the battery from the case.
- It will still be held down at the bottom with a piece of tape, so you may need to pull up with force.

To reassemble your device, follow these instructions in reverse order.