



Sony DVP-FX730 Cover Replacement

Removing the cover which holds the disc lid and buttons.

Written By: Rogelio Garcia



INTRODUCTION

In order to access the internals of the device, the cover must be removed. If there is a problem with one of the components on the cover, it may need to be replaced.

TOOLS:

- Spudger (1)
- Phillips #0 Screwdriver (1)

Step 1 — Cover



- Remove the five exposed 7.9 mm phillips screws with the spudger.
- Punch through the warranty sticker with the spudger and remove the screw underneath.

Step 2



- Remove the rubber feet with the screwdriver.
- Remove the screws that the rubber feet were covering.

Step 3



- Lift up the cover gently.

⚠ The tray is still connected to the base with wires.

Step 4



- Remove the wires with tweezers by gently pulling on the base they are attached to.

To reassemble your device, follow these instructions in reverse order.