


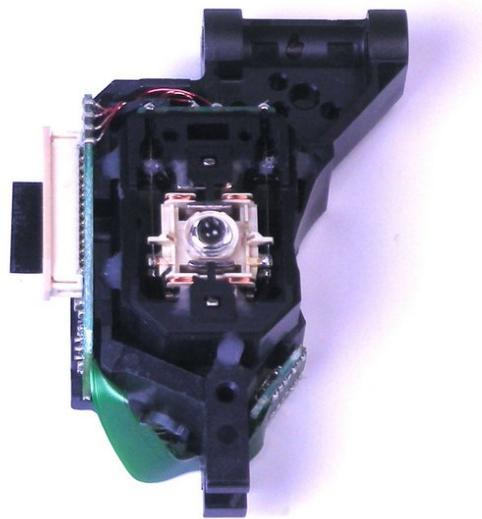

Sony DVP-FX730 Laser Replacement

This guide shows how to detach the laser from the device.

Written By: Oliver Woolsoncroft



INTRODUCTION

If the device is having trouble reading disks, the laser may need to be replaced.

TOOLS:

- [Spudger](#) (1)
- [T6 Torx Screwdriver](#) (1)
- [Tweezers](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Cover



- Remove the five exposed 7.9 mm Phillips screws with the spudger.
- Punch through the warranty sticker with the spudger and remove the screw underneath.

Step 2



- Remove the rubber feet with the screwdriver.
- Remove the screws that the rubber feet were covering.


Step 3



- Lift up the cover gently.



⚠ The tray is still connected to the base with wires.

Step 4

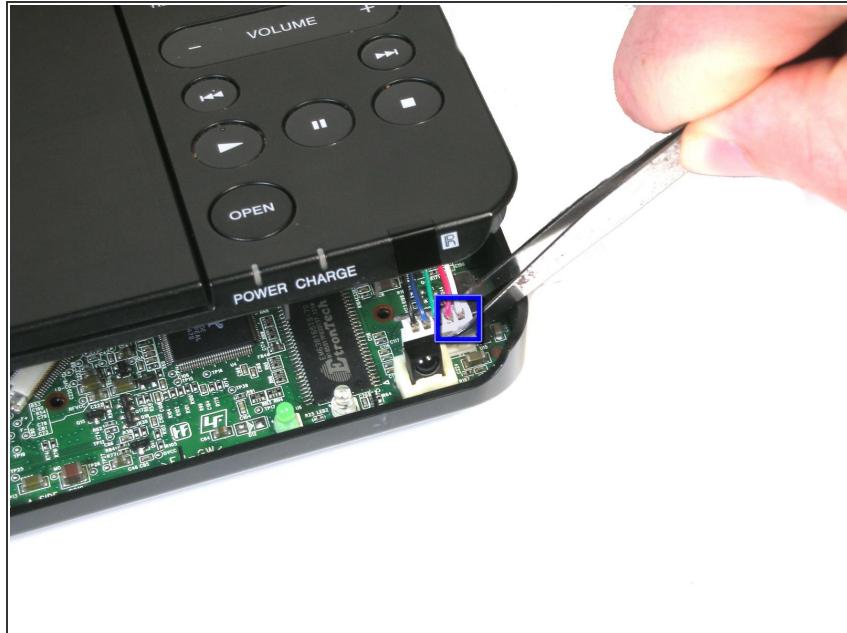

- Remove the wires with tweezers by gently pulling on the base they are attached to.

Step 5 — Laser

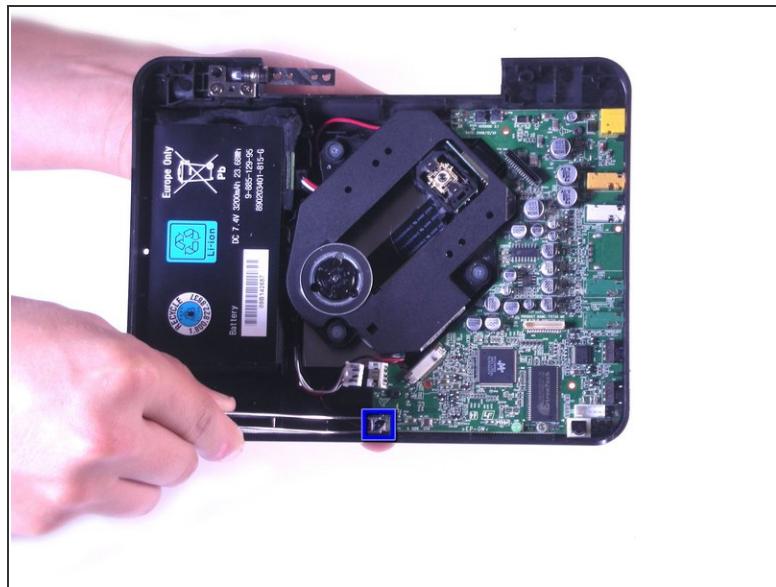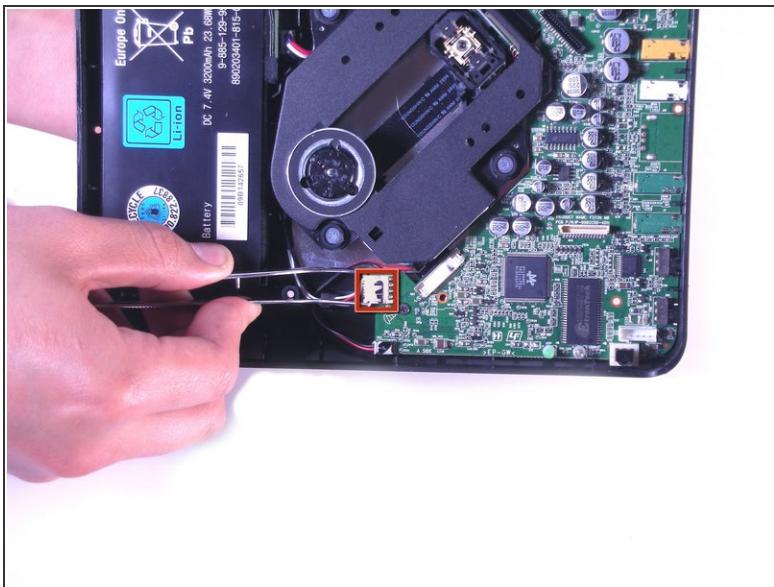

- Remove the large connector.
- Remove the small connector.

Step 6



- Remove Philips screws with #0 Philips Screwdriver.



Step 7



- Lift up the black piece connected to the wires.


⚠ Lift gently because ribbon cable is attached to bottom.

Step 8

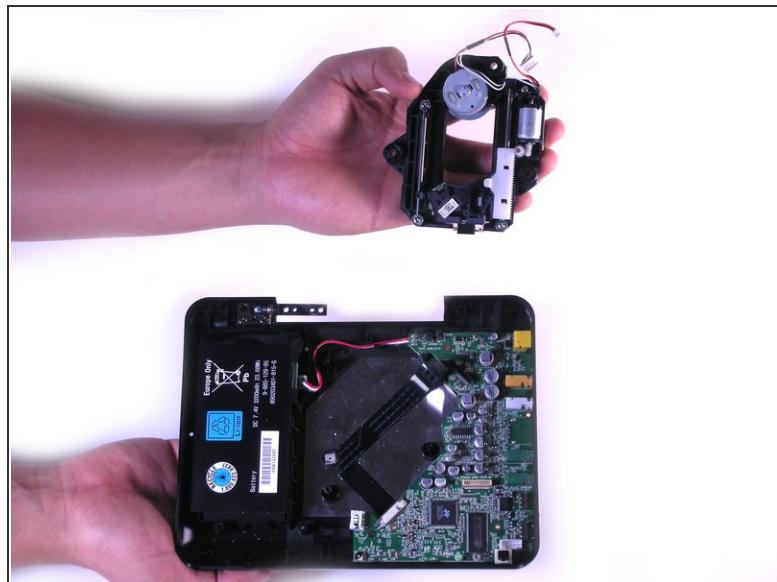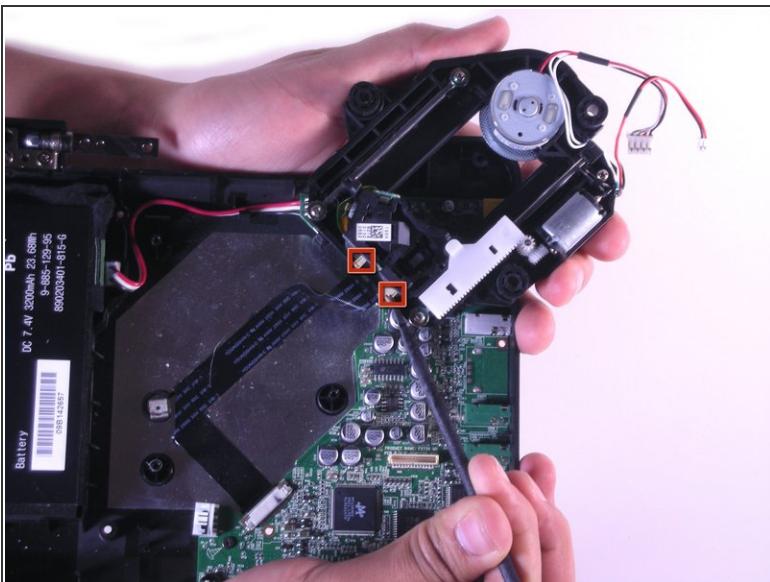


- Unlock the lock clip

Step 9

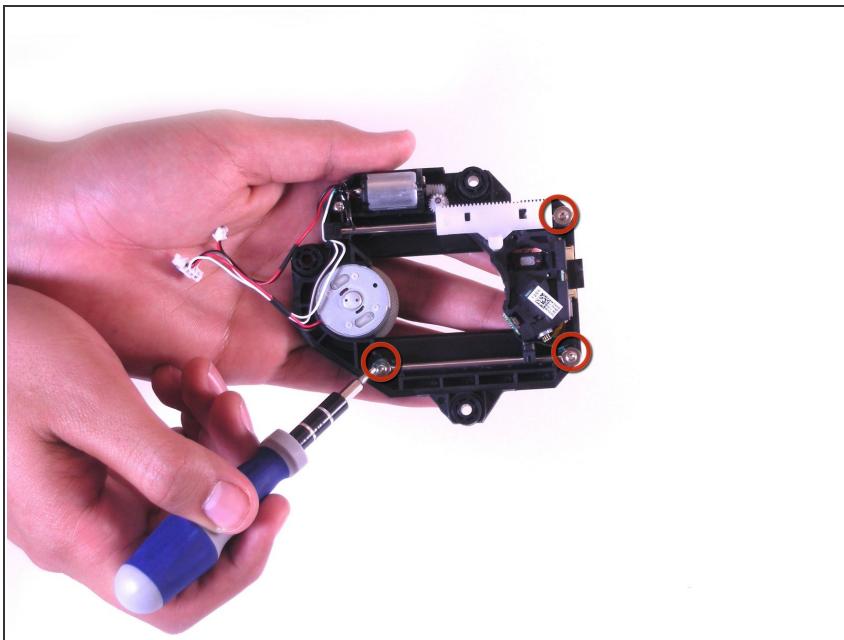

- Remove the T6 screws with the T6 screwdriver.



Step 10

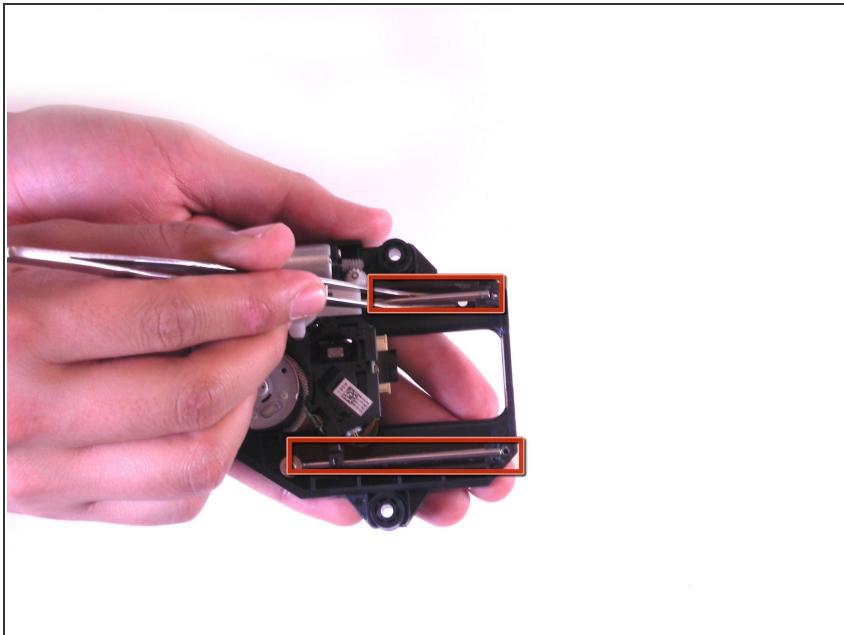

- Gently pull rods out with tweezers.

i Be sure the laser is out of the way so that the rods can be removed.

Step 11

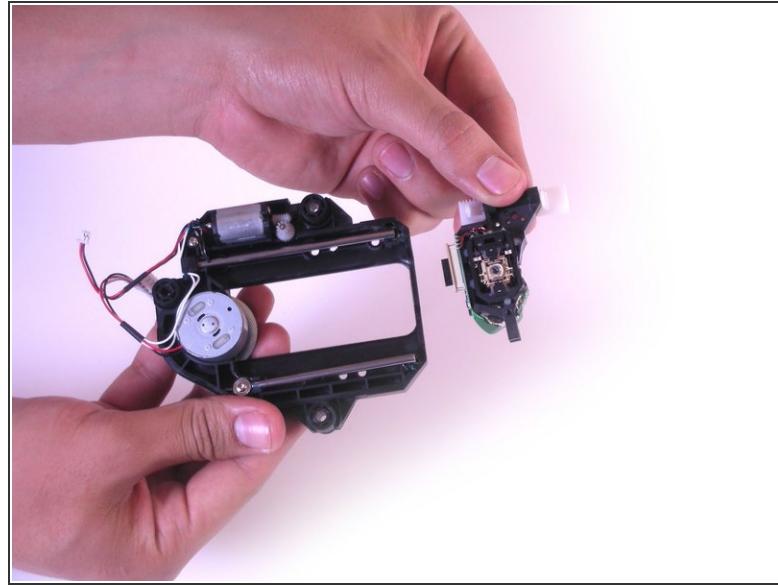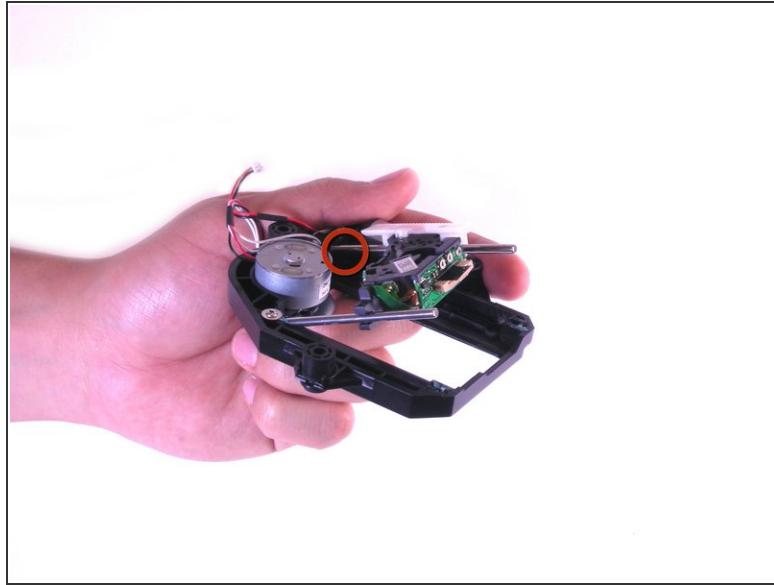

- Be careful when removing the rods because a fragile metal piece may break.
- Pull laser off of the rods.

Step 12



- Insert wisdom here.

To reassemble your device, follow these instructions in reverse order.