



# Sony DVP-FX730 Monitor Replacement

This guide shows how to detach the screen from the main device.

Written By: Andrew Ward



## INTRODUCTION

If the monitor or screen is broken, the monitor needs to be detached from the device.

### TOOLS:

- **Tweezers** (1)
- **Spudger** (1)
- **Phillips #0 Screwdriver** (1)

## Step 1 — Cover



- Remove the five exposed 7.9 mm phillips screws with the spudger.
- Punch through the warranty sticker with the spudger and remove the screw underneath.

## Step 2



- Remove the rubber feet with the screwdriver.
- Remove the screws that the rubber feet were covering.

## Step 3



- Lift up the cover gently.


**⚠** The tray is still connected to the base with wires.

## Step 4



- Remove the wires with tweezers by gently pulling on the base they are attached to.

## Step 5 — Monitor

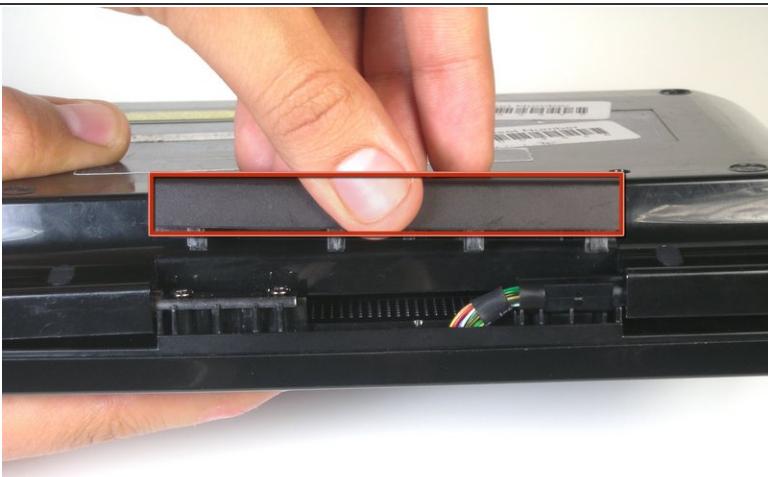

- Use your hand to remove the small back cover.

## Step 6



- Remove the two 0.473" pan head screws.



## Step 7



- The screen should now detach from the main device.



**⚠** The screen will still be connected by the wires.

## Step 8

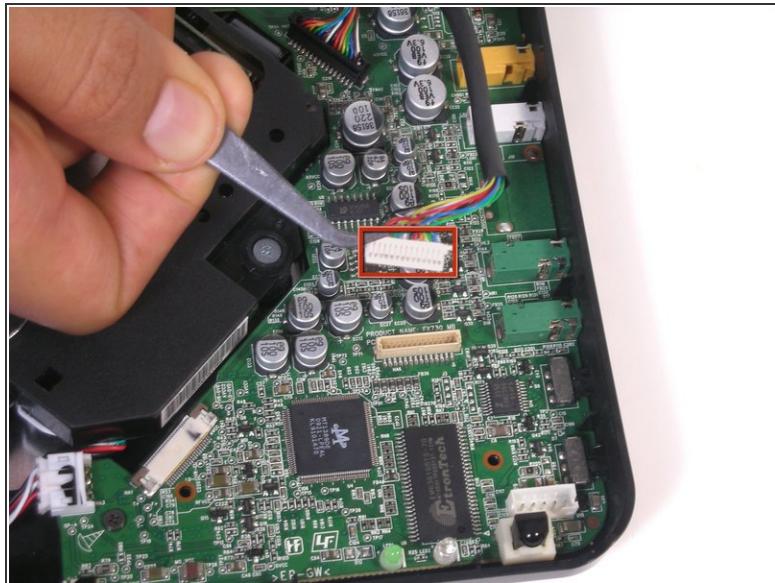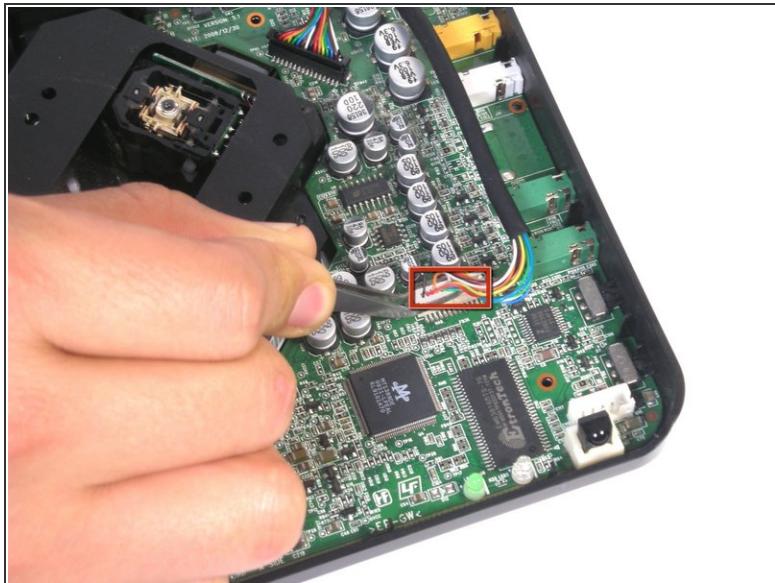

- Remove the wires attached to the white base by using the tweezers.

## Step 9

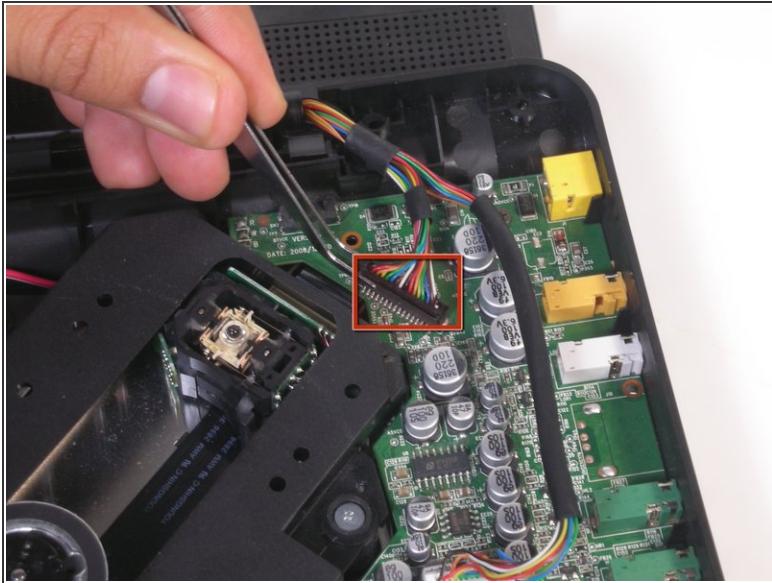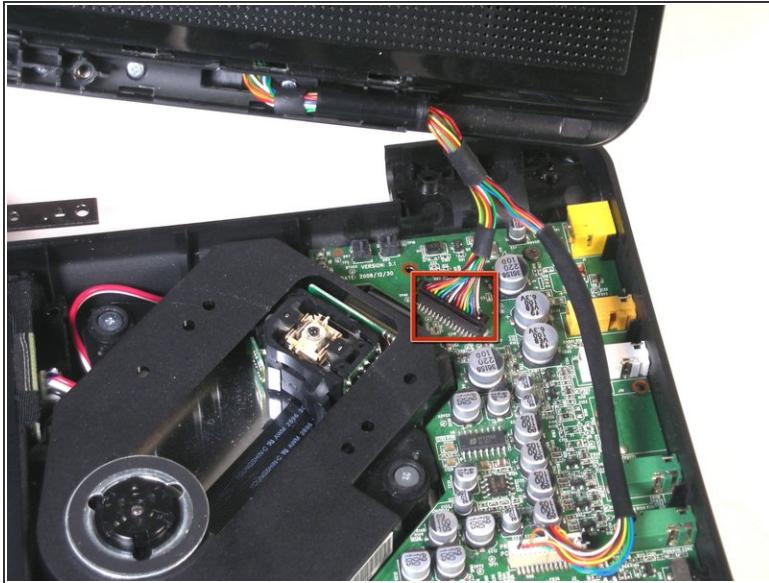

- Do the same with the wires attached to the black base.

## Step 10



- The screen should now be completely separated from the main device.

To reassemble your device, follow these instructions in reverse order.