



Sony DVP-FX730 Screen Replacement

This guide shows how to remove the screen from the Sony DVP-FX730.

Written By: Oliver Woolsoncroft




INTRODUCTION

If the device is on but nothing shows up on the screen, the screen may need to be replaced.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Monitor

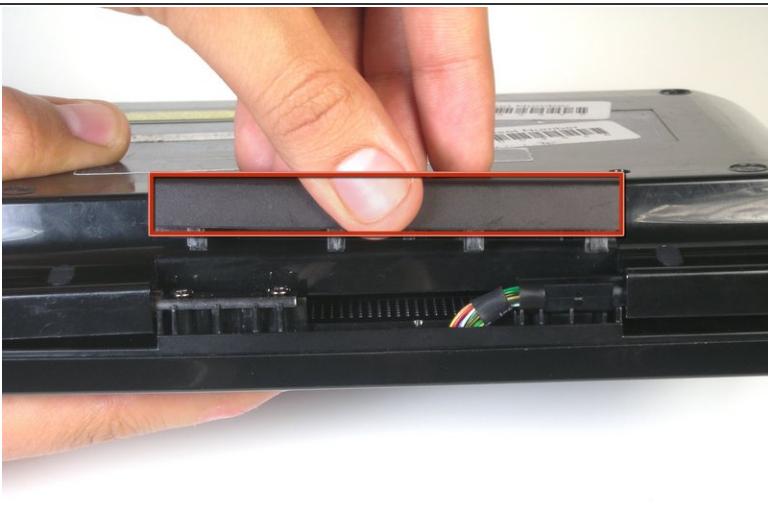

- Use your hand to remove the small back cover.

Step 2



- Remove the two 0.473" pan head screws.



Step 3



- The screen should now detach from the main device.



⚠ The screen will still be connected by the wires.

Step 4

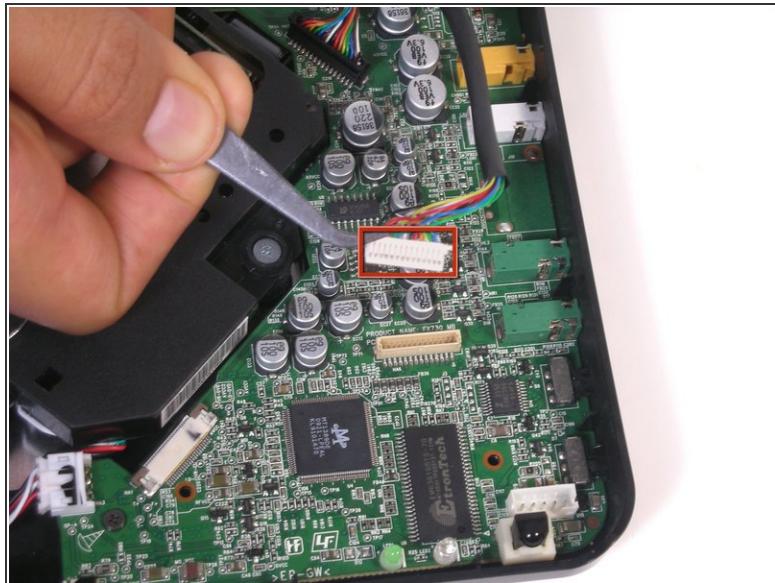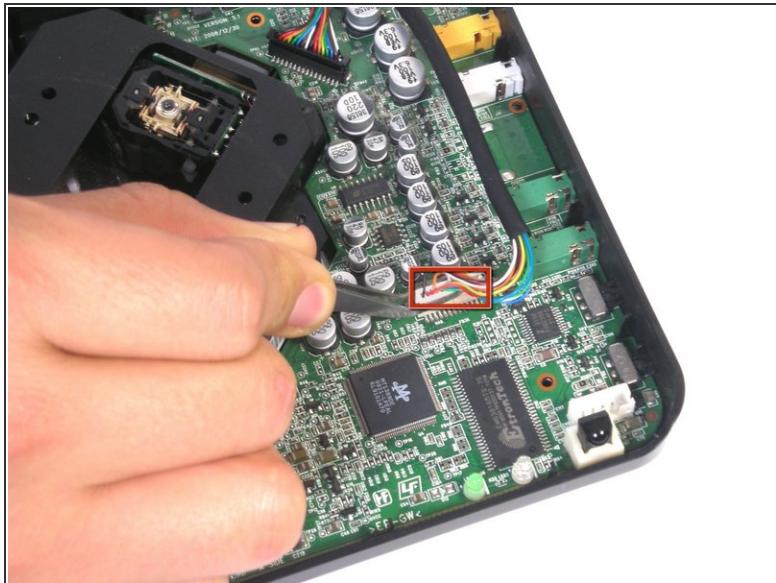

- Remove the wires attached to the white base by using the tweezers.

Step 5

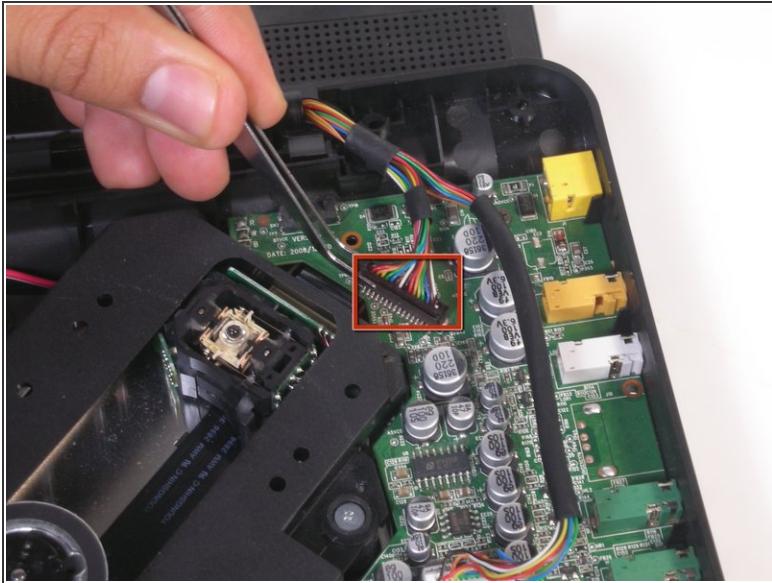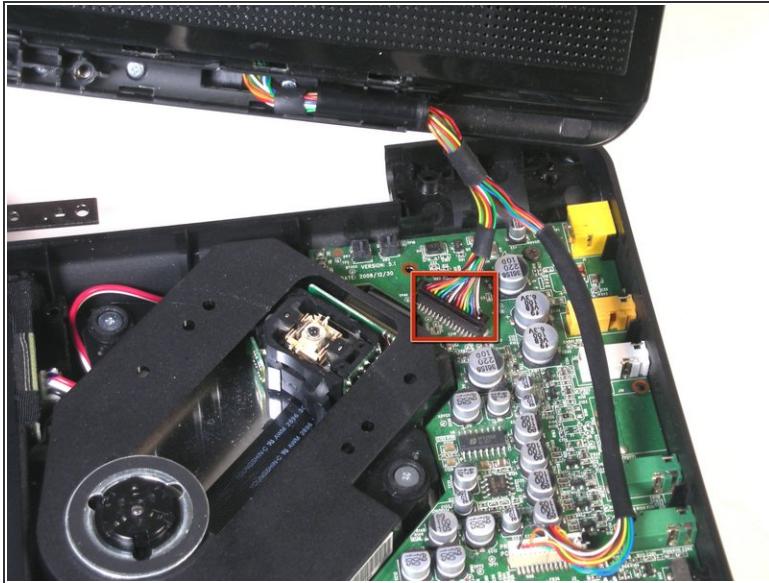

- Do the same with the wires attached to the black base.

Step 6



- The screen should now be completely separated from the main device.

Step 7 — Screen



- Remove the four rubber feet and the screws beneath.
- Remove the two exposed screws on the left side.
- Pull back the cables until the screw is visible.

Step 8




- Using the spudger, separate the top and bottom covers.

Step 9



- Identify the gray back of the screen.

Step 10

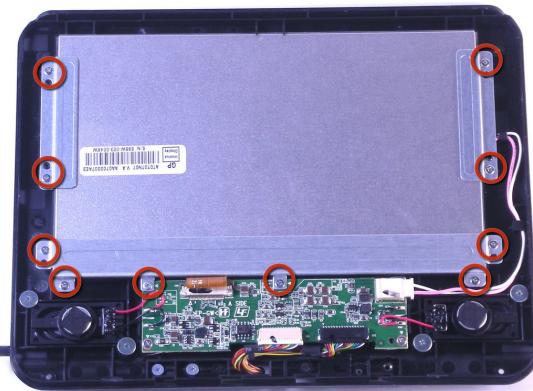



- Remove the screws.

Step 11




- Remove the metal plates.

Step 12

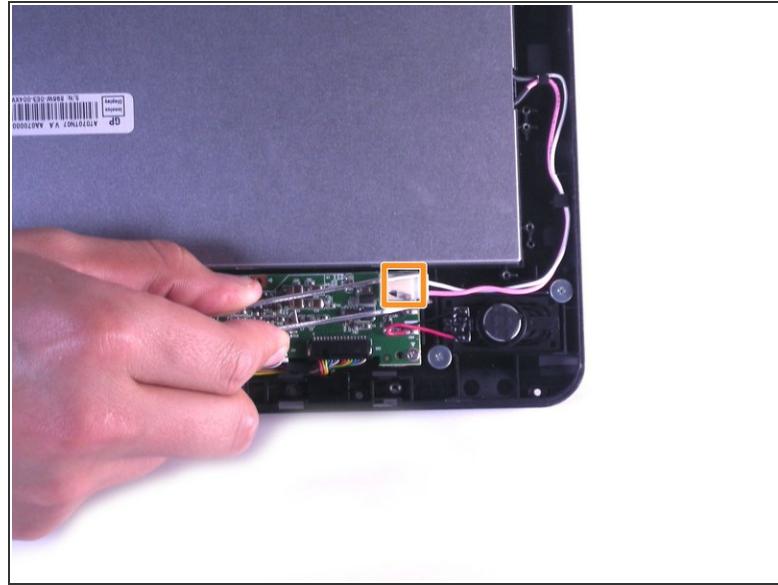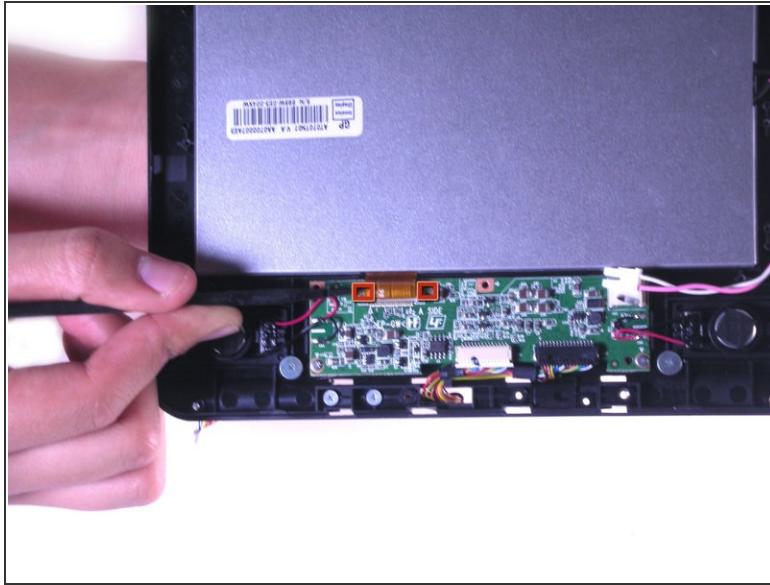

- Using spudger, push the lock clips to unlock the ribbon cable.
- Using tweezers, pull the connector loose.

Step 13

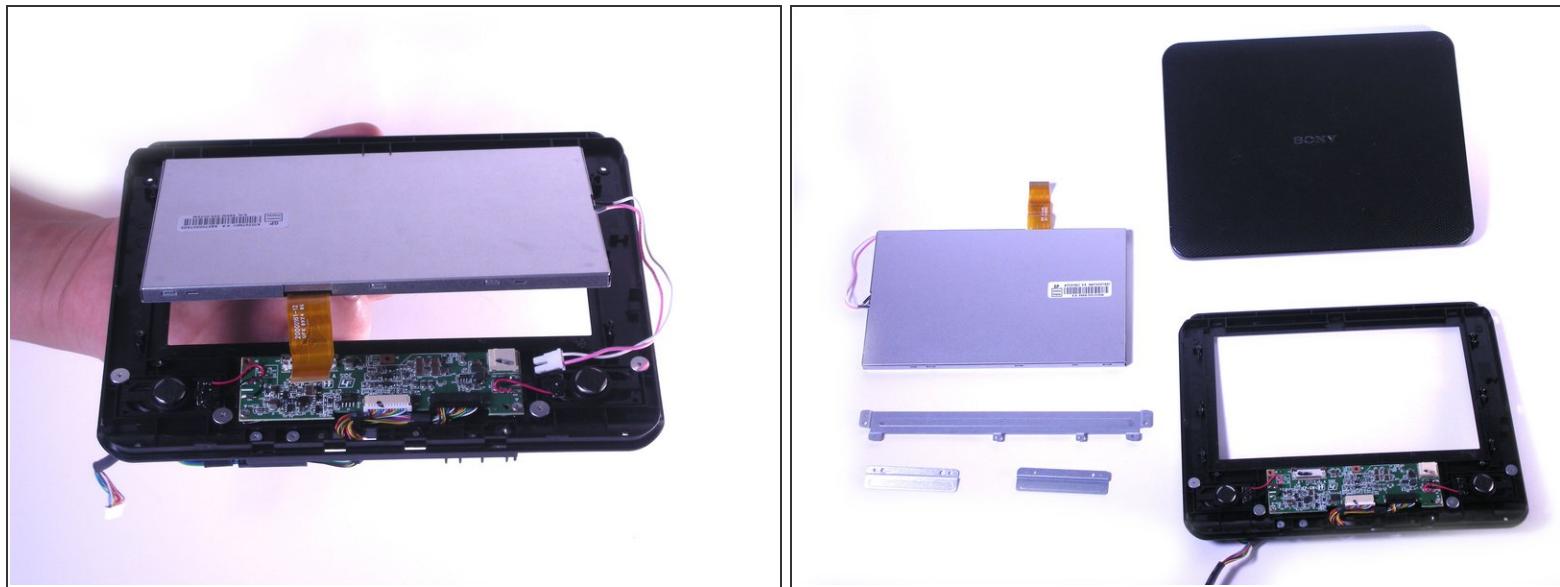

- Place your hand on the front of the screen and push upwards.

To reassemble your device, follow these instructions in reverse order.