


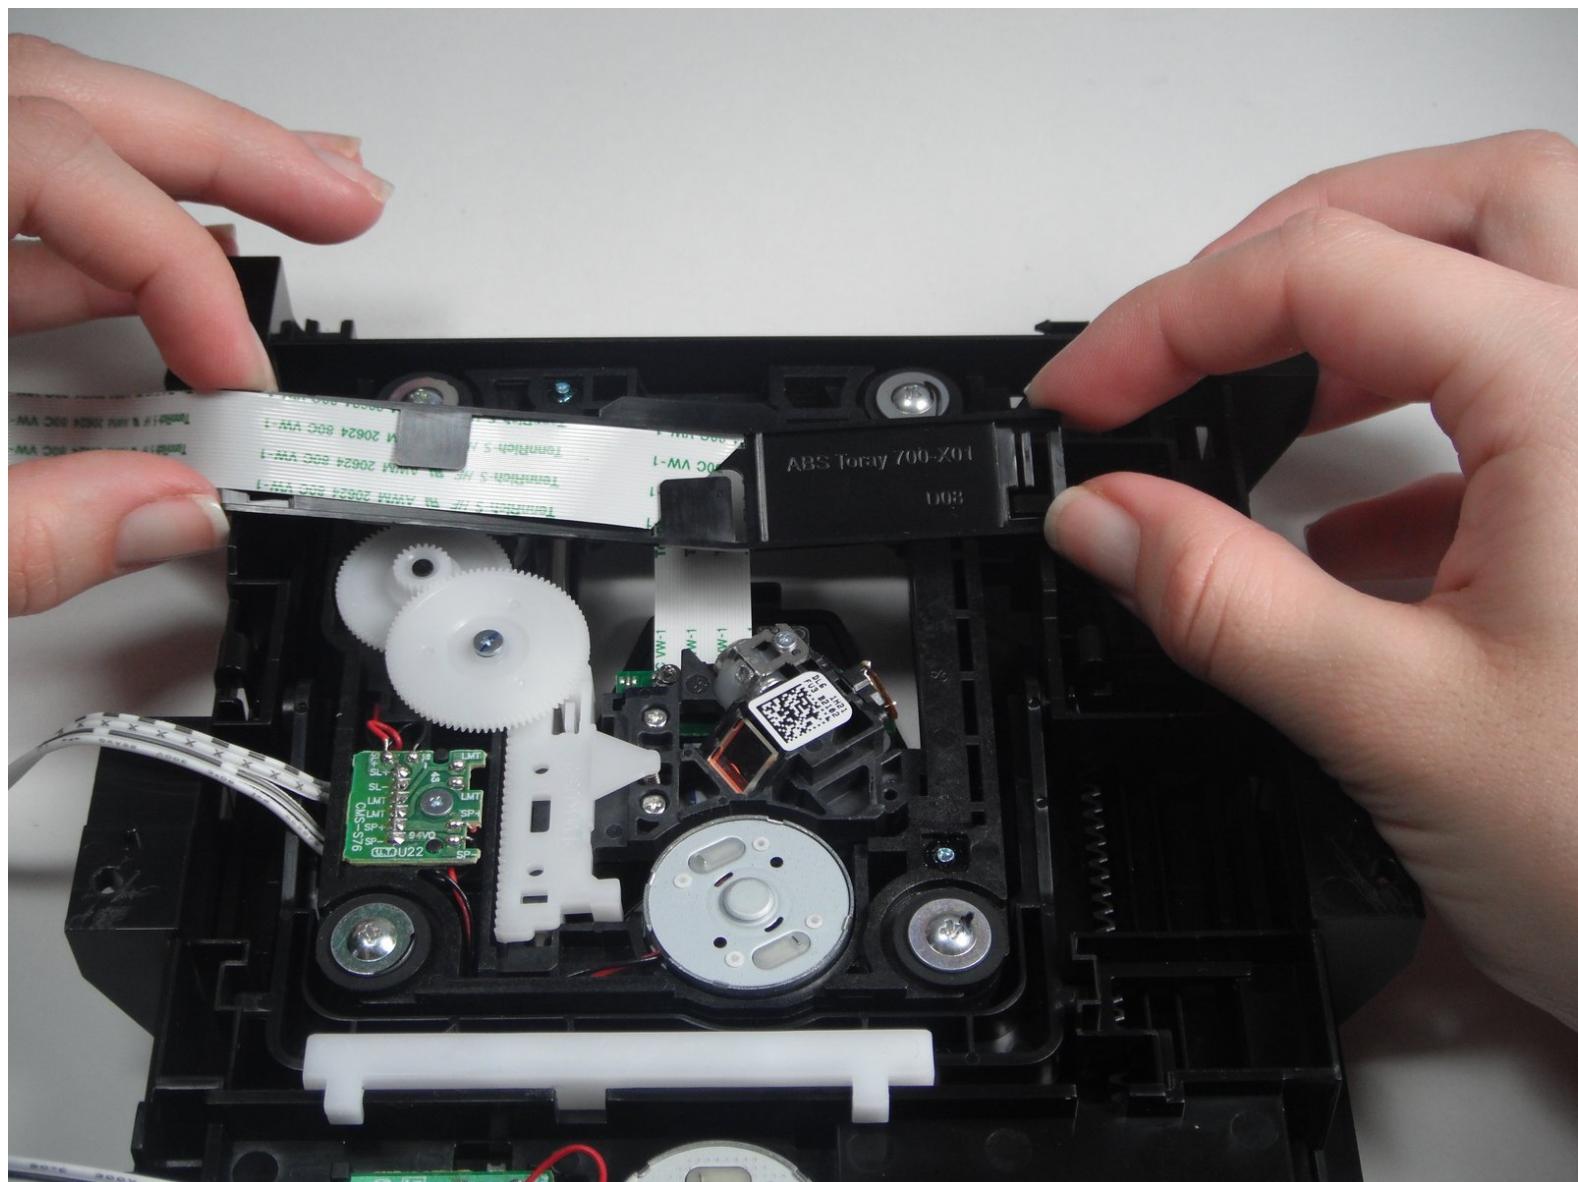

# Sony DVP-SR200P DVD Reader Replacement

This guide demonstrate how to replace a malfunctioning DVD reader.

Written By: Jose Coronel



This document was generated on 2019-10-09 01:07:25 AM (MST).

## INTRODUCTION

By removing the DVD reader you will be able to install a new reader.

### TOOLS:


- Phillips #1 Screwdriver (1)

## Step 1 — Top Cover



- Remove the five #1 Phillips screws (black, 3/16") attaching the cover to the DVD player.
  - One 3/16" screw on the right side of the DVD player.
  - One 3/16" screw on the left side of the DVD player (directly opposite of other screw).
  - Three 3/16" screws on the back of the DVD player.

## Step 2

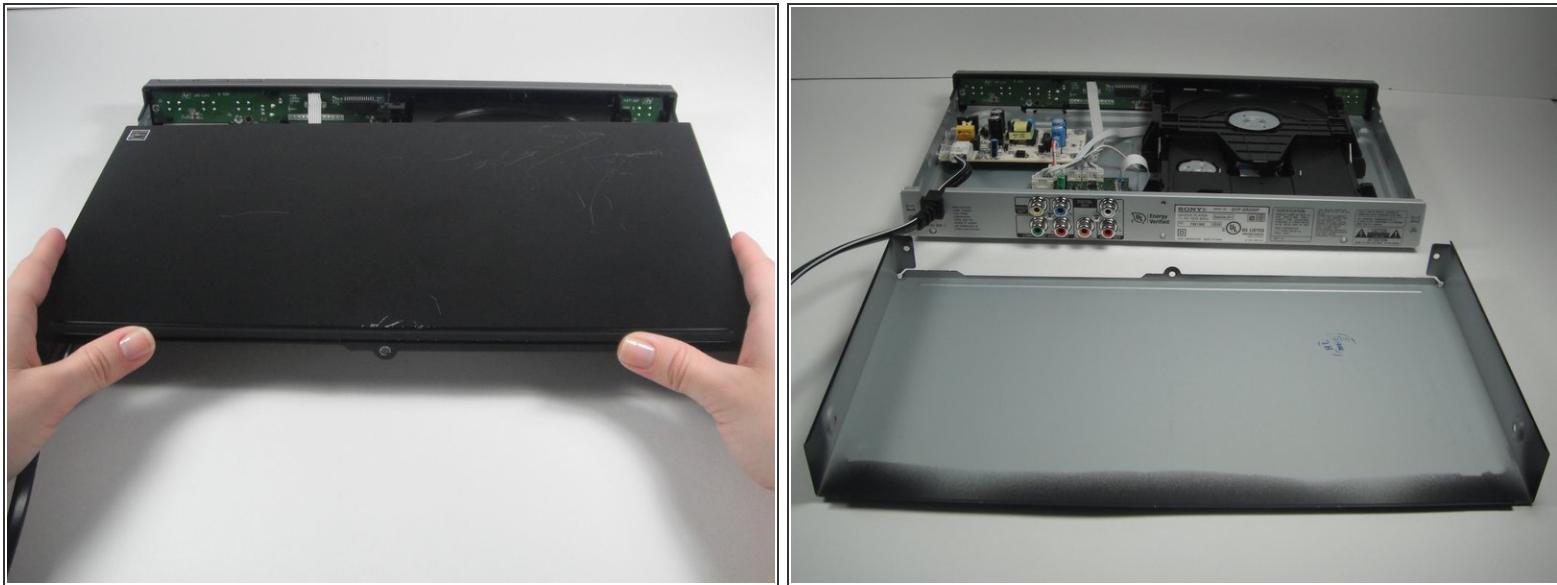


- Slide the cover away from the front of the DVD player until it is off.

## Step 3 — Processing Board




- Remove the blue tape from the processing board by gently pulling upward.

## Step 4

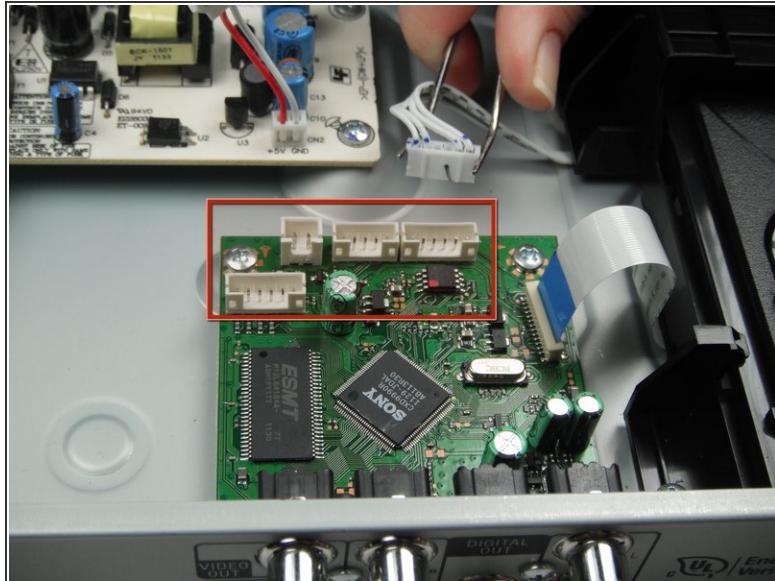

- Use the tweezers to remove the four sets of wires connected to the processing board. Start with the cord located in front of the row of three cords.
- The wires may be difficult to remove. Wiggling them while lifting them up may help remove them.

## Step 5

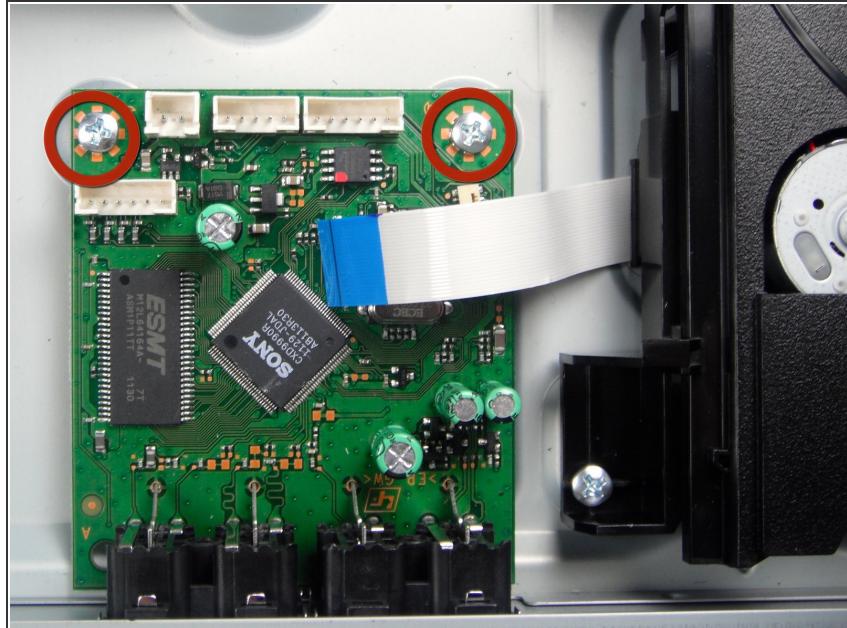

 Handle the processing board with care. It is fragile.

- Unscrew the two #1 Phillips screws (silver, 3/16") located on the two edge corners of the processing board.


## Step 6



- Orient the DVD player so that you are facing the video and audio jacks.
- Unscrew the two #1 Phillips screws (silver, 3/16") located on the outside of the DVD player

**i** The processing board is now free to be removed and replaced.

## Step 7 — DVD Drive

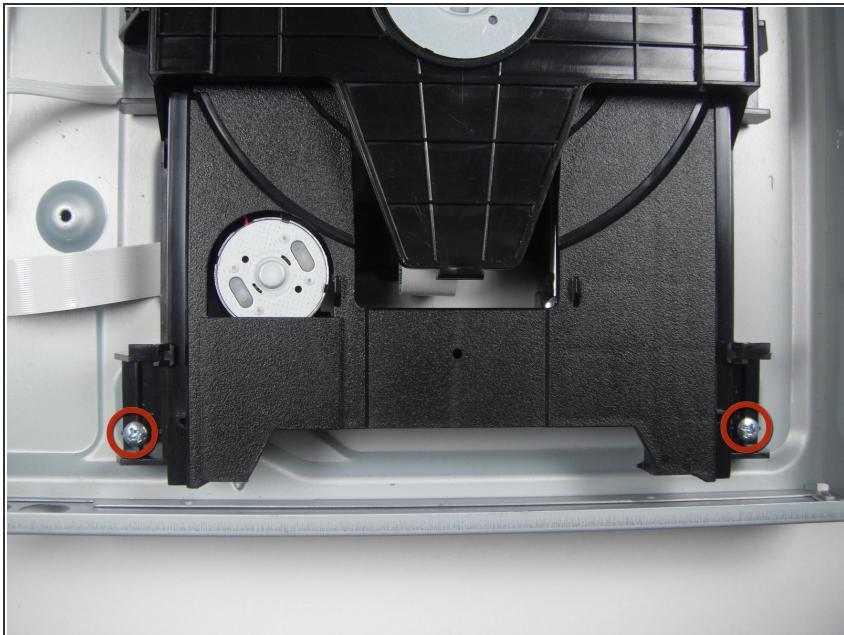




- Orient the DVD player so the front of the DVD player is opposite of you.
- Remove the two #1 Phillips screws (silver, 3/16") that attach the DVD drive to the bottom of the DVD player.

## Step 8




- Remove the DVD drive by pulling it backward and upward while ensuring that it is free of any braces.

## Step 9 — DVD Reader

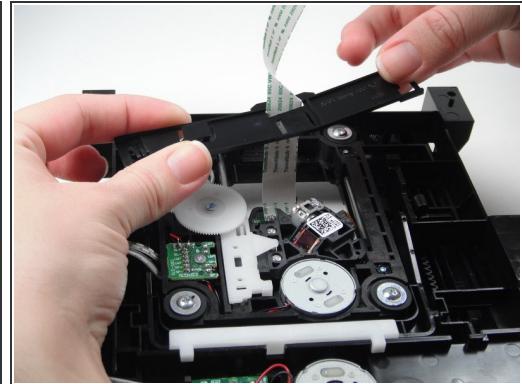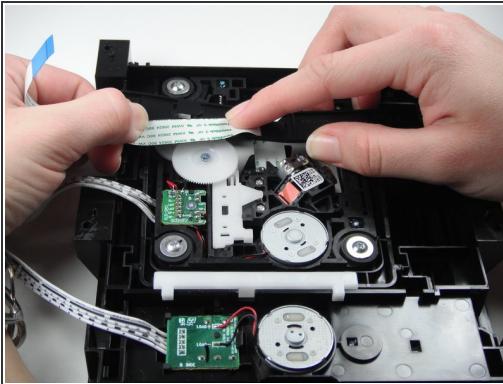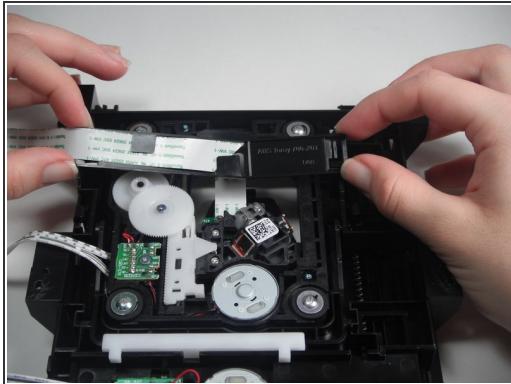


- Flip the DVD drive upside down, to match the orientation of the first picture.
- Carefully remove the white ribbon cable from the brace holding it in place by sliding it out towards you.
- Next remove the brace from the DVD drive. Carefully wiggle and pull the brace upward as the white ribbon cable slides out through the brace.

## Step 10

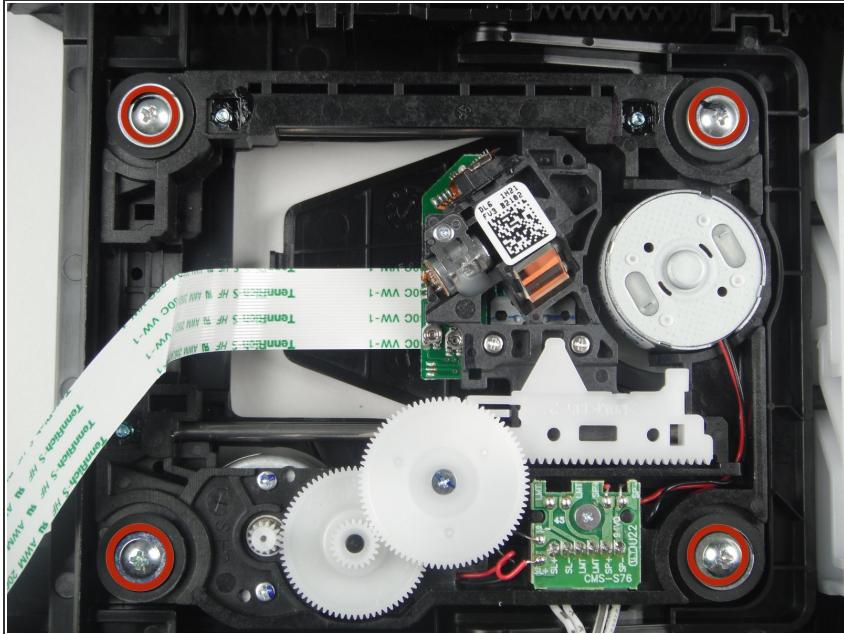

- Remove the four silver #1 Phillips 3/16" screws to free the DVD reader from the DVD drive.

## Step 11

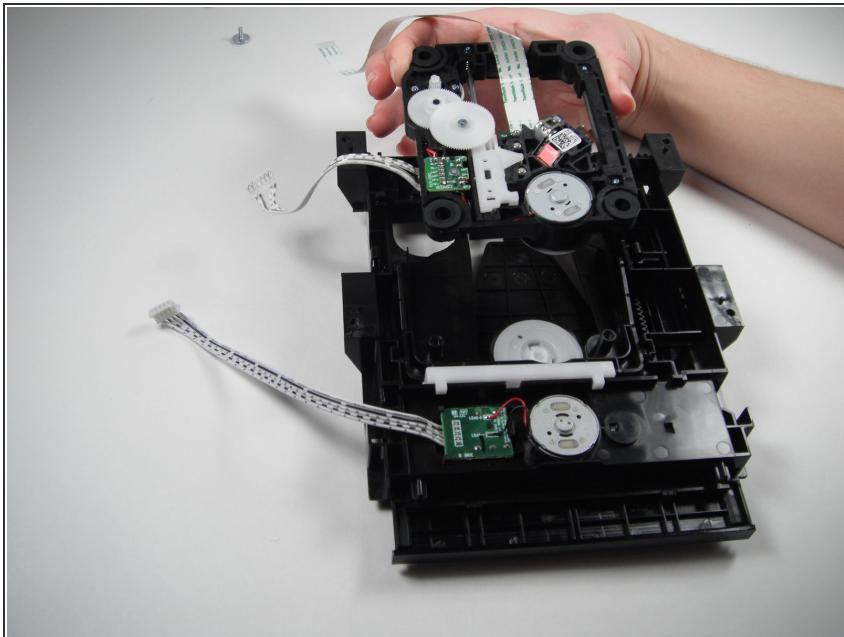

- Remove the DVD reader from the DVD drive by pulling it upwards off of the drive.
- (i)* The DVD reader can now be replaced.

To reassemble your device, follow these instructions in reverse order.