




# Sony Ericsson T68i Microphone Replacement

Written By: Tim Dascomb

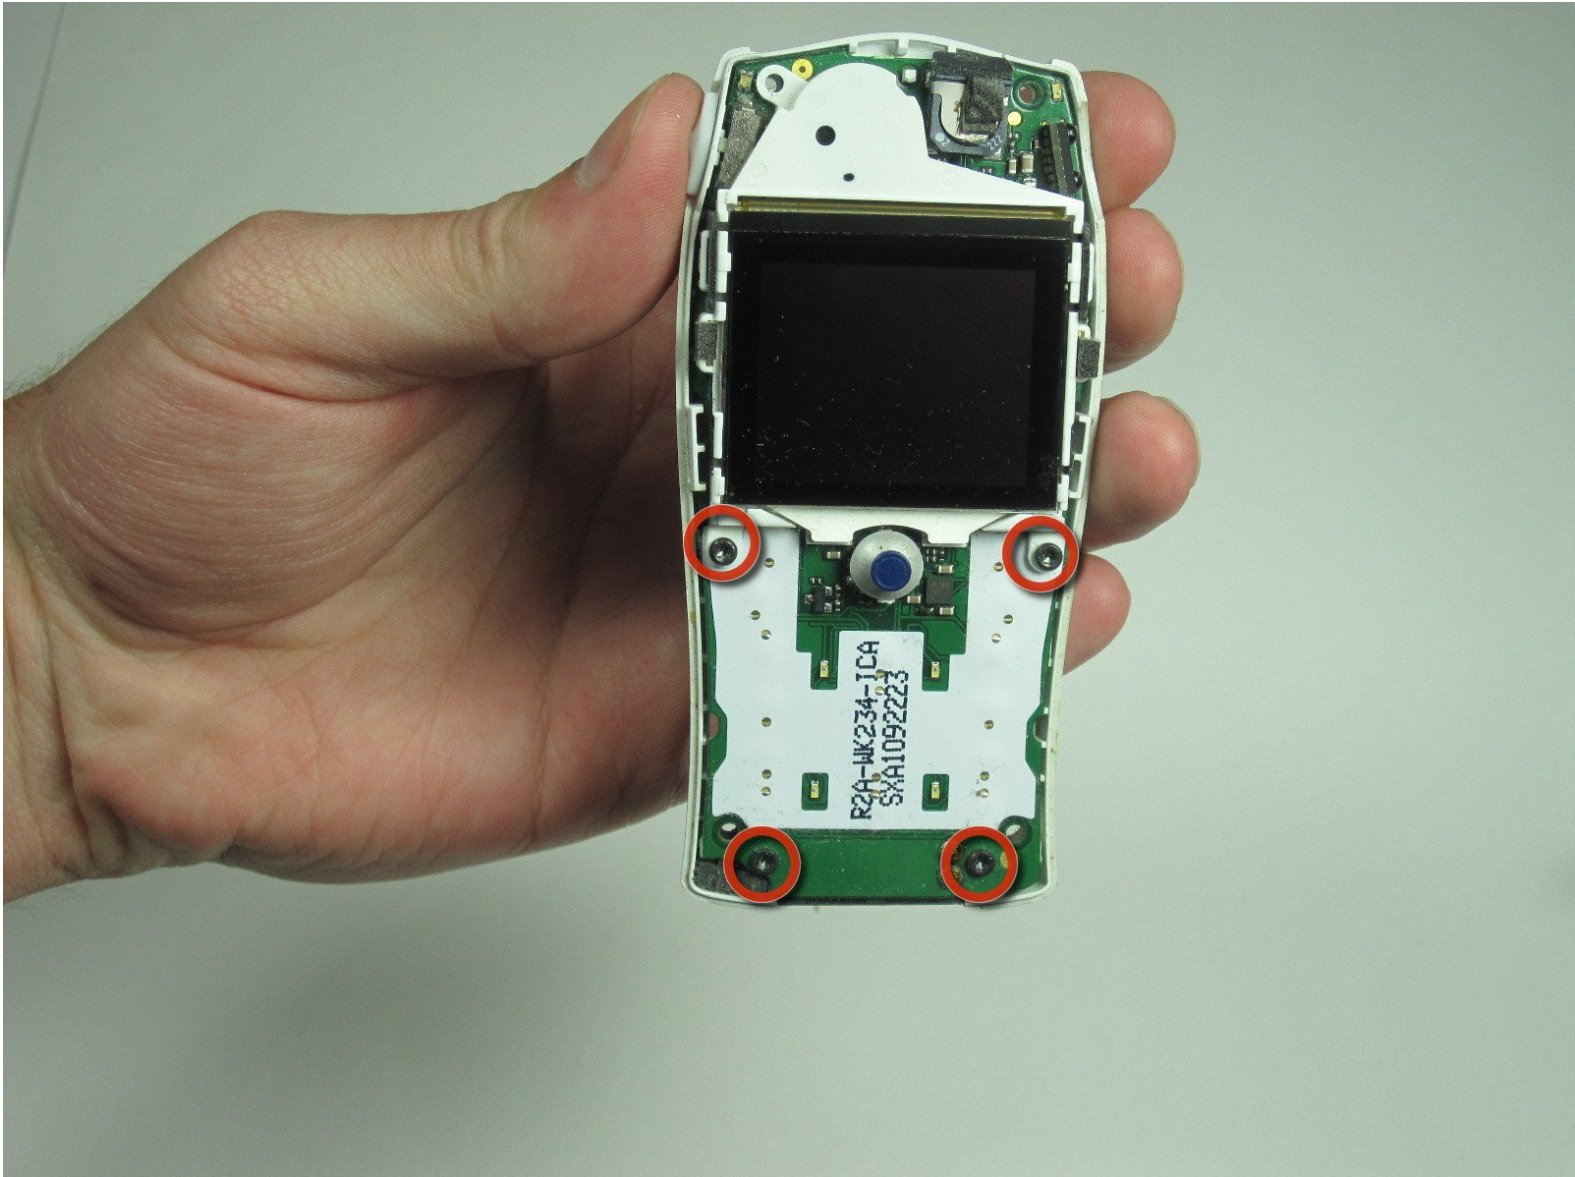

---

## INTRODUCTION

This guide will assist you in removing the microphone from your Sony Ericsson T68i.



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [T6 Torx Screwdriver](#) (1)
-

## Step 1 — Keypad



- Remove the battery from the back.

## Step 2



- Pry off the plastic cover from the top with a thin plastic shim, then remove it from the two bottom clips.

⚠ Do not bend it too far down, or else you risk breaking the two bottom clips.



## Step 3



- Unscrew all four Torx T6 screws.




 Keep in a safe place.

## Step 4





- After removing the screws, the two halves will separate. If not, then pry them gently apart.

## Step 5 — Microphone

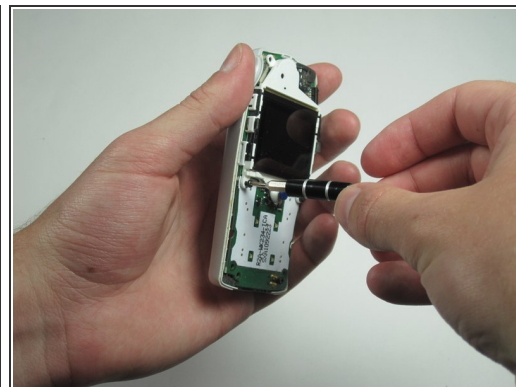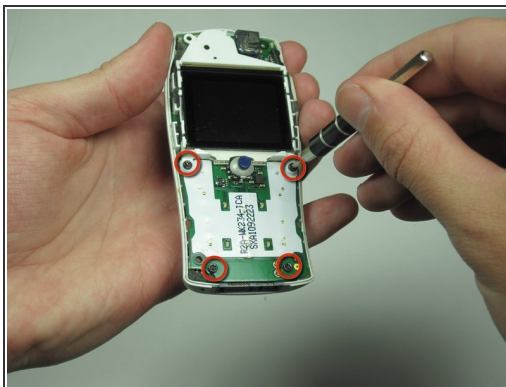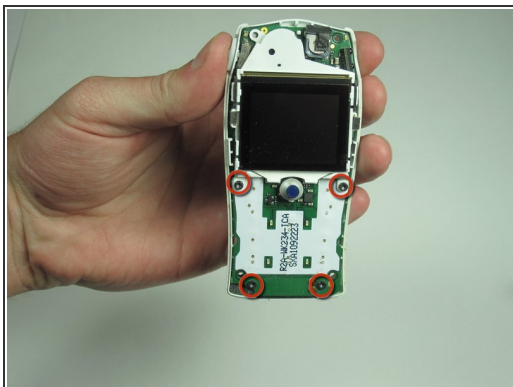


- Next remove the circuit board and screen from the device.
- Use your T6 to remove the 4 screws holding the cover on.

## Step 6

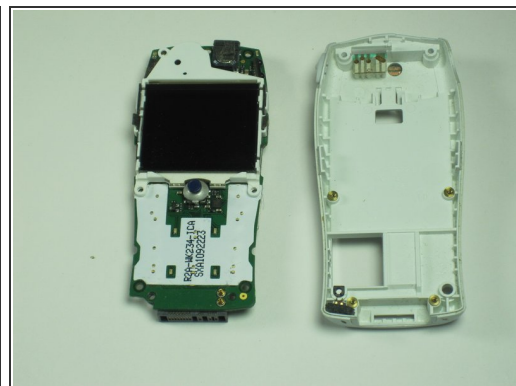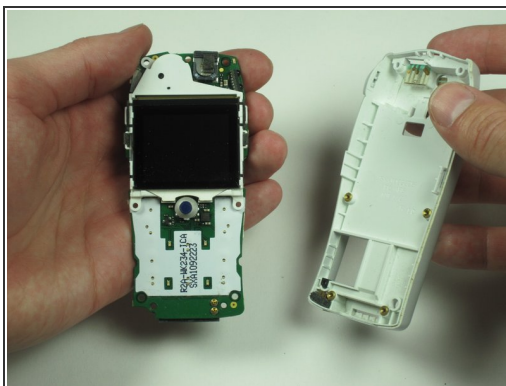

- The board and screen should just pop out at this point.

## Step 7

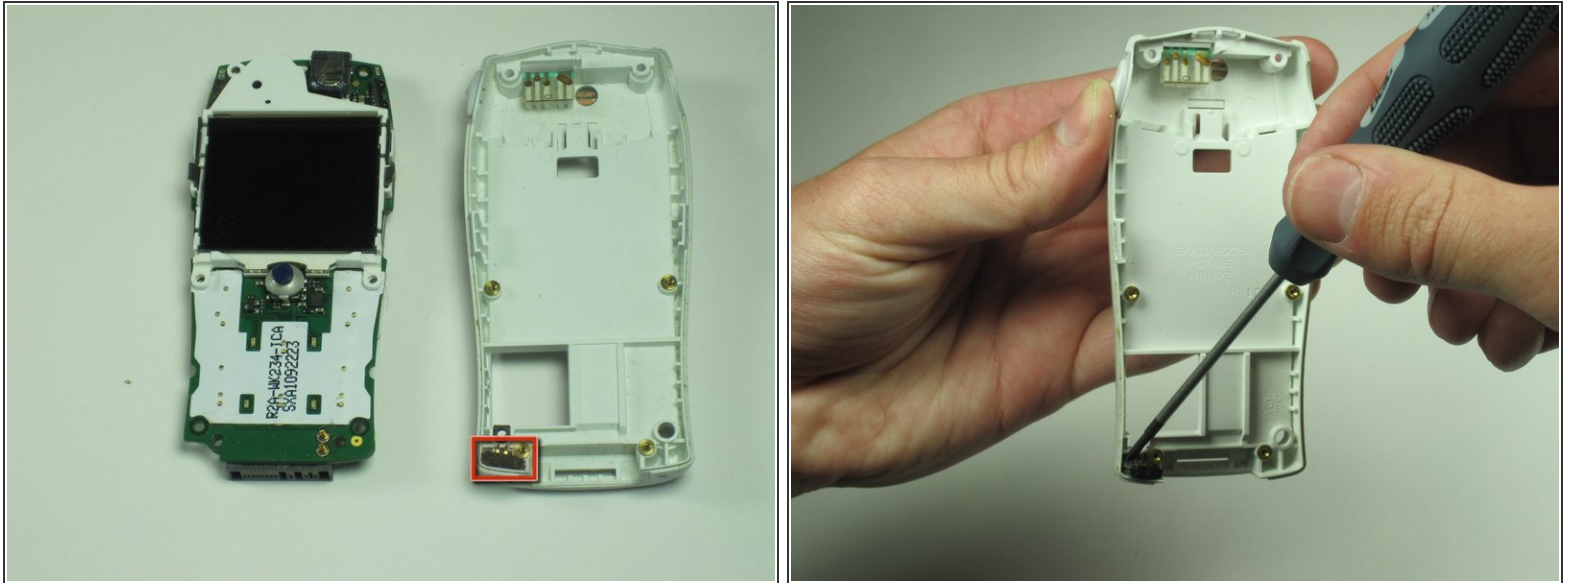

- The microphone at the bottom of the rear housing can be levered out using a small screwdriver or any similar tool.

To reassemble your device, follow these instructions in reverse order.