 




Sony Ericsson T68i Speaker Replacement

Written By: Tim Dascomb

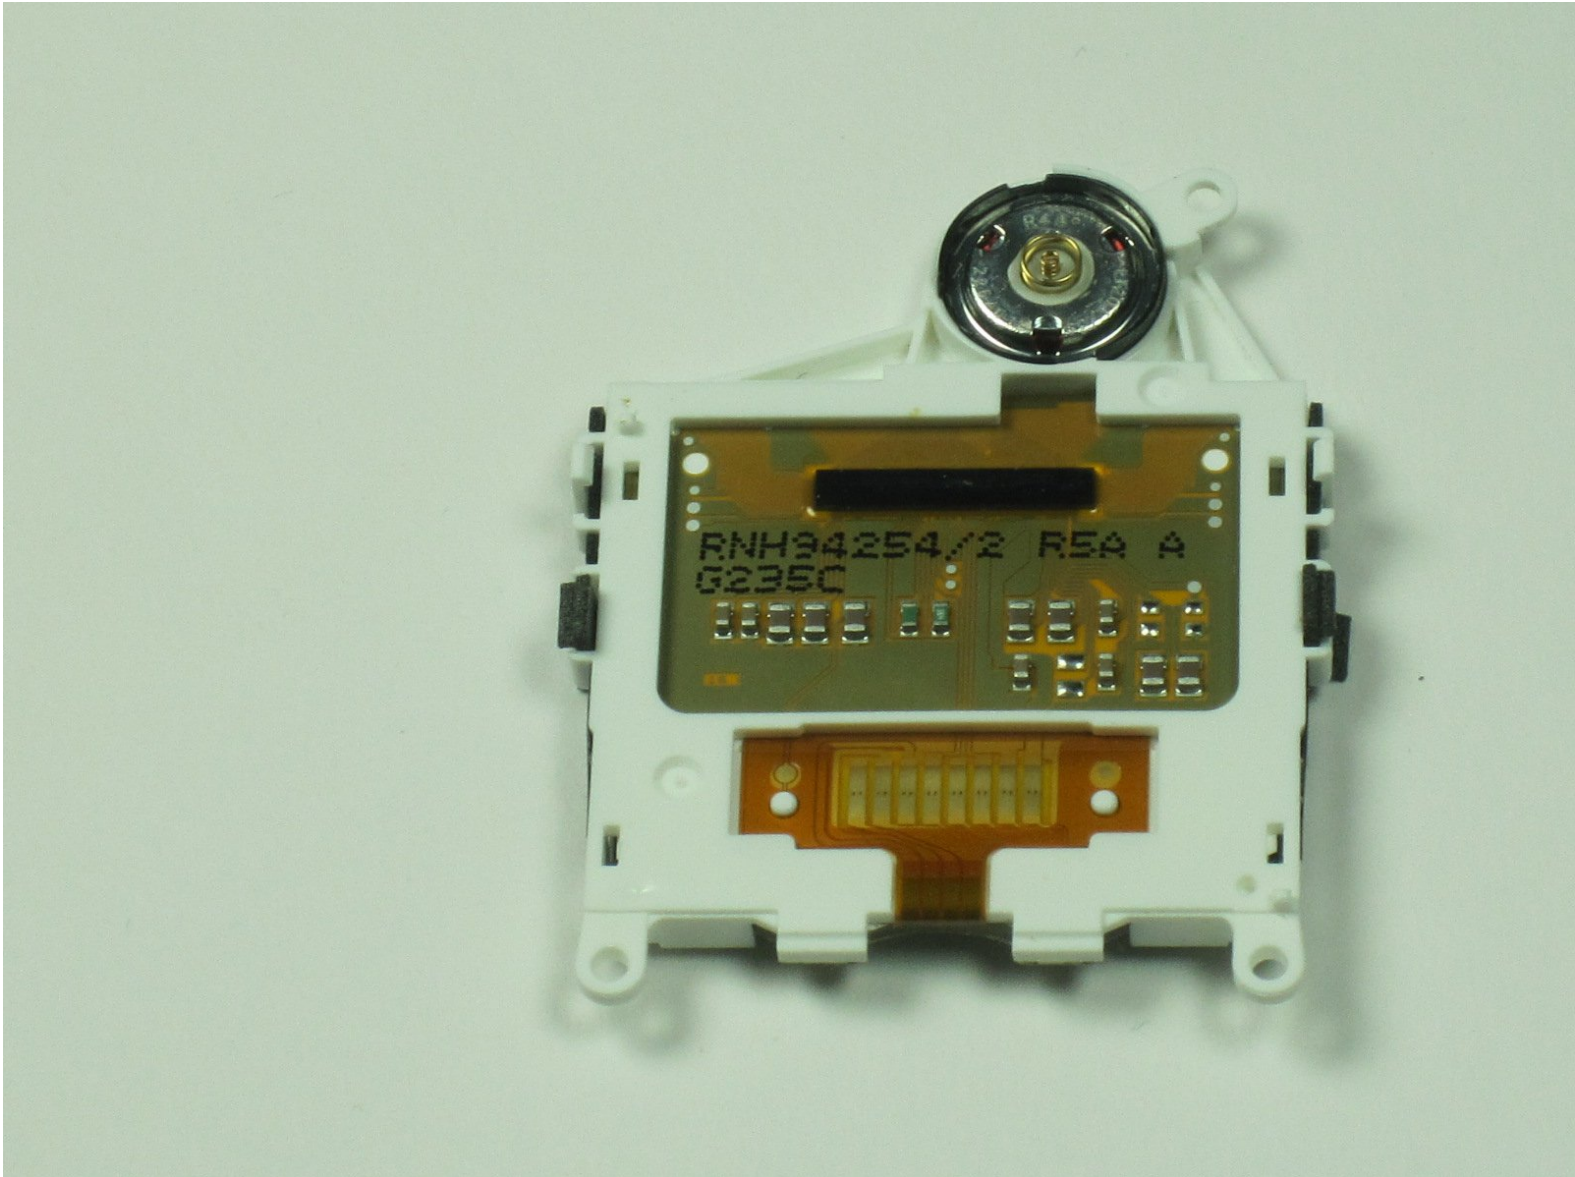

INTRODUCTION

This guide will assist you in removing the speaker from your Sony Ericsson T68i.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Keypad



- Remove the battery from the back.

 
 
Step 2



- Pry off the plastic cover from the top with a thin plastic shim, then remove it from the two bottom clips.

⚠ Do not bend it too far down, or else you risk breaking the two bottom clips.




Step 3

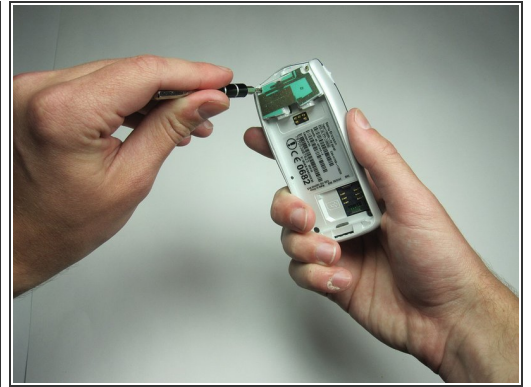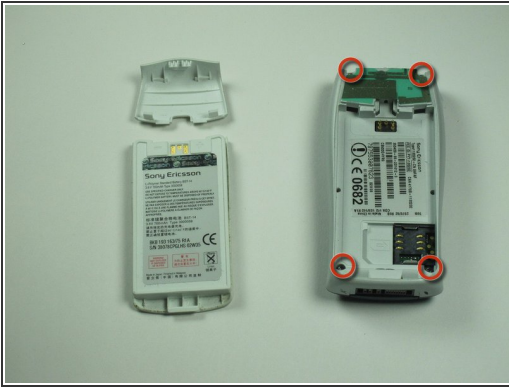

- Unscrew all four Torx T6 screws.




 Keep in a safe place.

   Step 4

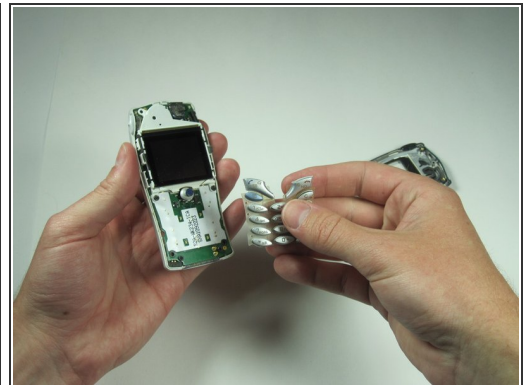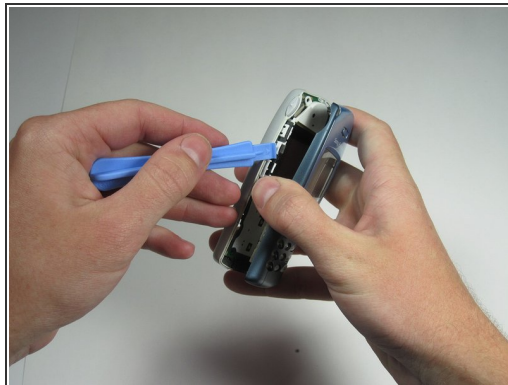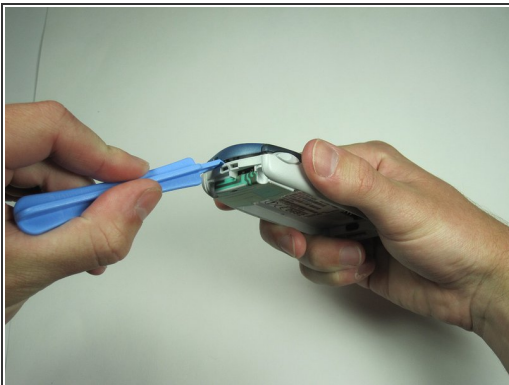



- After removing the screws, the two halves will separate. If not, then pry them gently apart.

   Step 5 — Screen

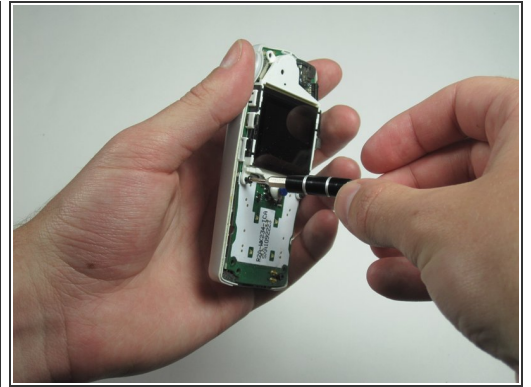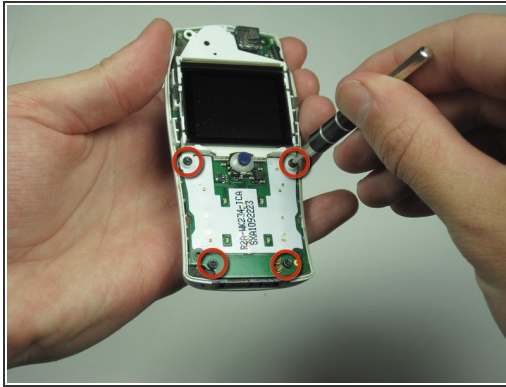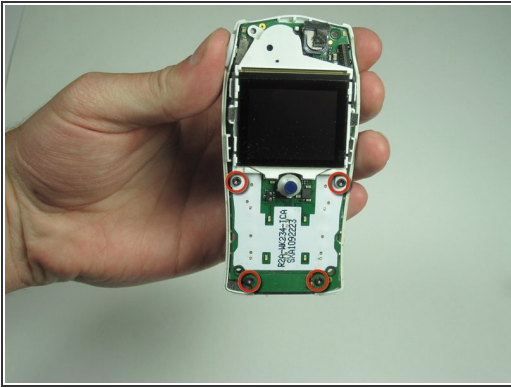


- Remove the circuit board and screen from the device.
- Use your T6 to remove the 4 screws.

  Step 6

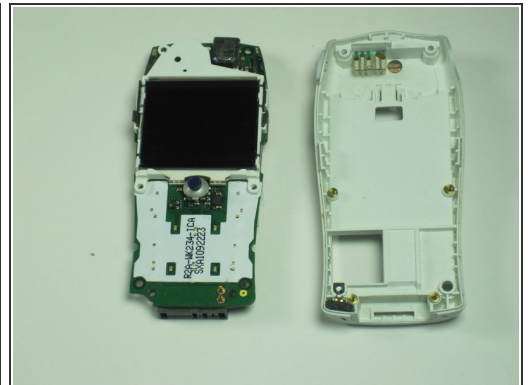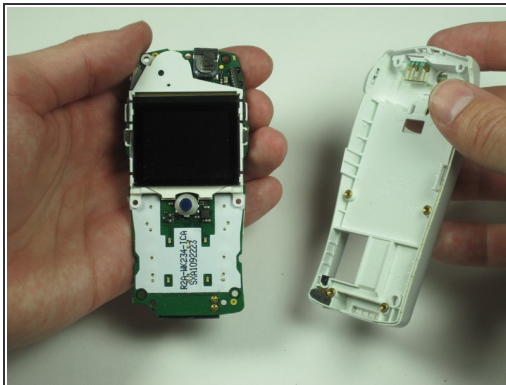


- Remove the board and screen.

 Step 7

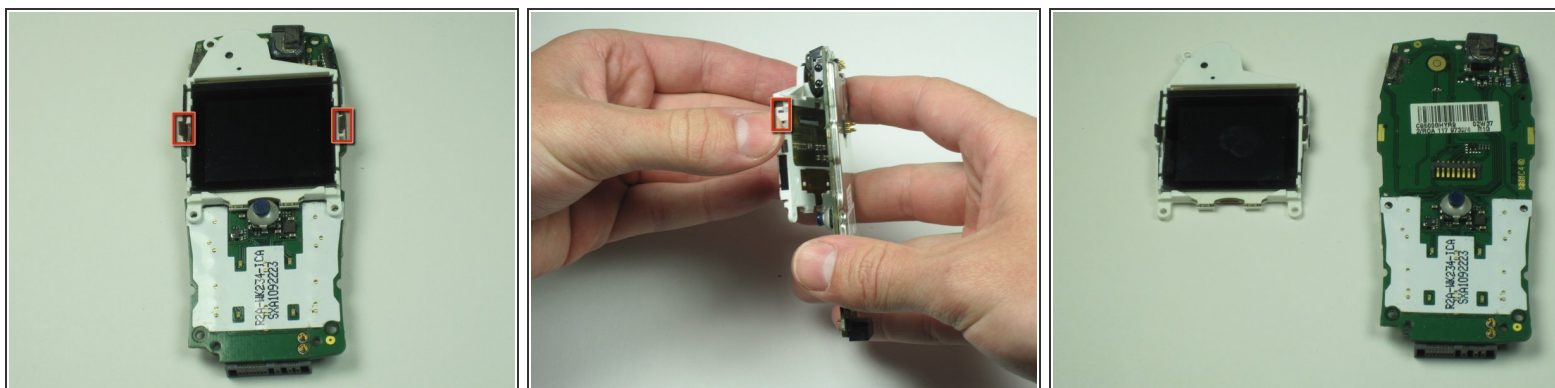

- Carefully remove the plastic clips holding the screen on the board.

 Step 8 — Speaker

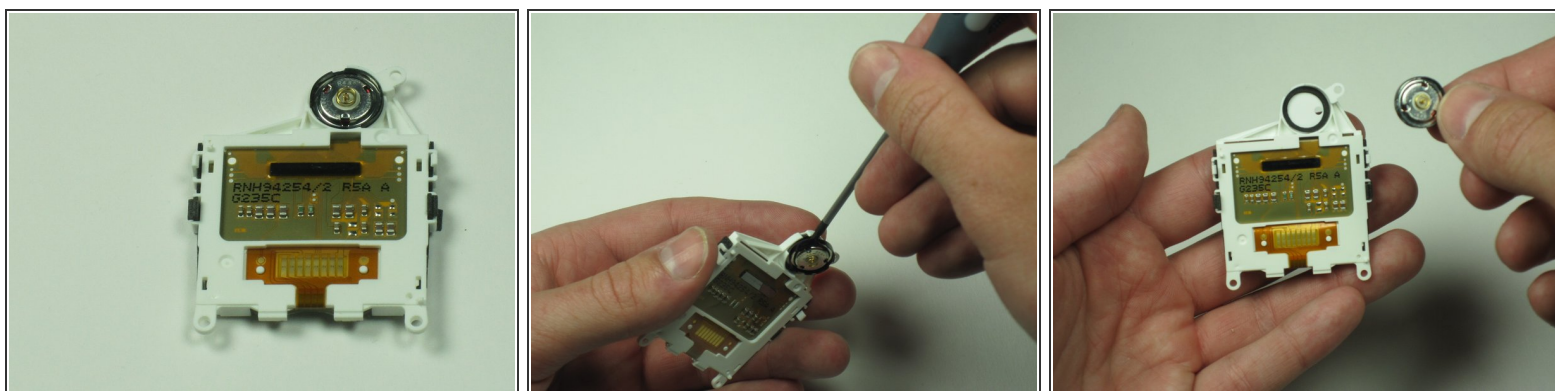

- Gently pry it out the speaker located in the screen housing with a small screwdriver or similar tool.

To reassemble your device, follow these instructions in reverse order.