



Sony Ericsson W518a SIM Card Replacement

Remove the SIM card from the Sony Ericsson w518a cell phone.

Written By: Branden



 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery



- Insert the plastic opening tool in the notch to remove the cover.

Step 2



- Use your fingers to pull up and remove the battery.

Step 3 — SIM Card



- Using your finger to pull out the SIM card.

To reassemble your device, follow these instructions in reverse order.