



Sony Ericsson Xperia X10 Audio and Camera buttons Replacement

This guide is for cleaning and/or replacing the audio and camera buttons on a Sony Ericsson Xperia x10

Written By: Nick E



INTRODUCTION

This is a short and simple guide to button cleaning and repairing

TOOLS:

- [iFixit Opening Tools](#) (1)
- [T6 Torx Screwdriver](#) (1)

Step 1 — Audio and Camera buttons



- The first step in accessing the audio and/or camera buttons is to remove the back case of the phone and then the battery

Step 2



- Next, remove eight 5mm screws as shown in the image. Use a T-6 bit.

Step 3




- Using a case opener (a guitar pick works as well), start on the bottom right side of the phone and undo clips located at the interior sides. Repeat this step for the left side.

Step 4



- The phone should now look like this. The Volume button is indicated by the larger yellow circle, and the camera button is indicated by the smaller and lower yellow circle.

Step 5

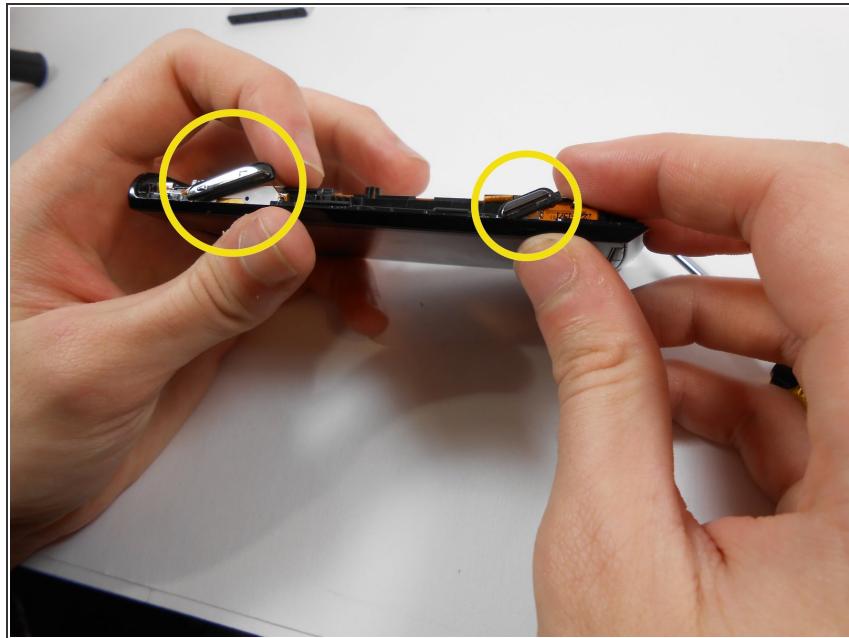

- The volume button (left) and the camera button (right) lift right out of the phone as shown in the picture. From here you can clean them or replace them.

To reassemble your device, follow these instructions in reverse order.