


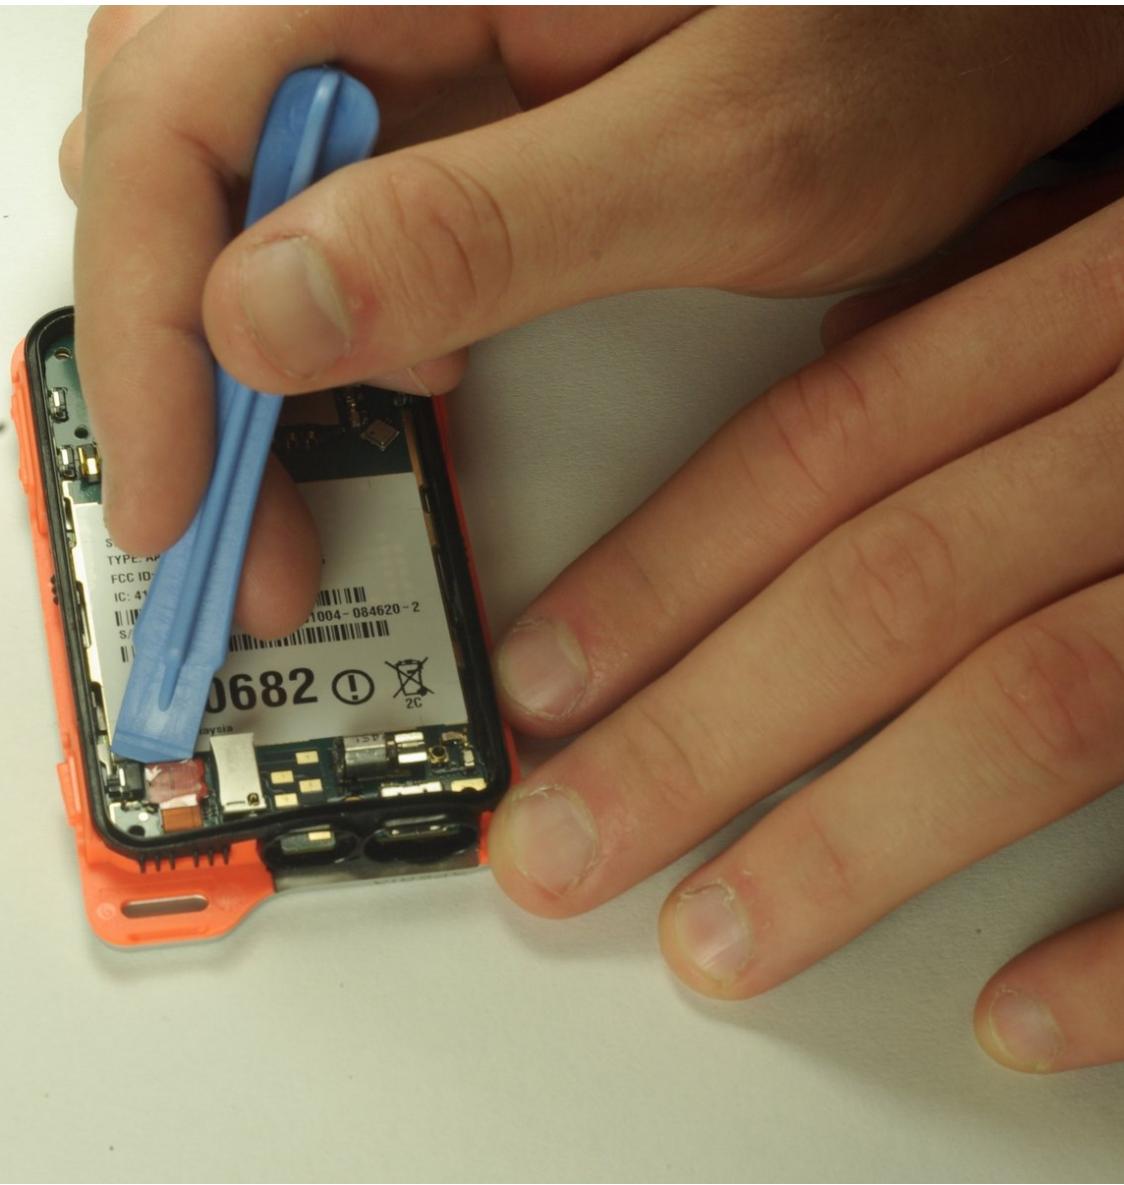

Sony Ericsson xPeria Active Screen Replacement

This guide will show how to replace the screen in a Sony Ericsson Xperia Active.

Written By: Alex Tobin



INTRODUCTION

Sometimes, the screen can become cracked, damaged, or just simply not work. This can be frustrating, but never fear, as this replacement guide will make everything easier.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [T6 Torx Screwdriver](#) (1)

Step 1 — Remove the back cover.



- Open the flaps and remove the back cover using the plastic opening device.

Step 2 — Remove inside plastic battery cover.



- Remove the battery shield with the plastic opening device.

Step 3 — Remove the battery



- Remove the battery.

Step 4 — Unfastening The Motherboard Cover





- Unscrew the 5mm screws with the T5 head.
- Unscrew the 6mm screw with the T6 head.

Step 5 — Removing The Motherboard Cover




- Remove the black cover with the plastic opening tool.
- Remove the headphone jack from its slot.

Step 6 — Screen

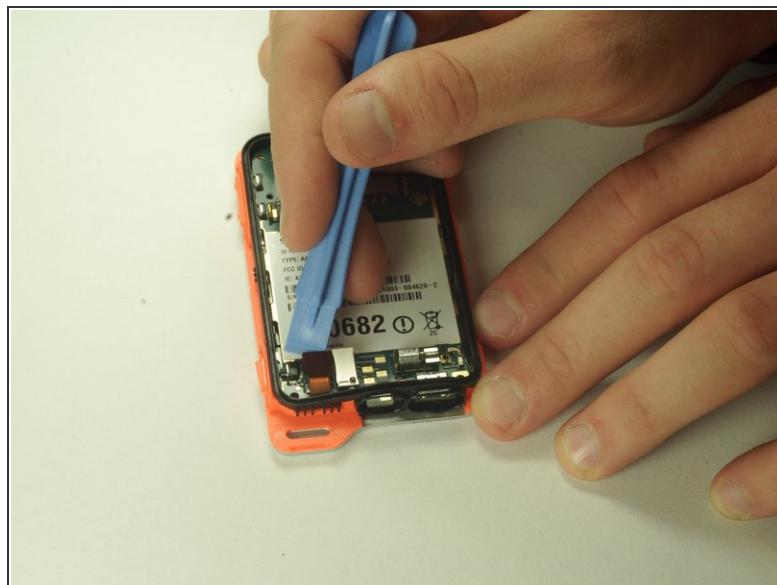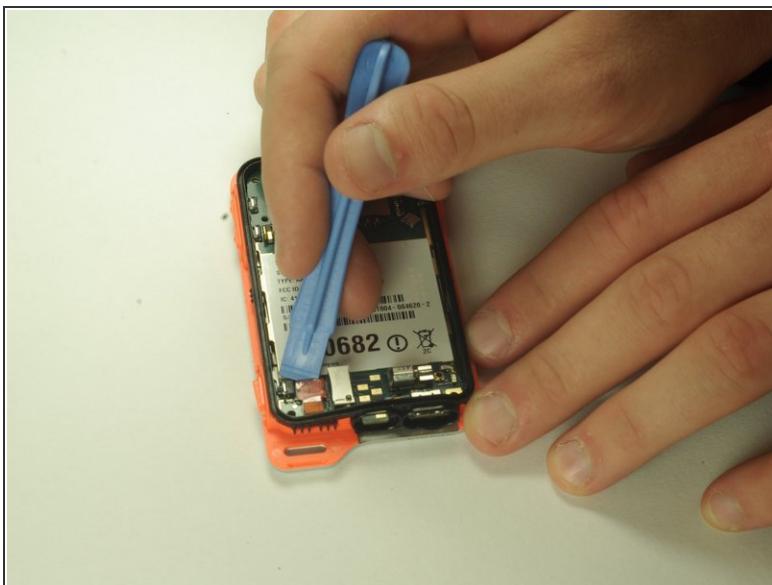

- Unplug the power cable by carefully prying it away from the motherboard.

Step 7

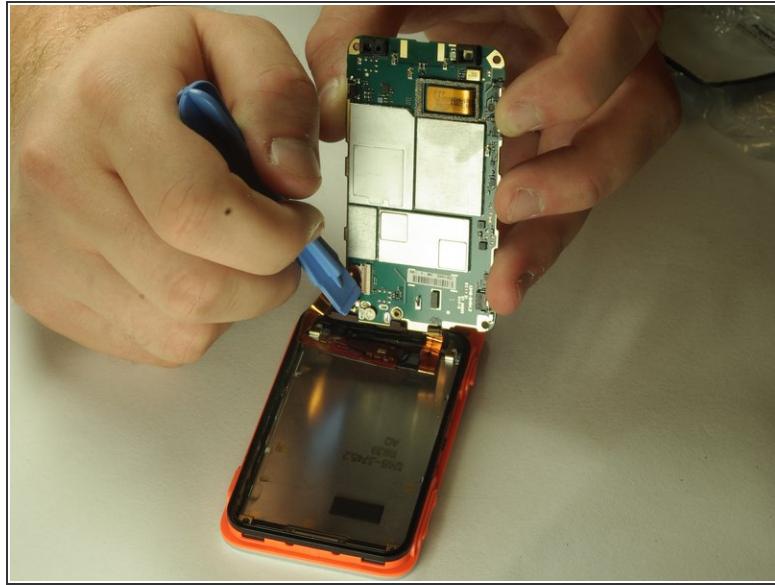


- Remove the power strip on the back side of the motherboard.

Step 8 — Remove back screen shield



- Remove the shield.

Step 9 — Remove the screen module

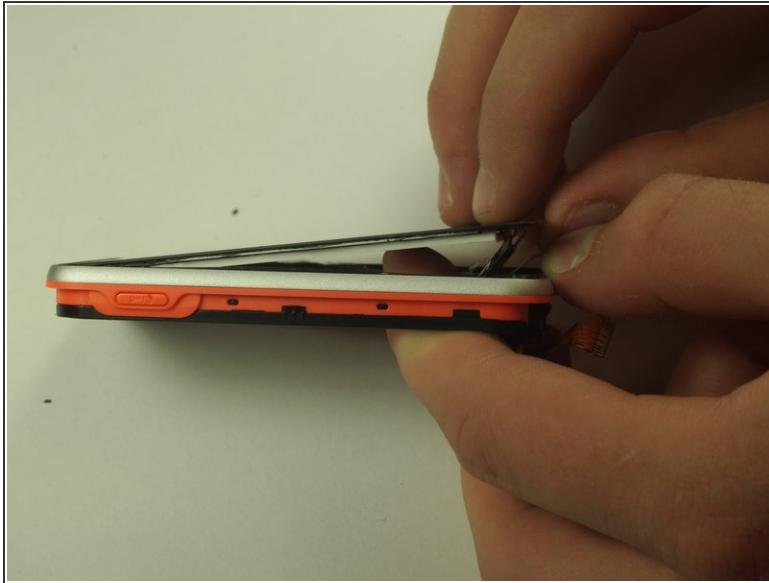

- Push the screen through the front of the case, gently.
- It may be a little tough, just work your way around the edges of the screen until it separates from the main case.

To reassemble your device, follow these instructions in reverse order.