



# Sony Ericsson z300 Back Speaker Replacement

Removing the speaker will allow you to install a new one so your phone can rock out once again.

Written By: Alex Serventi



## INTRODUCTION

This guide will show how to remove the speaker.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)

## Step 1 — Back Phone Cover



- To remove the back cover, use your thumb to press down on the center of case and slide it off.

## Step 2 — Battery



- Using a fingernail lift the battery out of the phone.

## Step 3 — Sim Card




- Slide the sim card out with your thumb.

## Step 4 — Back Dark Grey Case



- To remove the back case first remove the four screws shown with a T5 Torx screwdriver

## Step 5

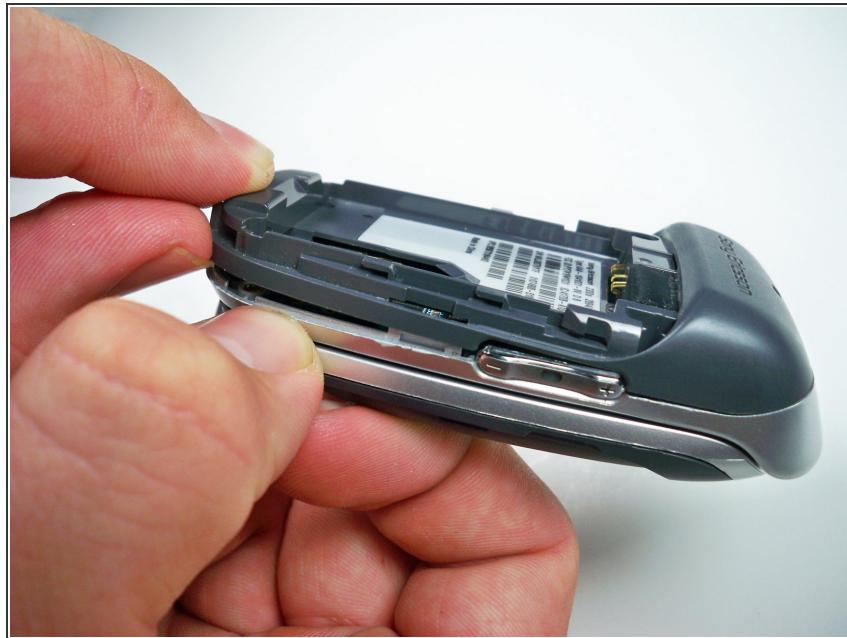


- Using your fingernail lift up the side of the casing around the bottom of the phone to release all five of the clips.

## Step 6



- Lift up towards the bottom and slide the case off.

## Step 7 — Back Speaker

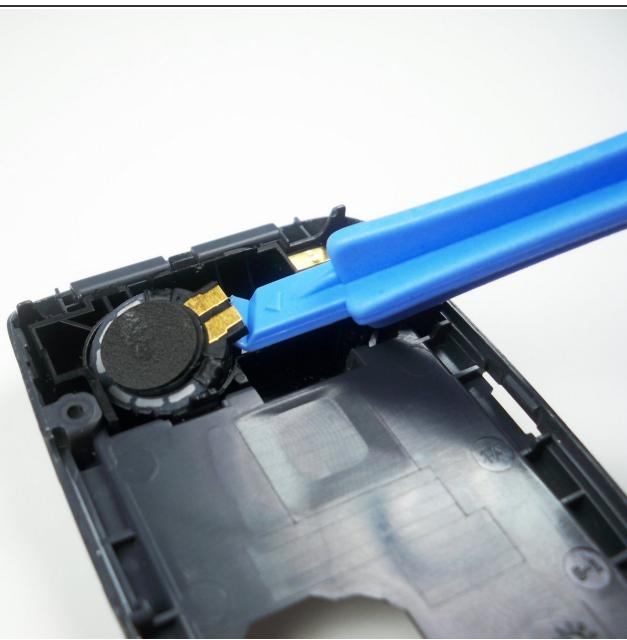

- Use a plastic opening tool to lift the speaker out of the back case.

To reassemble your device, follow these instructions in reverse order.