



Sony FS7 Repair

The cable connection on the Sony FS7 can become lose after years of use. As a result, the image to the viewfinder will cut in and out. Let's fix it!

Written By: James Powers



INTRODUCTION

Let's fix your Sony FS7. This method should also be compatible with the Sony FS7 Mark II, and very similar to the Sony FS5.


TOOLS:

- Phillips screwdriver, small and large, tweezers (1)

PARTS:

- Viewfinder Chip: VF-93 A2062509A (1)

Step 1 — This Video Says It All: DIY Sony Repair

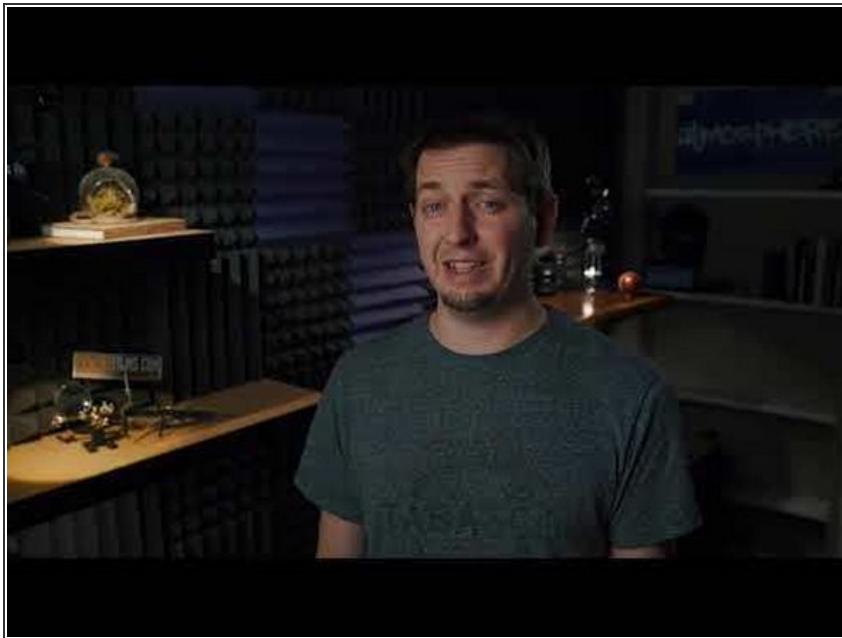

- For this repair, you'll need the following viewfinder chip, Part #: VF-93 A2062509A
- You'll also need the following:
- Phillips head screwdriver, one small and one large
- Tweezers

Attached is a video I've created. It covers the reverse order of assembly. To reassemble your Sony FS7, follow these instructions in reverse order.

If you have found this video helpful, please donate to my patreon page!