



# Sony Handycam CCD-TR5 Microphone Replacement

This guide will take you through the process of replacing a faulty or non-functioning microphone in your Sony Handycam.

Written By: Emma



## INTRODUCTION

This guide will take you through the process of replacing a faulty or non-functioning microphone in your Sony Handycam.

### TOOLS:

- **Phillips #00 Screwdriver** (1)

## Step 1 — Microphone




- Using a Phillips #00 screwdriver, remove (1) screw from bottom, (1) screw from side, (1) from top of camera

## Step 2



- Remove tops screws from microphone

## Step 3

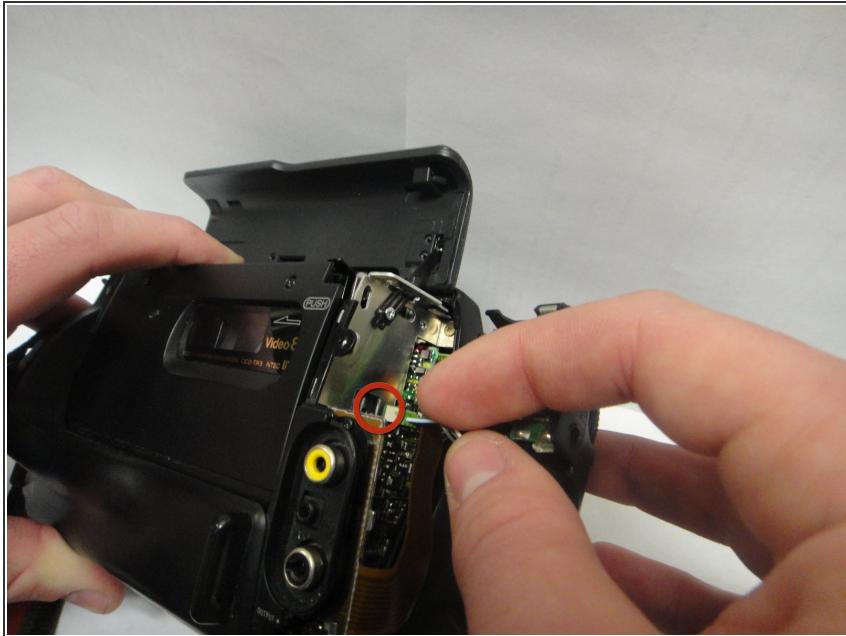

- Remove electrical connector from circuit board

## Step 4



- After screws are removed, microphone will detach from camera. Your microphone is now disassembled from camcorder.

To reassemble your device, follow these instructions in reverse order.