



Sony Handycam CX260V SD Card Slot Replacement

This guide will help remove the SD Card Slot that way it can be replaced with a new SD Card Slot.

Written By: Alejandro Barajas



INTRODUCTION

This guide will provide the right steps in replacing the SD Card Slot for the CX260V.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Housing




- Set up the camera in a clear, open, clean and professional work space. Make sure you have all the necessary tools.

Step 2



- Using the Phillips Head #00 size screwdriver, unscrew the two 5 millimeter screws located on the top left and bottom of the join attaching LCD screen to the device.
- Using the same size screw driver unscrew the 3 millimeter screw located in the middle of the joint assembly; attaching the LCD screen to the device.
- Next, unscrew the two five millimeter screws located on the left interface of the camera that the LCD screen rests on. (Should be located where the USB jacks are.)
- Locate the battery assembly, on the top of the camera and unscrew three screws; two 5 millimeter screws and one 3 millimeter.


Step 3

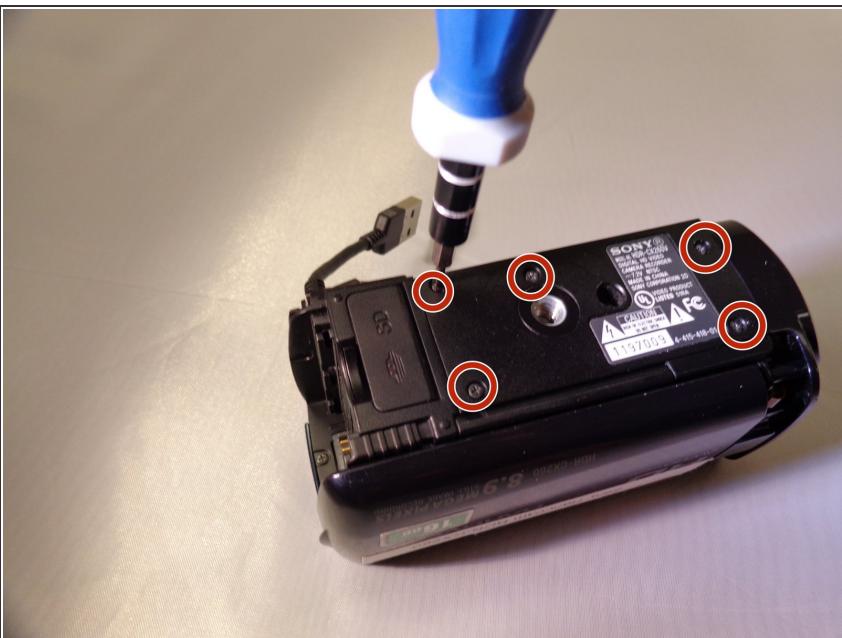

- On the bottom of the camera unscrew all 5 five millimeter screws from the bottom panel.

(i) This step will remove the bottom panel covering the internal motherboard.


Step 4

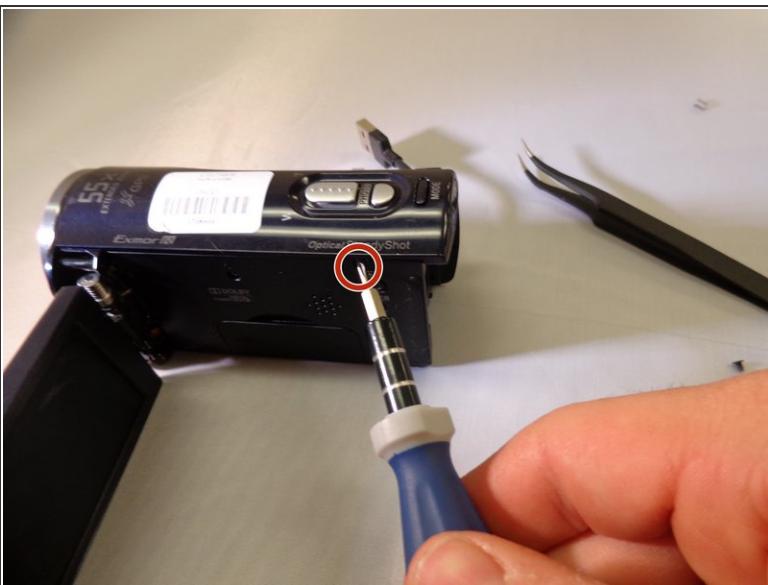

- Underneath the handle unscrew the two 5 millimeter screws.
- Using the spudger tool, remove the cover for the recording buttons.



(i) This should remove the small panel located over the recording buttons.

Step 5

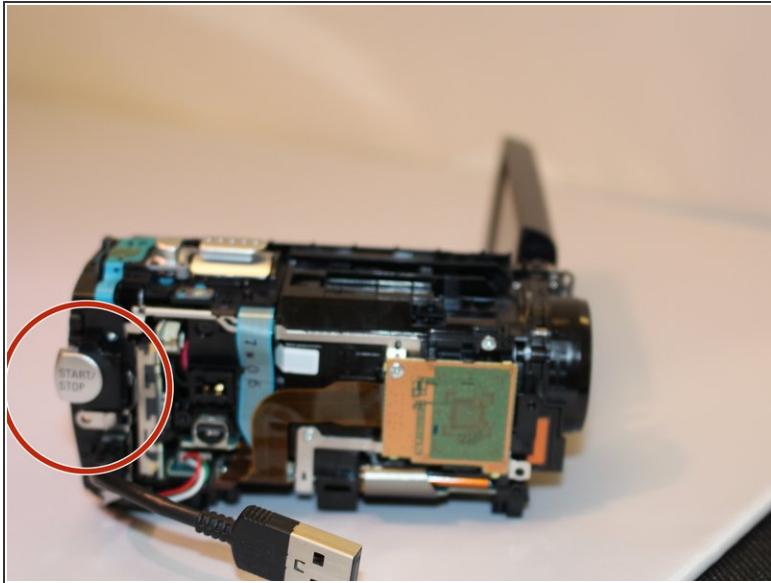


- Where the recording button is located, unscrew one 5 millimeter screw left of the "start, stop, record" button.
 - This will remove the entire right side panel where the handle is located.*
- Unscrew one 5 millimeter screw located by the lens.
 - This unattaches the leather strap assembly/handle completely from the device.*

Step 6

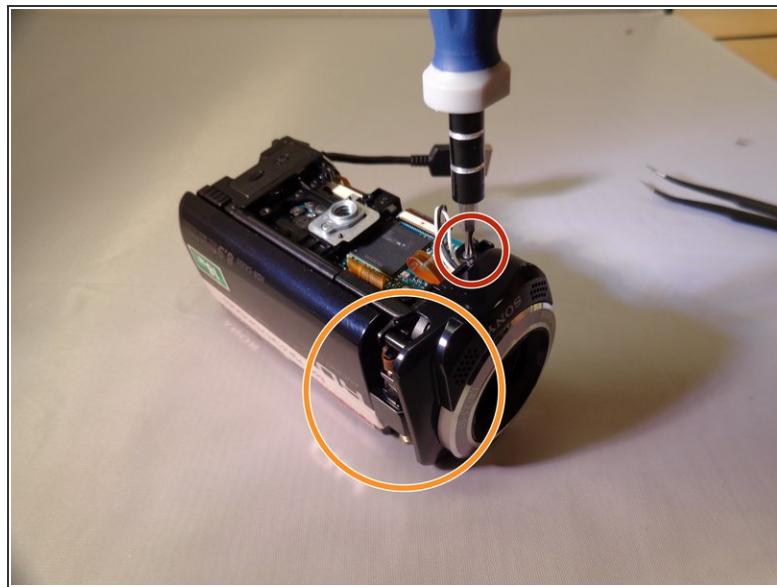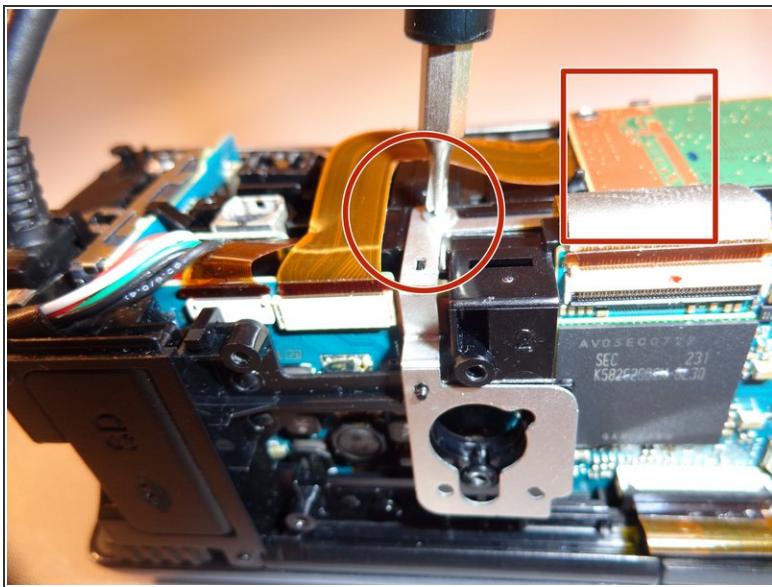


- Unscrew four screws on the front right of the camera, where the orange motherboard is located. There are three black 5 millimeter screws and one silver 4 millimeter screw.
 - (i)* The silver screw is located on the front right of the camera, and is attached to the main panel of the camera.
- Use the spudger tool to remove the cover over the LCD joint.

Step 7

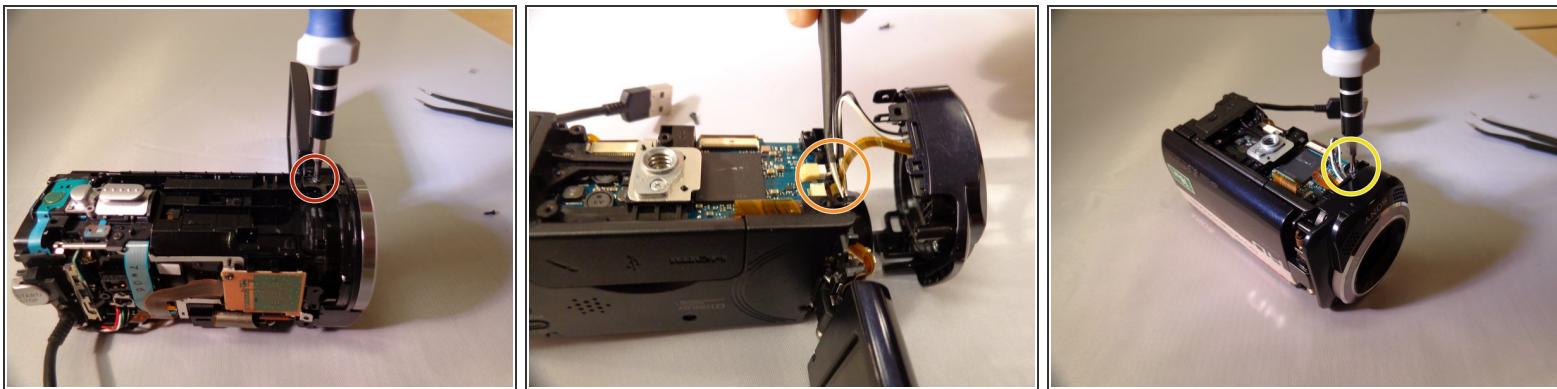

- Using the PH #00 size screw driver, unscrew a 5 millimeter screw located on the top left near the lens of the camera.
- Using a pair of tweezers, carefully disassemble the two wires connected to the bottom motherboard portion of the camera.
 - One white & black wire and one flat yellow wire are connected to the lens pane.
- *(i)* This will fully remove the lense panel.
- Using the screwdriver, locate the three five millimeter screws. Carefully remove the camera lens with your hands or spudger tool.
 - One is located on the bottom of the lens area, and the other two located on the top left and right of the lens area.
- *(i)* There are three springs located underneath the lens. Make sure not to lose them. (The lens is now ready to be replaced carefully.)


Step 8

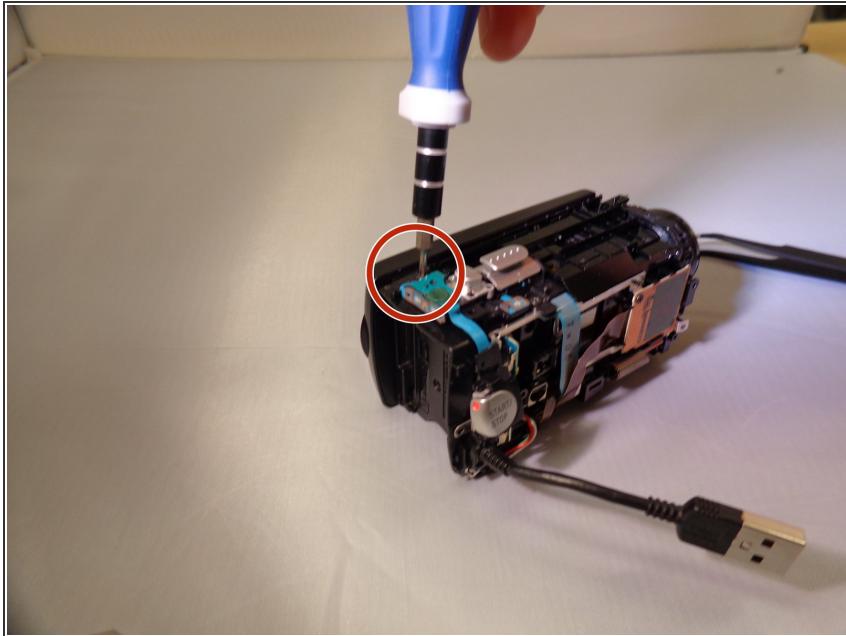

- Located by the zoom & picture control capturing button, unscrew one 5 millimeter screw located near the top, back left section of the camera.
- There are two flat blue wires keeping the buttons connected to the main assembly. Carefully set aside or unplug.

i This partially removes the zoom and picture capturing control.



Step 9

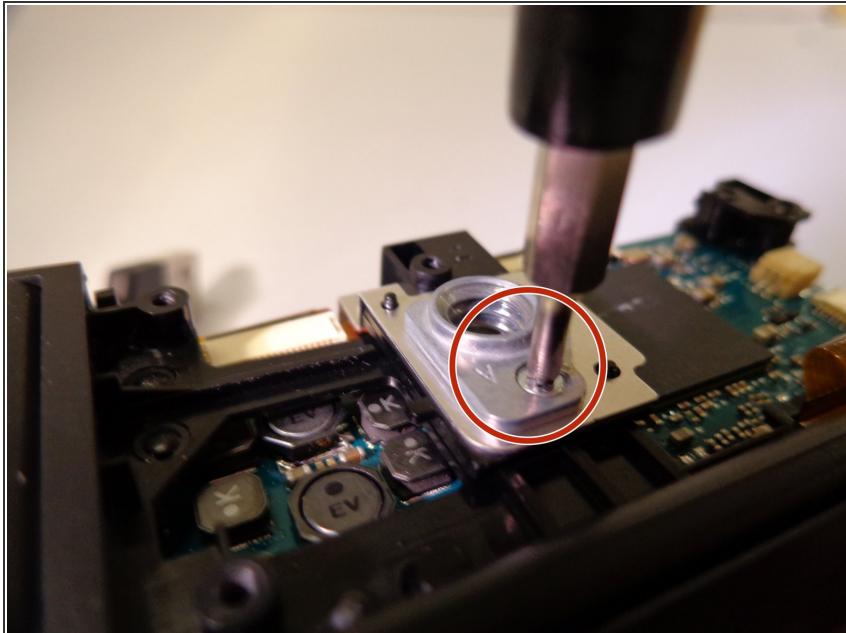

- Located near the tripod mount area, unscrew one silver five millimeter screw.


i Tripod mound comes off with mount assembly underneath.

Step 10

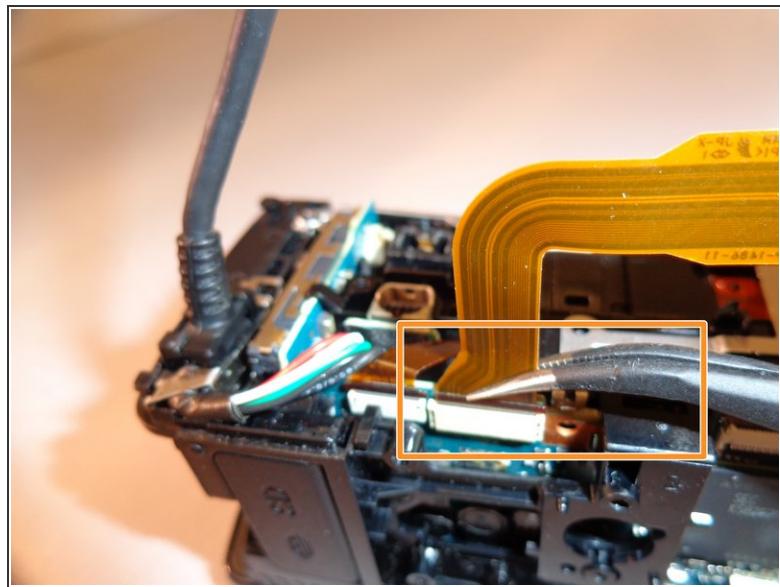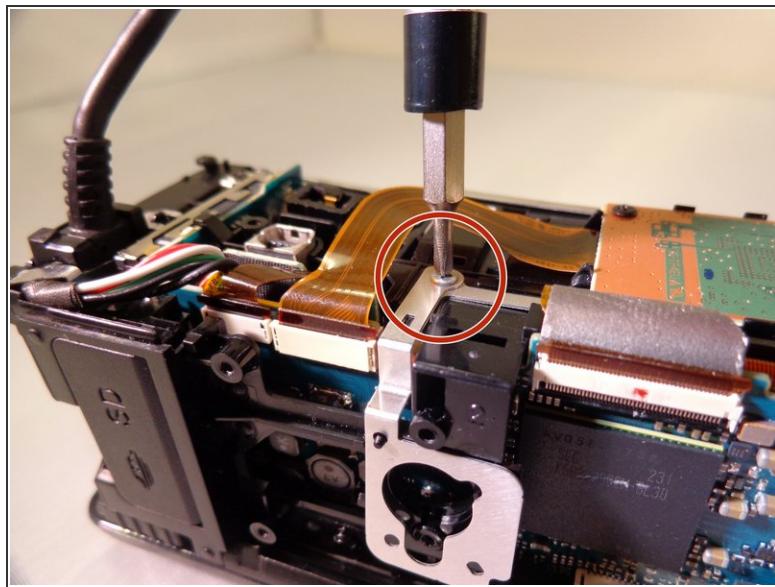


- Unscrew one silver 5 millimeter screw from the front right side of the camera, located where the orange mother board card is.
- Unplug the wire. Underneath will be another silver five millimeter screw.
- Using tweezers, release the clip attaching the main internal system to the main frame on the bottom of the camera. Allows the rest of the camera to be freely taken apart.
- The side panel will have cords running through the frame; unplug these and frame will be removable.

Step 11 — SD Card Slot

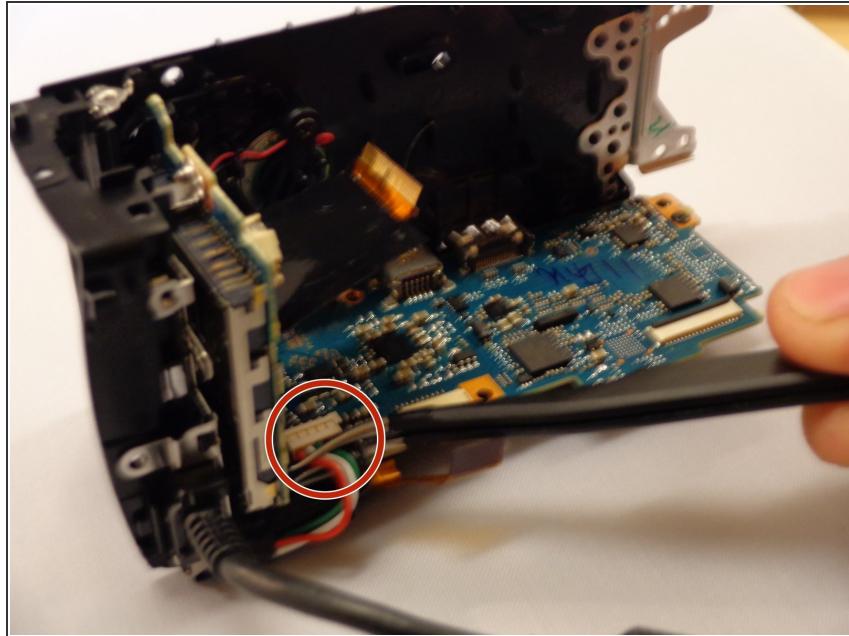


- Gently unplug the multi-color wires using tweezers.

Step 12

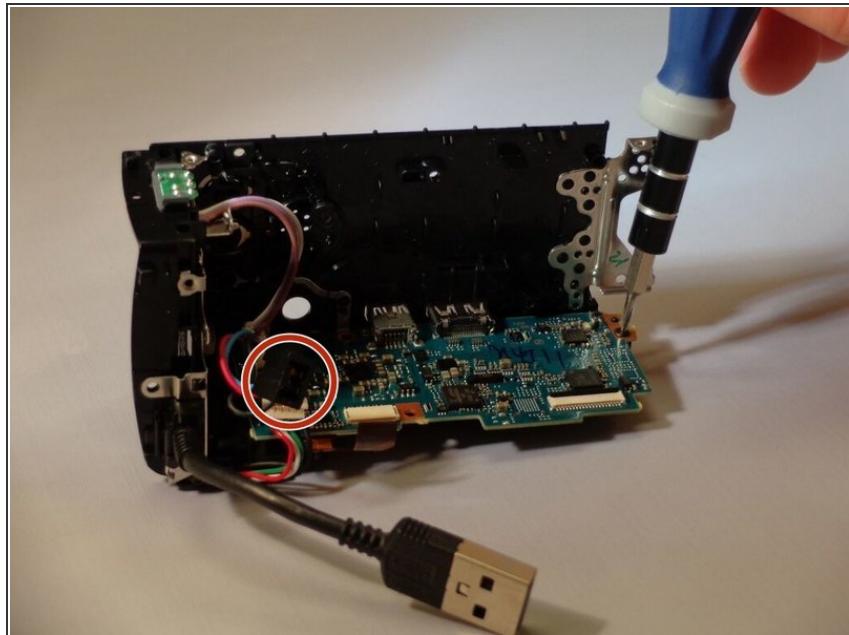


- Unplug the black ribbon located in the back of the camera connecting to the motherboard. Removes the mother board.

Step 13

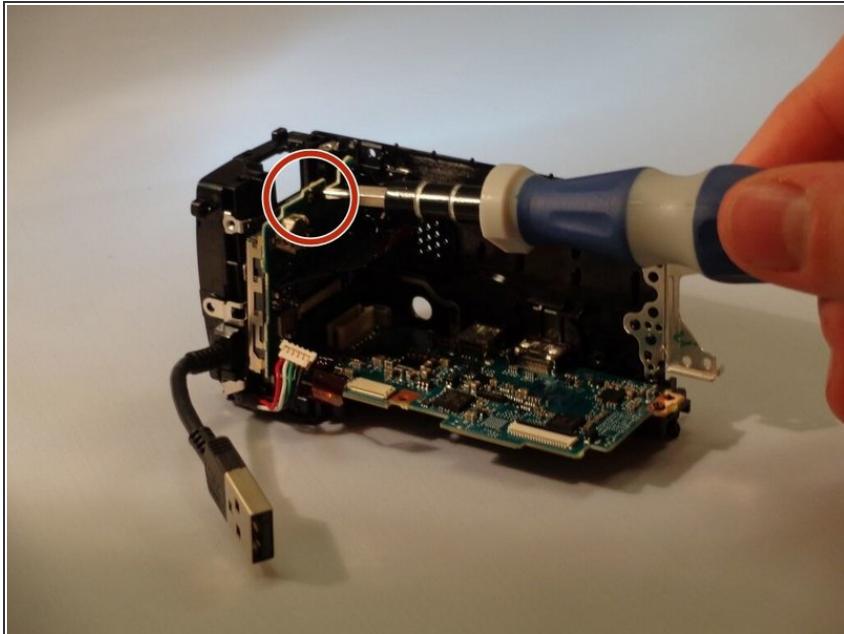

- Using a screwdriver unscrew a 3mm black screw in the middle connecting the SD card to the frame. Removes the SD card slot.

Step 14

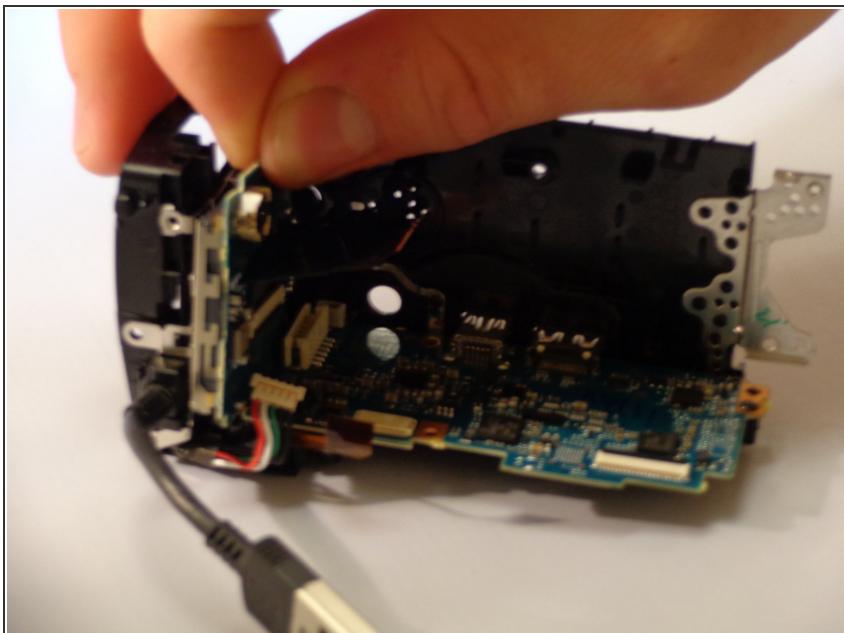

- Now remove the SD card assembly from the camera.

To reassemble your device, follow these instructions in reverse order.