



# Sony Handycam DCR-DVD103 Battery Replacement

This guide outlines how to remove the battery. Note: A battery was not available and is not pictured.

Written By: Lauren



This document was generated on 2019-10-15 08:43:50 AM (MST).


## Step 1 — Battery



**i** Note: This camera came without a battery, thus all pictures shown will be missing a battery.

- Locate the battery pack which can be found on the back side of the camera below the viewfinder.
- Push in the small button on the bottom of the camera, marked with the red circle, then slide the entire switch forward, marked with the yellow rectangle.

## Step 2

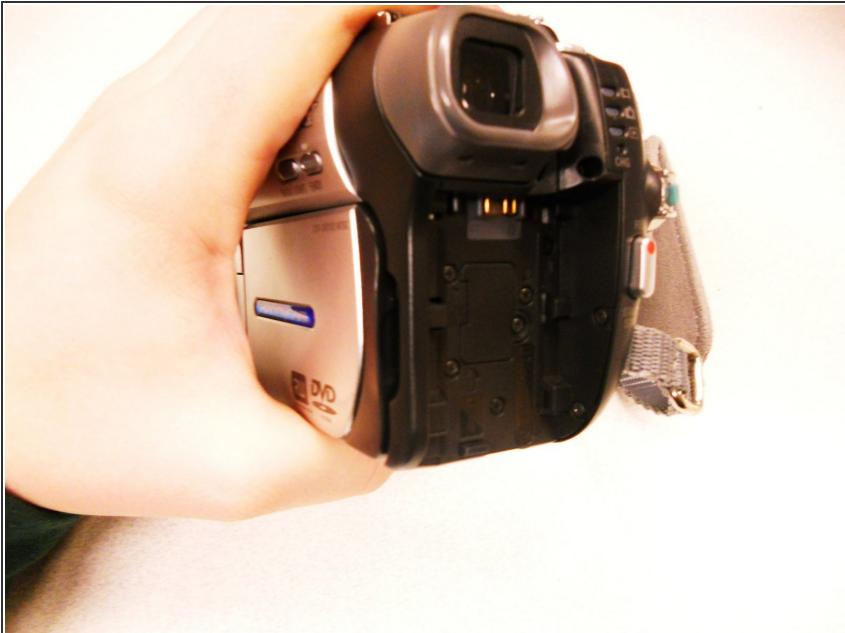

- Slide the battery out of the back of the camera.
- The battery can be inserted by sliding it back into place in a similar manner to how it was removed.

To reassemble your device, follow these instructions in reverse order.