



Sony Handycam DCR-DVD650 LCD Touchscreen Replacement


Written By: santos guitron



 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — LCD Touchscreen

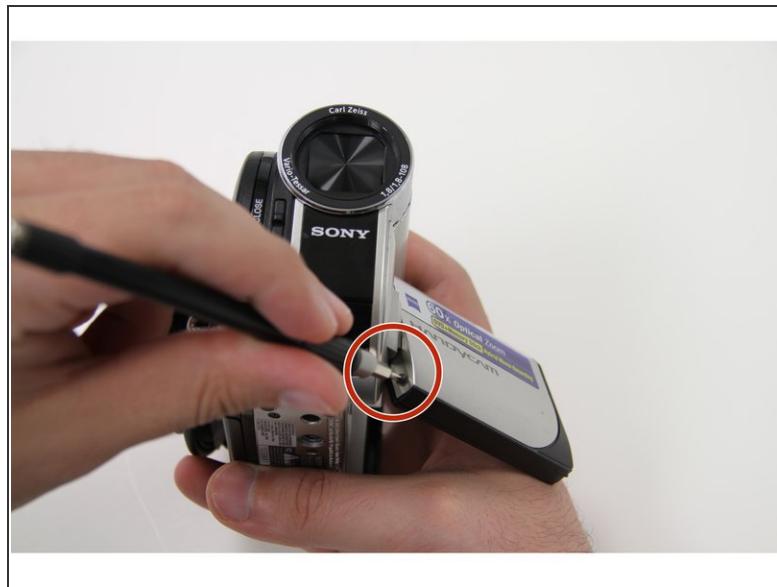

- Remove the first screw located on the bottom of the LCD screen by using a cross tip screwdriver.

Step 2



- Turn the LCD screen either clockwise or counterclockwise for a better view of the screw.
- Remove the second screw.

Step 3




- Place a plastic opening tool along the outside of the touchscreen.
- Follow the path to remove the panel.

Step 4



- Remove each of the ribbon cables off by lifting up on the black tab.
- Remove all ribbon cables before continuing unto the next step.

Step 5

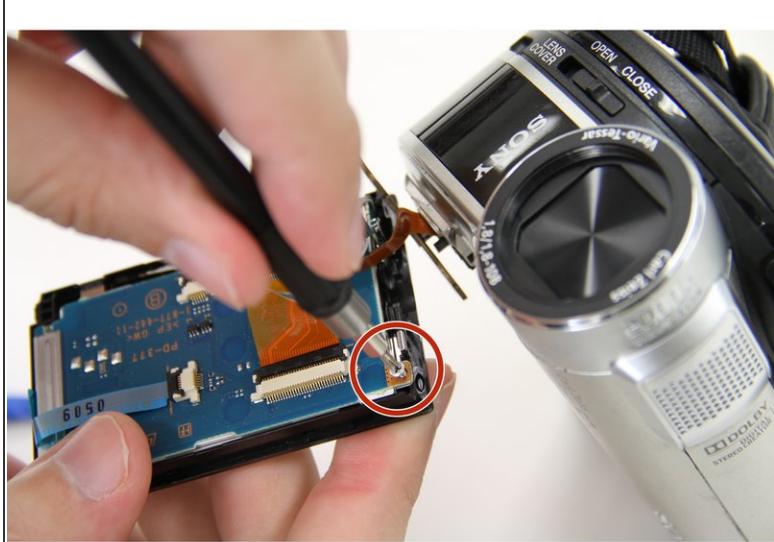

- Unscrew the final screw located on the top left corner.
- Remove the screen.

To reassemble your device, follow these instructions in reverse order.