



Sony Handycam HDR-CX220 Battery Replacement

Replace your camcorder Battery to make your camera function again!

Written By: Keven



INTRODUCTION

This step is very quick and easy. It is used when the battery needs to be replaced or removed.

Step 1 — Battery



- Push in the battery indicator.

Step 2



- Slide the battery out of the slot.

 To put the battery back in, line up the battery's metal part with the camera's and slide it in.

To reassemble your device, follow these instructions in reverse order.