



# Sony Handycam HDR-CX220 Display Screen Replacement

Replace the screen if it is broken/ defected, or if you notice that the images are distorted.

Written By: Keven



## INTRODUCTION

The replacement of the screen is needed if the image on the screen is not the desired image or if the screen is physically damaged.

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Battery



- Push in the battery indicator.


## Step 2



- Slide the battery out of the slot.

 To put the battery back in, line up the battery's metal part with the camera's and slide it in.

## Step 3 — Camera's Body

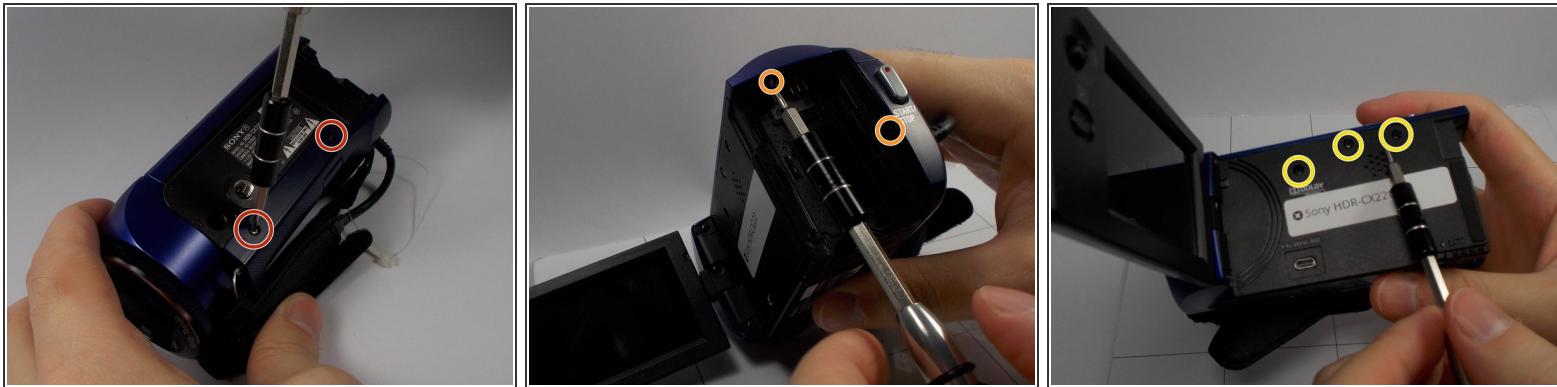


- Use the Phillips #0 screwdriver to remove the two 5mm screws.
- Use the Phillips #0 screwdriver to remove the two 5mm screws.
- Use the Phillips #0 screwdriver to remove the three 5mm screws.

## Step 4



- Use the plastic opening tool to loosen the plastic case of the camcorder.


## Step 5

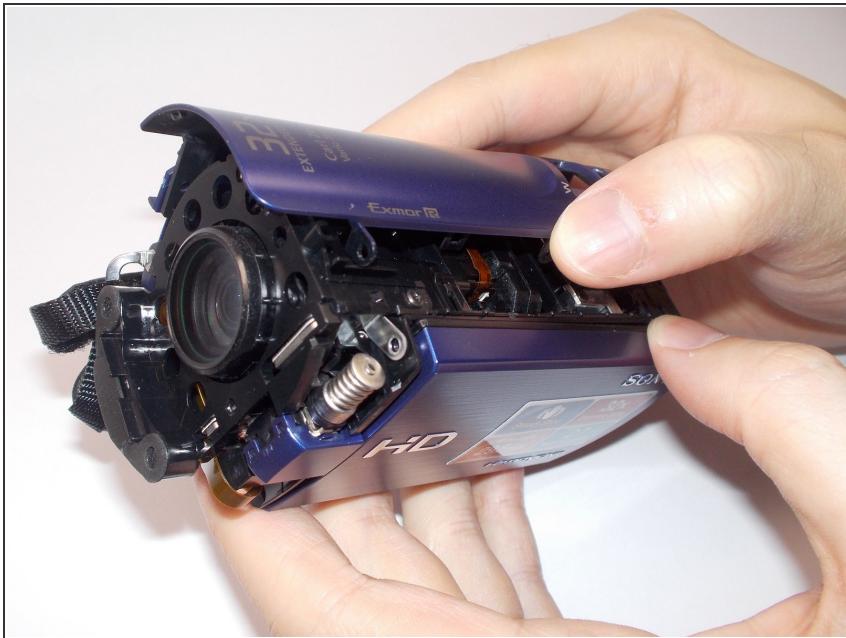

- Use your hands to remove the plastic case.

 Gently pull on the case not to damage anything internally.

## Step 6 — Display Screen

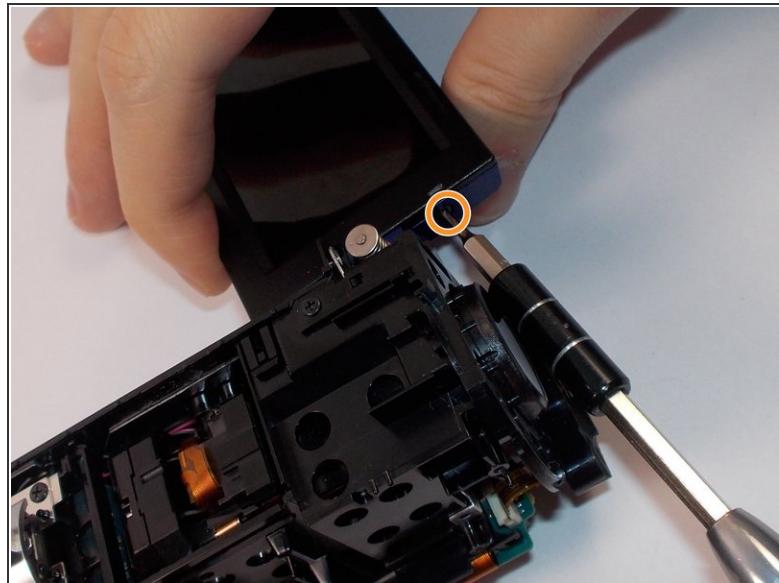

- Use the Phillips #0 screwdriver to remove the two (5mm) screws on the outer part and one (3mm) in the middle.
- In the second image, there is a second screw on the opposite side of the screen hinge. This screw is not shown, but must also be removed.



## Step 7



- Use the plastic opening tool to remove the plastic case protecting the screen


**⚠** Pull it gently not to damage anything under the case

## Step 8

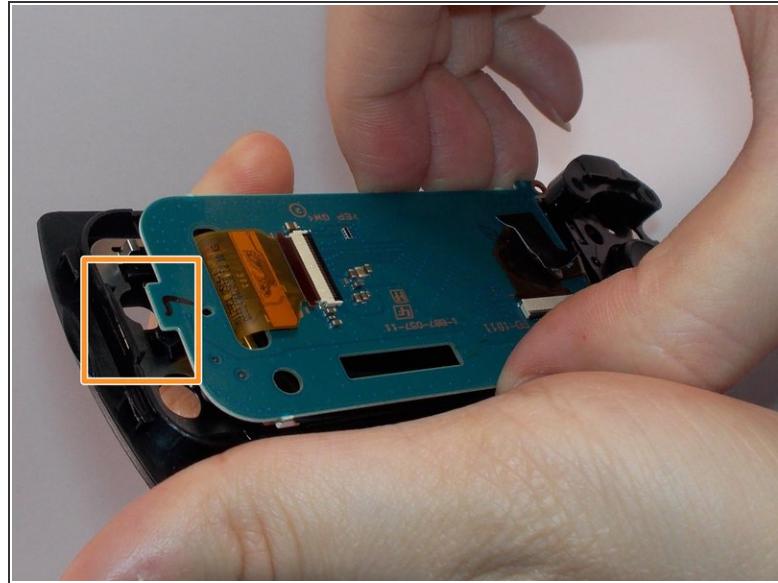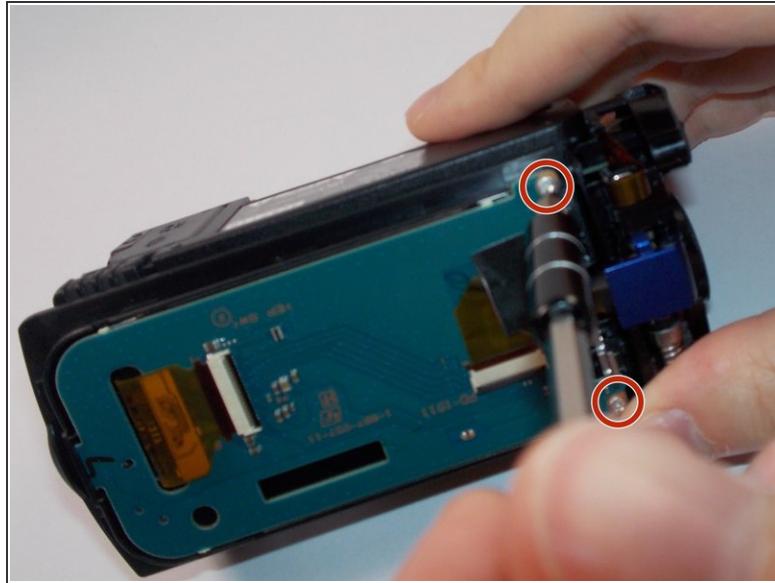

- Use the Phillips #0 screwdriver to remove the 2 screws shown
- Use your hands to carefully unhook the screen from the highlighted hook

## Step 9

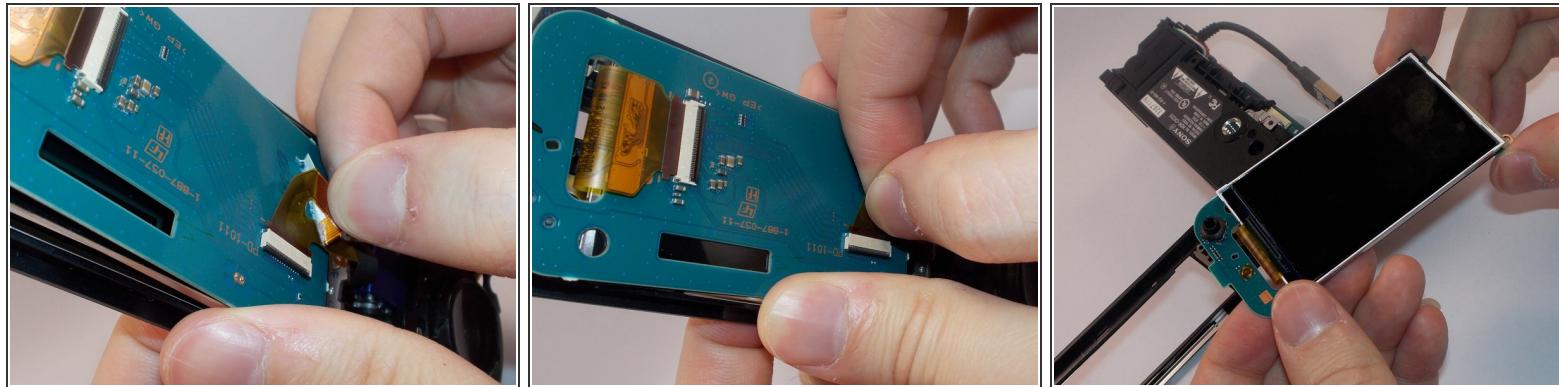

- Use your hands to carefully remove the tape
- After removing the tape, pull on the wire disconnecting it from the screen.

To reassemble your device, follow these instructions in reverse order.