



# Sony Handycam HDR-CX380 Battery Replacement

This guide will describe how to replace the battery of the Sony Handycam HDR-CX380.

Written By: John Santoro



## INTRODUCTION

Removing the battery is something that can be done by hand and should only take a few seconds to complete. Be sure to exercise care when removing it to avoid damaging the camera or injuring yourself.

## Step 1 — Battery



- Rotate your camera such that the underside is facing you and the lens is facing the ground.
- *(i)* You should be able to see the camera's label, and it should be rotated 90 degrees counterclockwise.

## Step 2



- Using your left thumb, push down the slider to the left of the SD card slot.
- *(i)* When inserting a new battery or reinserting the one you removed, you can ignore this step.

## Step 3



- Using your right index finger and thumb, pull the battery toward you and then away from the camera.

To insert a new battery or reinsert the one you removed, simply follow step 3 in reverse order and rotate the camera as described in step 1.