



# Sony Handycam HDR-CX405 Battery Replacement

Batteries may require replacing due to damage or overuse. In this guide we show the proper steps required to replace the battery.

Written By: Alexander Nery



This document was generated on 2019-09-20 02:15:35 PM (MST).

## INTRODUCTION

Batteries may require replacing due to damage or overuse. In this guide we show the proper steps required to replace the battery.

## Step 1 — Battery



- Place thumb on the ridge of the battery door hatch.
- Apply pressure horizontally to easily slide the door off.

## Step 2



- Using your thumb, push the small blue fastening clip down.
- Slide old battery out of camera.
- Release the blue fastening clip.

## Step 3



- Using your thumb, push the small blue fastening clip down.
- Slide the new battery into the camera.

## Step 4



- Push battery door down so it is level with the original positioning.
- Slide door shut.

Improper seating of the battery can lead to memory loss and even corruption, replacing a battery can be a simple way to solve sudden crashes of the device.

