


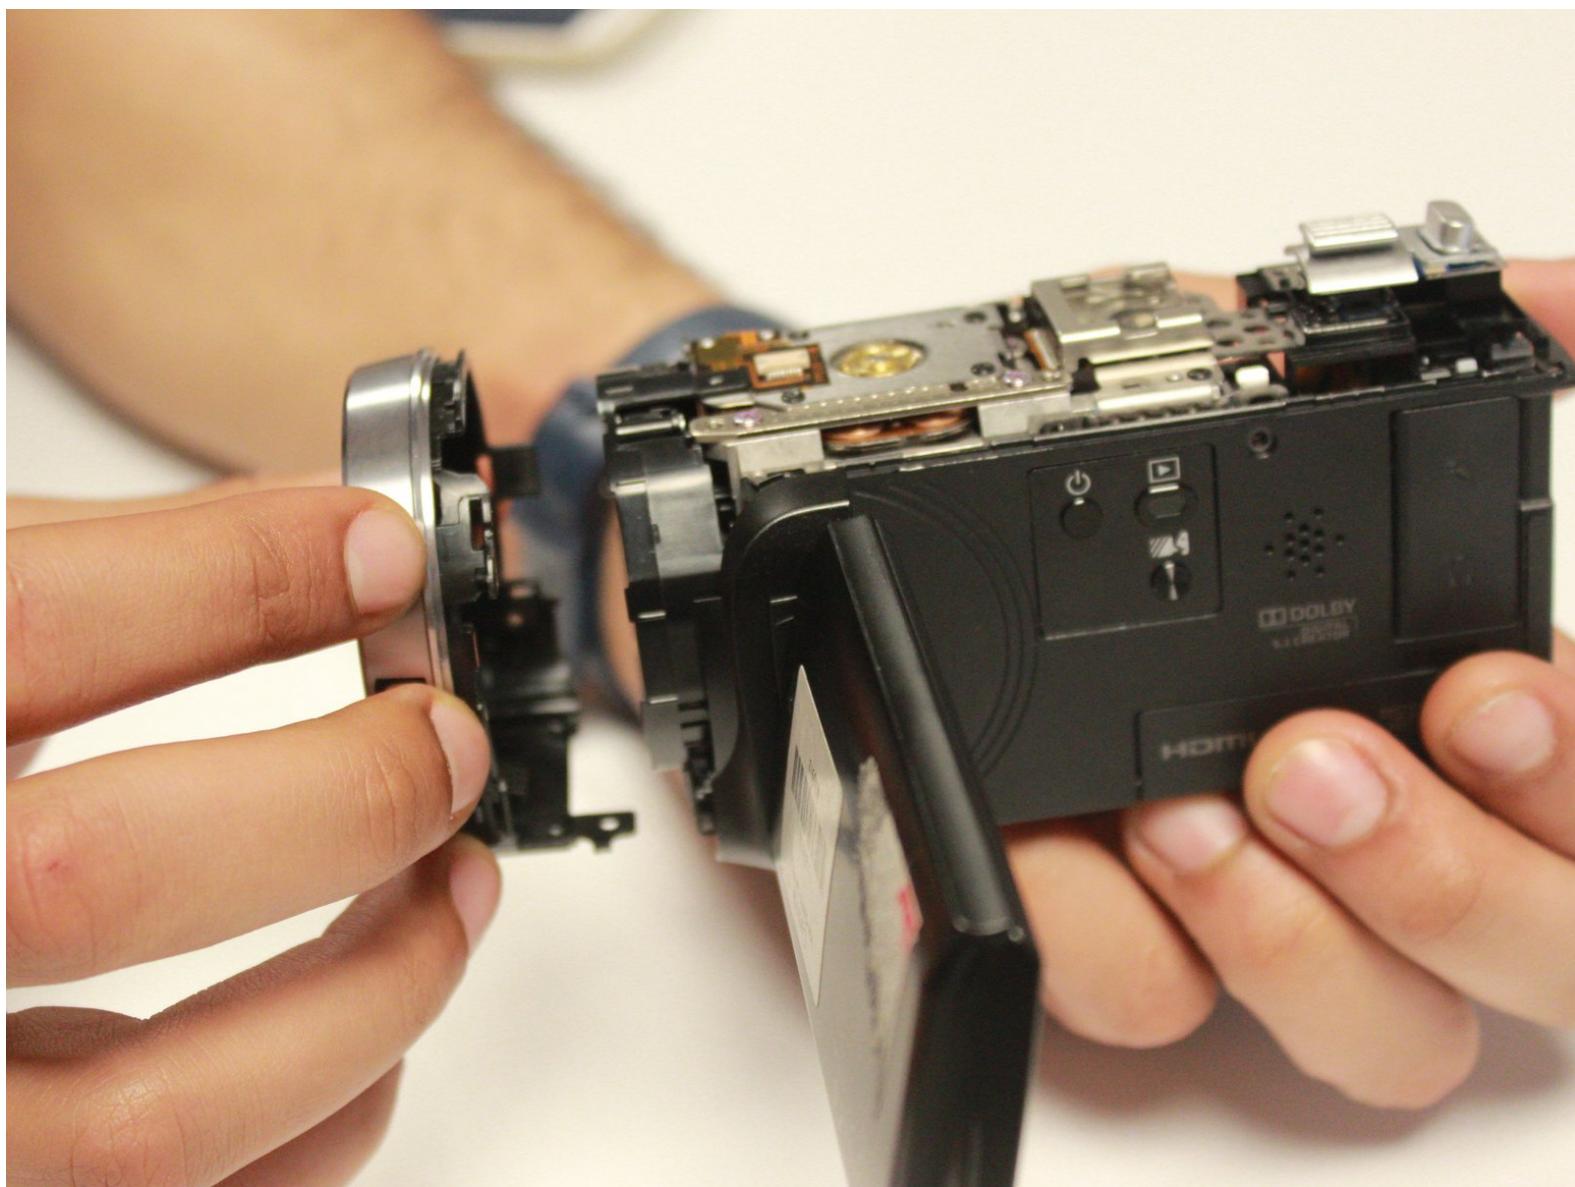

Sony Handycam HDR-CX675 Lens Cover Panel Replacement

This guide will help remove the lens cover panel from the front of the Sony Handycam HDR-CX675.

Written By: Laith Al Hinai



This document was generated on 2019-09-19 12:13:36 AM (MST).

INTRODUCTION

This guide will help you remove the lens cover panel without damaging the device.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [JIS Driver Set](#) (1)

Step 1 — Camera Shell




- The battery should be removed and oriented upwards.

Step 2



- Remove the side 4.5 mm JIS #00 screw using JIS Screwdriver
- Remove the 5.5 mm JIS #00 screw.

Step 3

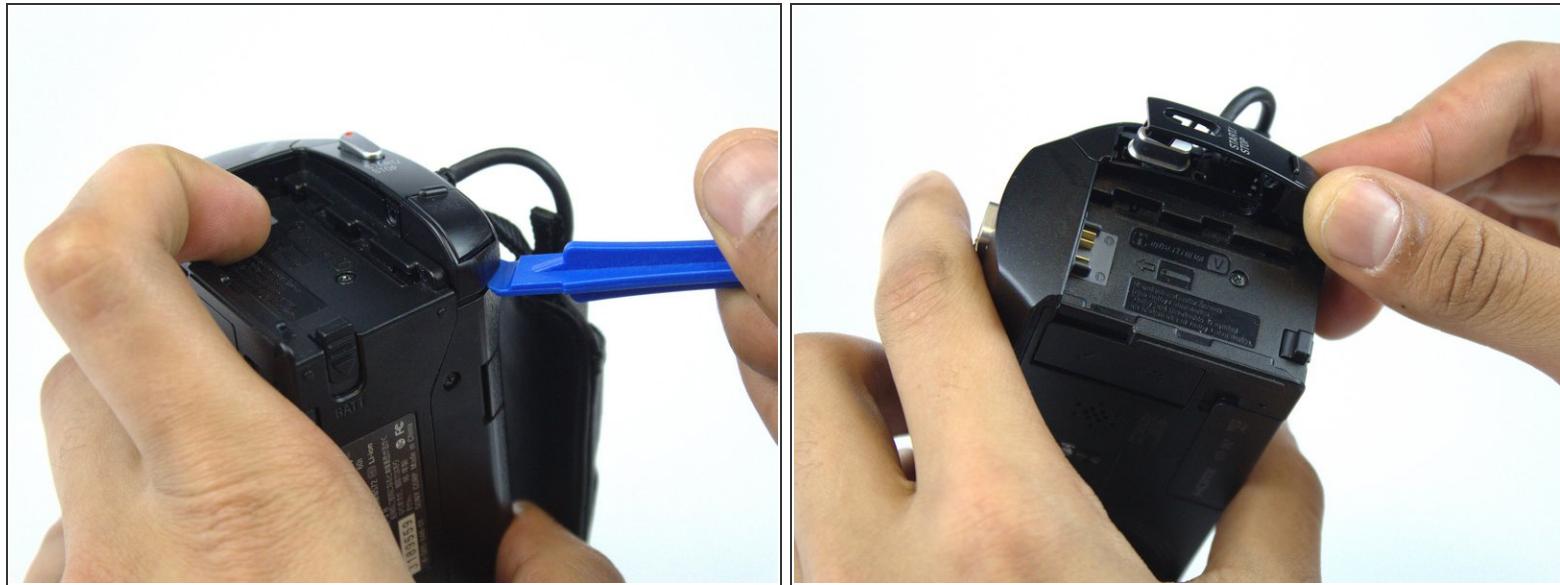

- Gently pry the plastic case surrounding the start/stop button free by using the blue plastic opening tools.
- Remove the casing using your thumb and index finger.

Step 4



- Turn the camera around and flip open the LCD screen to expose the side panel.
- Remove the 5.5mm #00 screw using the J00 head screwdriver.

Step 5




- Turn the camera to the handgrip side and unscrew two of the 5.5mm JIS #00 head screws using the JIS #00 head screwdriver.

Step 6



- Remove the two 5.5mm JIS #00 screws with the bottom of the camera facing up.

Step 7

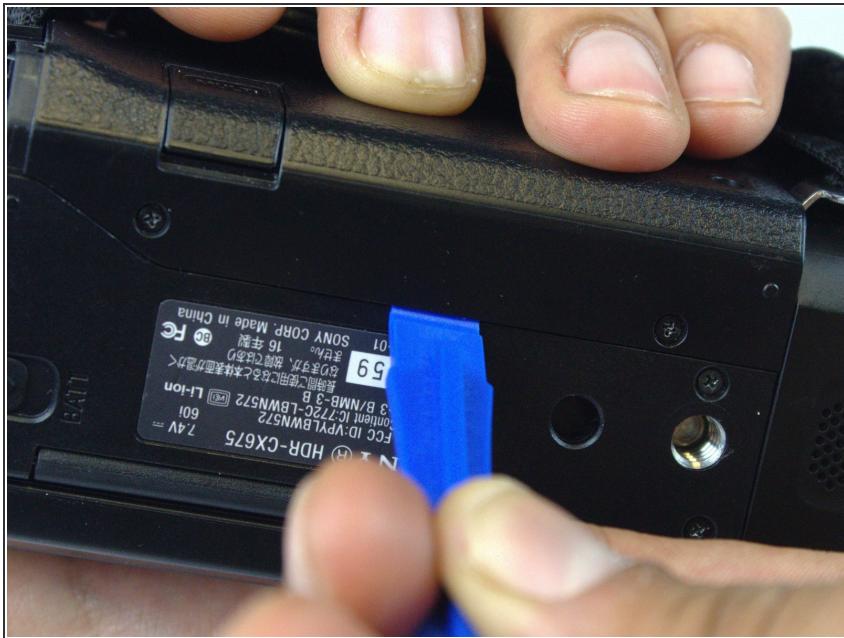


- Turn the camera around in a way that the bottom of the camera is facing you.
- Use the blue opening tool to gently remove the camera shell off of the camera.

Step 8 — Lens Cover Panel



- Using the blue plastic opener smoothly to take the camera shell off.

Step 9

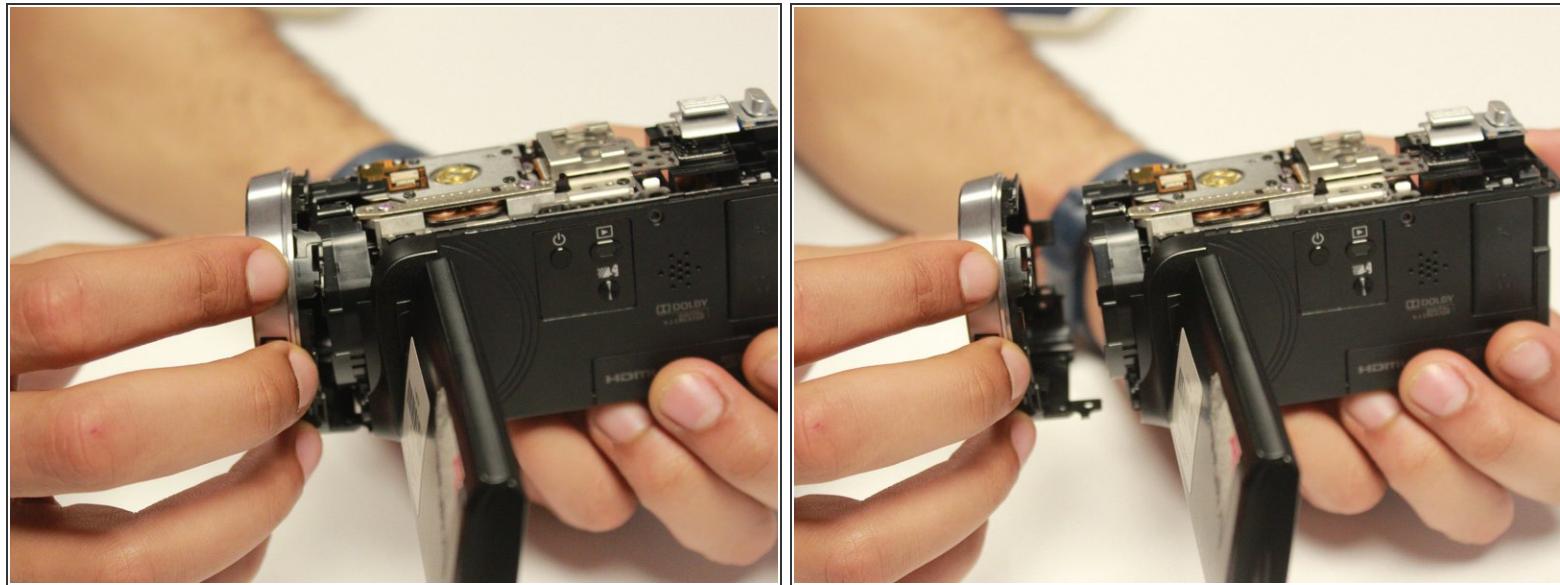

- Let the lens of the camera be pointed to your left.
- Keep holding the camera with your right hand then gently remove the lens cover panel with your left hand.

To reassemble your device, follow these instructions in reverse order.