




# Sony Handycam HDR-HC1 LCD Replacement

Replace the LCD on your Sony Handycam HDR-HC1.

Written By: Ella Snyder

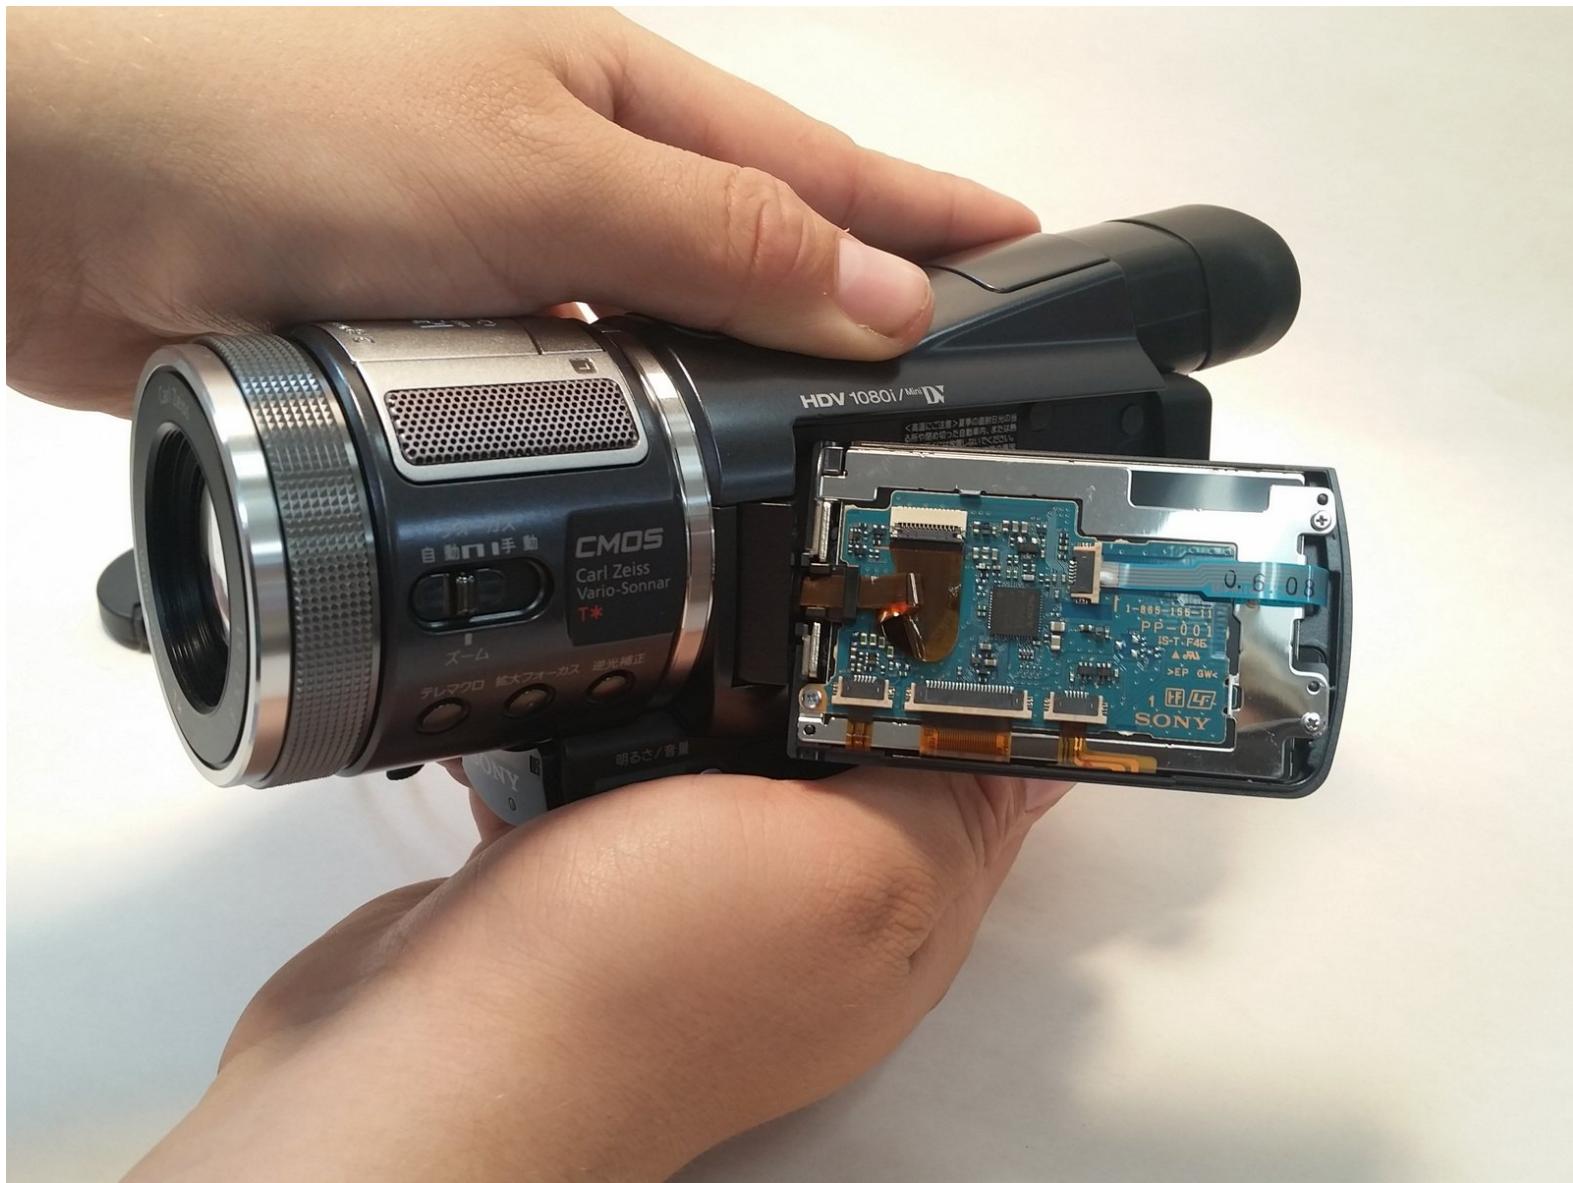


## INTRODUCTION

Use this guide to replace the LCD screen of the Sony Sony Handycam HDR-HC1 video camera.

### TOOLS:


- [iFixit Opening Tools](#) (1)
- [Phillips #000 Screwdriver](#) (1)

## Step 1 — LCD

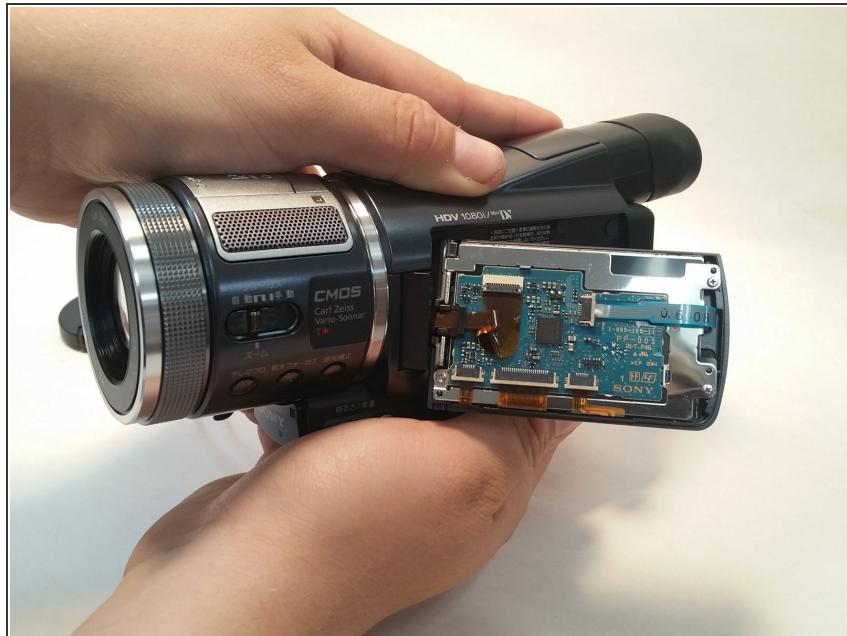


- Take off the top and bottom screws on the LCD shell

## Step 2

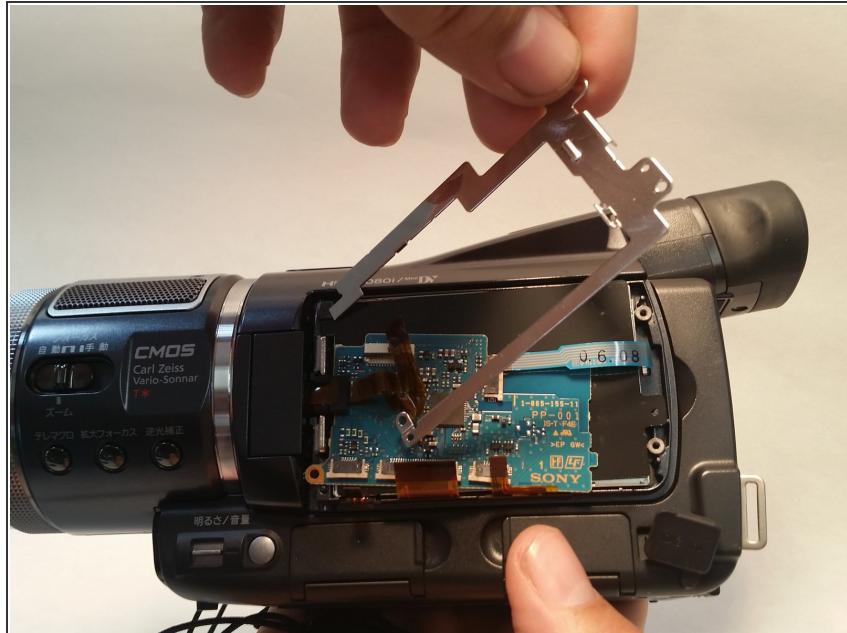


- Remove screws from the metal shield that is situated on the microchip

## Step 3

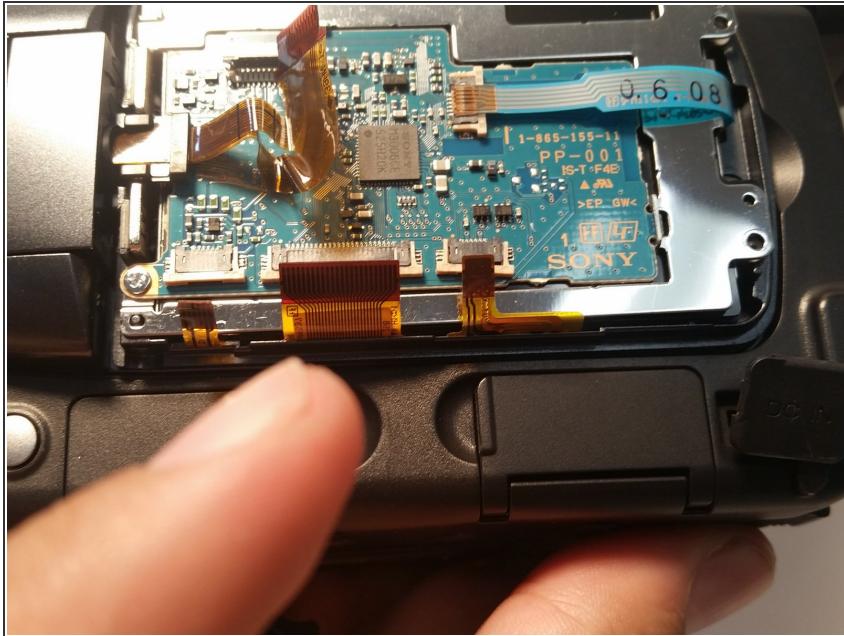


- Remove the ribbon connections from the microchip

## Step 4

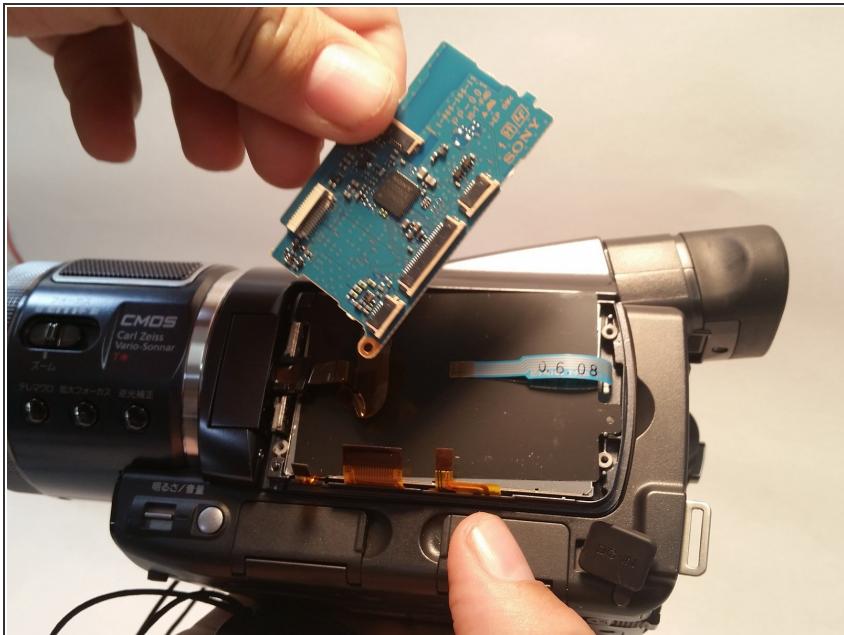

- Remove the microchip

## Step 5

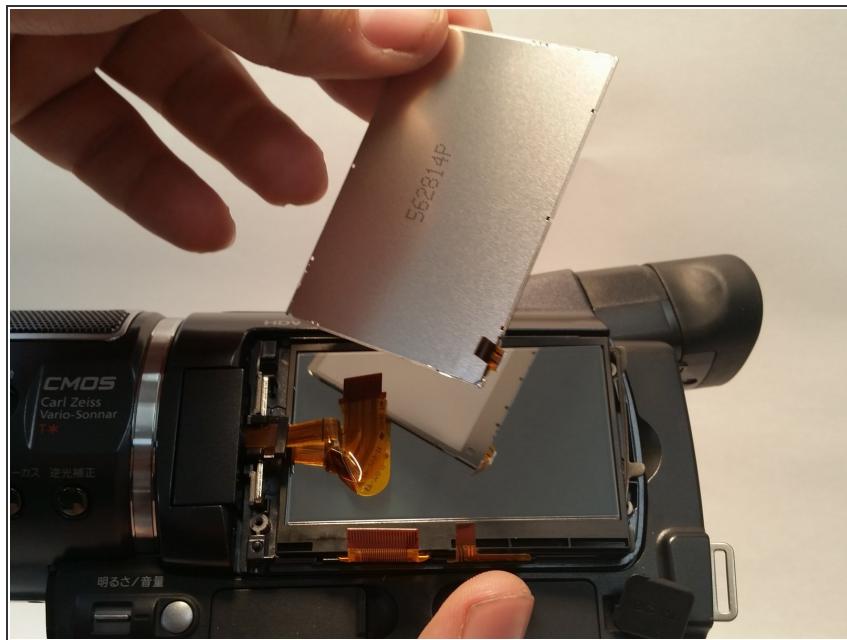

- Remove the LCD in the shell

## Step 6



- Replace the LCD with a new one and work backwards on the steps to put the video camera back together and you have completed the iFixit Guide

To reassemble your device, follow these instructions in reverse order.