



Sony Handycam HDR-XR500V Door Replacement

These instructions will guide you to disassemble the door and in reverse order will help you also reassemble it

Written By: Amber Han



This document was generated on 2019-09-20 01:15:42 PM (MST).

INTRODUCTION

These instructions will guide you step-by-step to remove the door in order to get to the speakers inside

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Opening LCD screen



- Pull on tab away from the camera by applying pressure with index finger.

Step 2



- Next, remove the three 3 screws shown with the red markers.

Step 3



- Place the camera on a flat service, so that the strap is downward and the lens is facing you.
- First, lift up the connector.
- Then pull it back.
- Remove the connector from the device.

Step 4




- Position the camera so that the screen tab is pointing towards you.
- Twist the tab clockwise one notch.
- Remove the single screw.

Step 5



- Remove the two screws on the control board.

Step 6

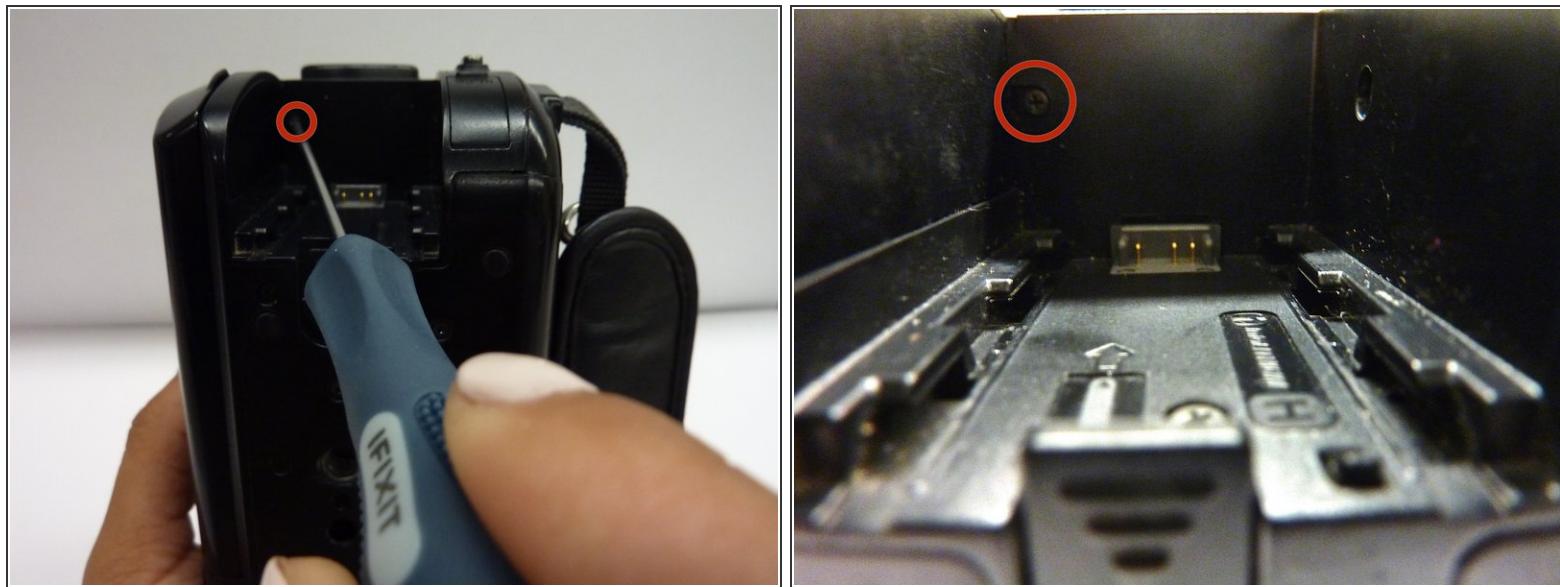

- Place the camera so that the lens is facing downward and the battery compartment is facing towards you.
- Remove the single screw.

Step 7



- Lay the device on its side so it is resting on the strap and the bottom of the camera is facing you.
- Remove the five screws.

Step 8



- Close the LCD screen door.
- Turn the camera to the eye piece and battery compartment is facing you.

Step 9



- Pull the entire cabinet panel away from camera.

Step 10



- You have disassembled the cabinet door and got to the speakers.

i Do not try to pry off the entire door, it can remain slightly attached.

Your door will now be disassembled in order to replace parts inside and these steps in reverse order will also help you put the door back together