



Sony M-430 Microcassette-Corder Battery Replacement

Replace the batteries in your Microcassette-corder to bring it back to life.

Written By: Stephen



Step 1 — Battery



- Find the arrow on the battery cover on the back of the device.
- While pressing down on the arrow, slide the cover towards the bottom of the recorder until it clicks.

Step 2



- Lift the cover and remove the batteries.

To reassemble your device, follow these instructions in reverse order.