



# Sony Mavica MVC-CD1000 Battery Replacement

Use this guide to replace the batteries in your Sony Mavica MVC-CD1000.

Written By: Kartik Pathak



## INTRODUCTION

If your camcorder is failing to record or take any photos, your device may be low on charge. When the charge is fully depleted, it is time to replace the batteries. This is a short procedure on how to replace the battery in the Sony Mavica MVC-CD1000.

## Step 1 — Battery



- Rotate the camera so that the bottom cover is facing you.

## Step 2



- Press the button down and the battery panel will open up.

## Step 3



- Remove the batteries form the device.

To reassemble your device, follow these instructions in reverse order.