



Sony Mavica MVC-CD1000 Flash Pad Replacement

Use this guide to replace the flash pad on your Sony Mavica MVC-CD1000.

Written By: Kartik Pathak



INTRODUCTION

This is a short procedure on how to replace the flash pad in the Sony Mavica MVC-CD1000.

Step 1 — Flash Pad



- Press the button to expose the flash panel.

Step 2



- Pull up the flash panel pad to access the rest of the flash assembly.

To reassemble your device, follow these instructions in reverse order.