



Sony Mavica MVC-CD1000 LCD Screen Replacement

This guideline helps the user to replace the LCD screen on the back of the Sony Mavica MVC-CD1000.

Written By: Jiateng Mao



This document was generated on 2020-04-05 08:35:50 PM (MST).

INTRODUCTION

If your camera is not properly displaying images on the screen and you've already replaced the batteries, the screen may be faulty. In addition, if there are dead pixels on your screen, you may need to replace the screen for your device. Refer to this guide if the camera's LCD screen is not working or there is a problem with it.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Suction Handle](#) (1)

Step 1 — LCD Screen



- Gently open this panel using a plastic opening tool or your hands.

Step 2



- Use the suction cup to remove the cover and pull it out of the device.

Step 3



- Loosen and remove the screws using the screwdriver and locate the LCD board as shown in the photos.

Step 4



- Remove the motherboard by pulling up the panel and remove the LCD screen from the device.

To reassemble your device, follow these instructions in reverse order.