



Sony NEX-7 Lens Mount Replacement

If your lens mount is damaged, you will be able to replace it using this guide.

Written By: Jay Miley



INTRODUCTION

Removing the lens mount is a quick process that is fully outlined by this guide.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Battery



⚠ We need to turn off the camera because we are removing components that could get damaged if the power is still on.

- If the camera is on, rotate the power switch on top of the camera counterclockwise to turn the camera off.

Step 2



- Flip the camera over such that the power switch points down.
- Slide the switch on the bottom of the camera grip towards the lens to open the battery door.

Step 3



- With the battery door open, push the blue lever in the battery compartment to release the battery.

Step 4 — SD card



- To the left of the battery compartment, the SD card needs to be pushed down slightly with your

fingers, which will cause the card to eject.

- Pull the card out with your fingers.

Step 5 — Lens



- First, turn the camera upside down.
- Press the button located next to silver lens mount and rotate the lens counterclockwise.
- Pull the lens away from the camera body.


! After removing the lens, replace the lens or attach the body cap as soon as possible to prevent damage to the shutter.

Step 6 — Lens Mount



- With the front of the camera facing you, remove the four silver #00 Phillips screws from the metal lens mount.

Step 7

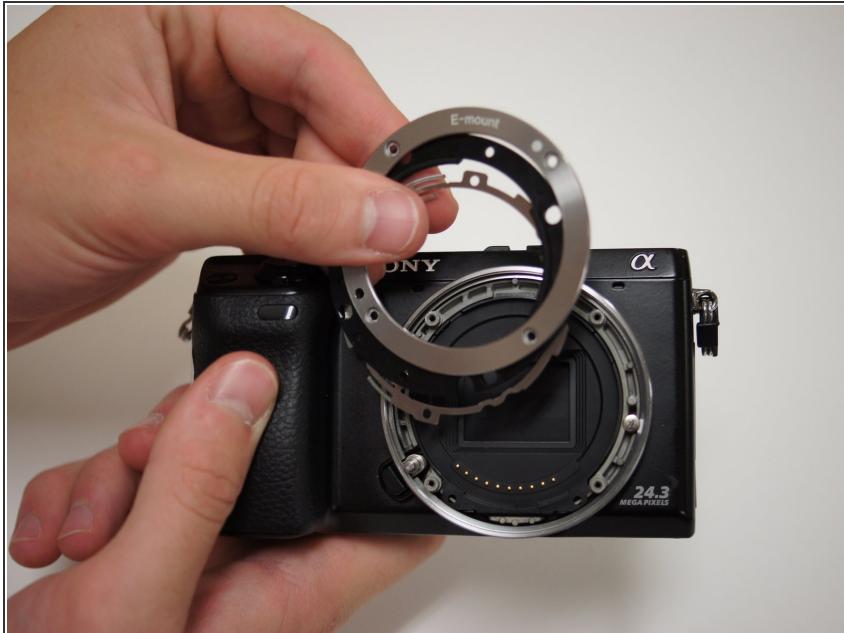

- Remove these three layers from the lens mount with your finger or by turning the camera face down.

Step 8



- Remove the two newly visible #00 screws within the metal ring.

Step 9



- Remove the final metal ring from the mount.

To reassemble your device, follow these instructions in reverse order.