



# Sony NEX-7 SD card Replacement

If you need to swap SD cards while on a shoot or update your cameras firmware, you can just remove and replace the SD card instead of plugging it in to your computer.

Written By: Jay Miley



## INTRODUCTION

This guide will show you how take out the SD card, which stores pictures and videos.

## Step 1 — Battery



**⚠** We need to turn off the camera because we are removing components that could get damaged if the power is still on.

- If the camera is on, rotate the power switch on top of the camera counterclockwise to turn the camera off.

## Step 2



- Flip the camera over such that the power switch points down.
- Slide the switch on the bottom of the camera grip towards the lens to open the battery door.

## Step 3



- With the battery door open, push the blue lever in the battery compartment to release the battery.

## Step 4 — SD card



- To the left of the battery compartment, the SD card needs to be pushed down slightly with your

fingers, which will cause the card to eject.

- Pull the card out with your fingers.

To replace the SD card, press the card into the slot until it clicks. It will stay on its own. If it doesn't go in all the way, make sure the gold contacts are down and towards the battery door.