



# Sony PS-LX300USB Needle Replacement

The guide teaches ho to replace the needle/stylus on the turntable.

Written By: Christopher Slaughter



## INTRODUCTION

The Needle will need to be replaced after about 500 hours of usage. Replacing the needle after this time is necessary to maintain proper sound quality. If you are experiencing low sound quality, the needle may need to be replaced.

### TOOLS:

- 2 Hands (1)

### PARTS:

- replacement needle (1)

## Step 1 — Needle



- Flip the needle cover down.
- Grasp the needle cartridge between two fingers.
- Pull the cartridge down and towards you to remove it.

## Step 2



- Angle the cartridge diagonally inside the tone arm.
- Push up and into the tone arm until you hear a click.