




Sony RDR HX750 HX950 Disassembly

How to open Sony RDR HX.

Written By: Cafony

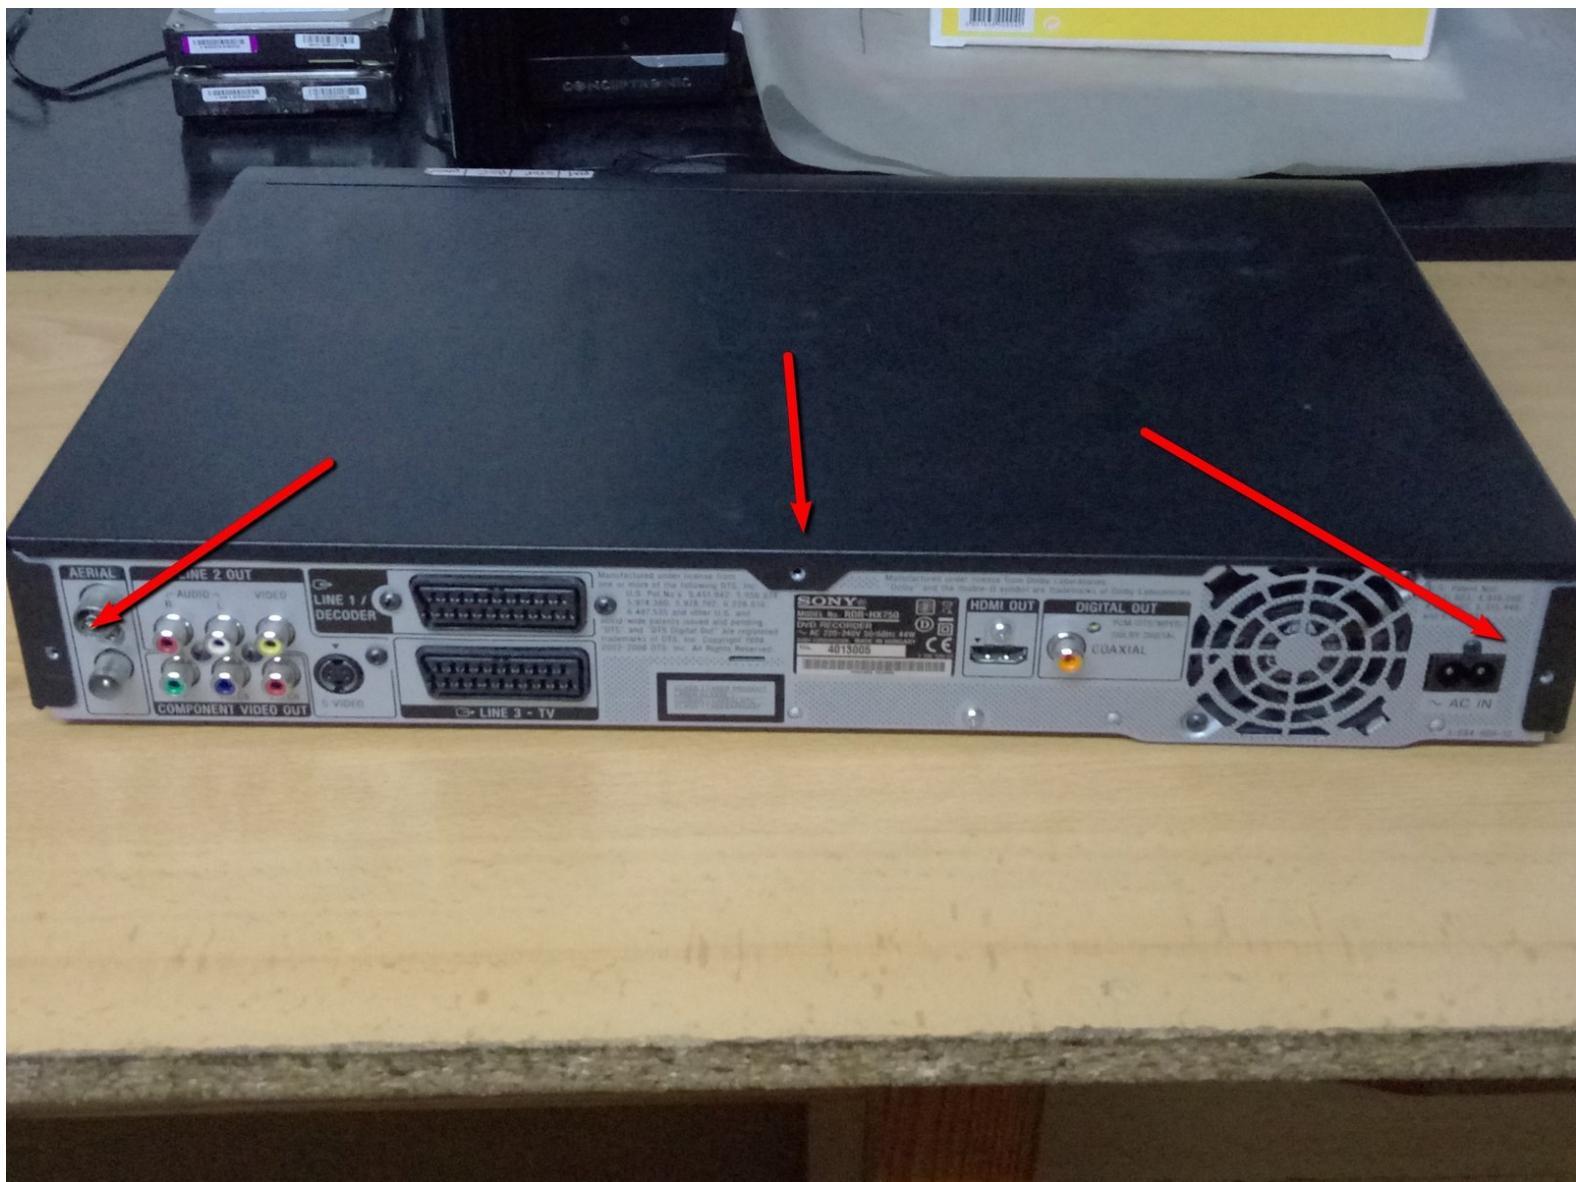

INTRODUCTION

This guide will show how to remove the hard drive and the optical drive for the Sony RDR HX.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Remove Sony RDR HX750 cover



- Remove Screws from back and sides

Step 2 — Remove Hard Disk




- Remove the screws that old hard drive
- Unplug the cables from disk
- Remove screws from back side of hard drive

Step 3 — Remove DVD player




- Remove screws from back
- Remove Screws from dvd cover
- Remove screws from plastic cable holder

Step 4 — Remove front Panel

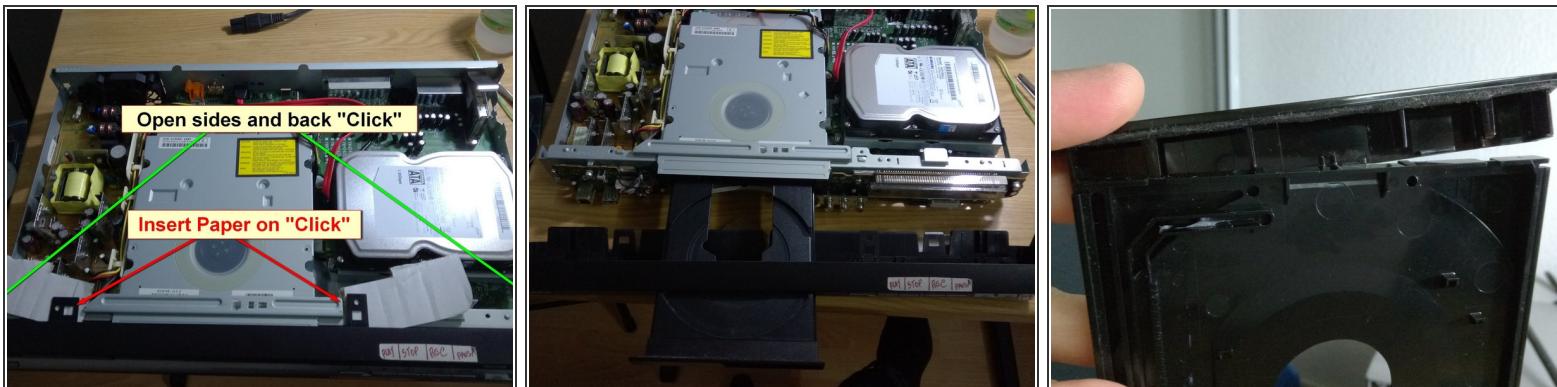

- Insert little paper under each "click" to remove front panel.
- When each "click" is lose, push front panel gently, it will go out easily.
- The table of compact disk has a little plastic in front that goes out "up" with a "click"

Step 5 — Remove DVD block

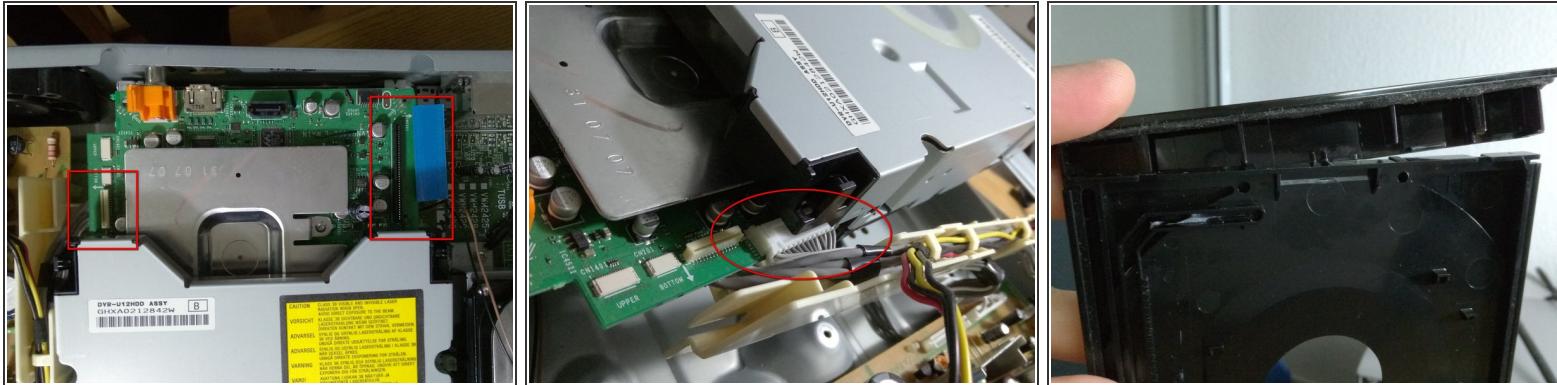


- Unplug the cables show on foto.
- Desconect this cable hided on the side.
- Remove the little piece on cd reader, It has a click.

Step 6 — Remove cover of dvd player



- Under the dvd block remove screws
- Then remove screws on board
- Now you can access the laser

Step 7 — Sony RDR HX750 laser

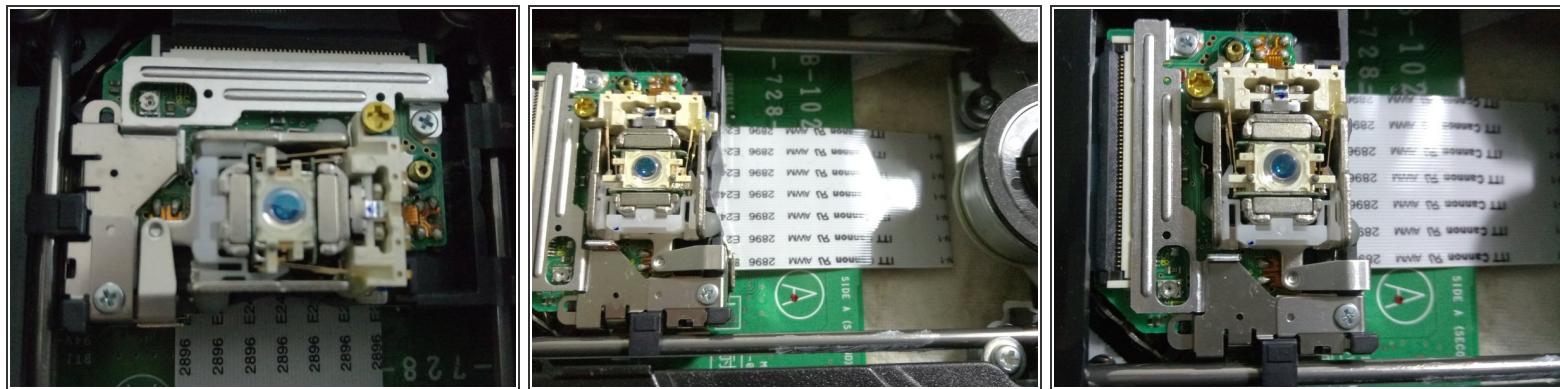

- Inserir instruções aqui.

To open this dvd recorder folow this tutorial