



Sony SLT-A57 Battery Replacement

We want to take out old faulty battery and replace it with a brand new charged one.

Written By: john bogart





PARTS:

- [Sony SLT-A57 Replacement Batteries](#) (1)
-

Step 1 — Find battery capartment



- Flip the camera upside down and look for the arrow pointing to the word battery.

Step 2 — Open battery compartment



- Push the arrow down to side to open the compartment.

Step 3 — Replace battery



- Put the new Sony Alpha SLT-A57 Digital Camera Battery in with negative side on top of the spring. Then shut the compartment slide.

To reassemble your device, follow these instructions in reverse order.