




# Sony SRS-X55 Button Circuit Board Replacement

Replace the button circuit board of your Sony SRS-X55 speaker.

Written By: Crosby Taylor

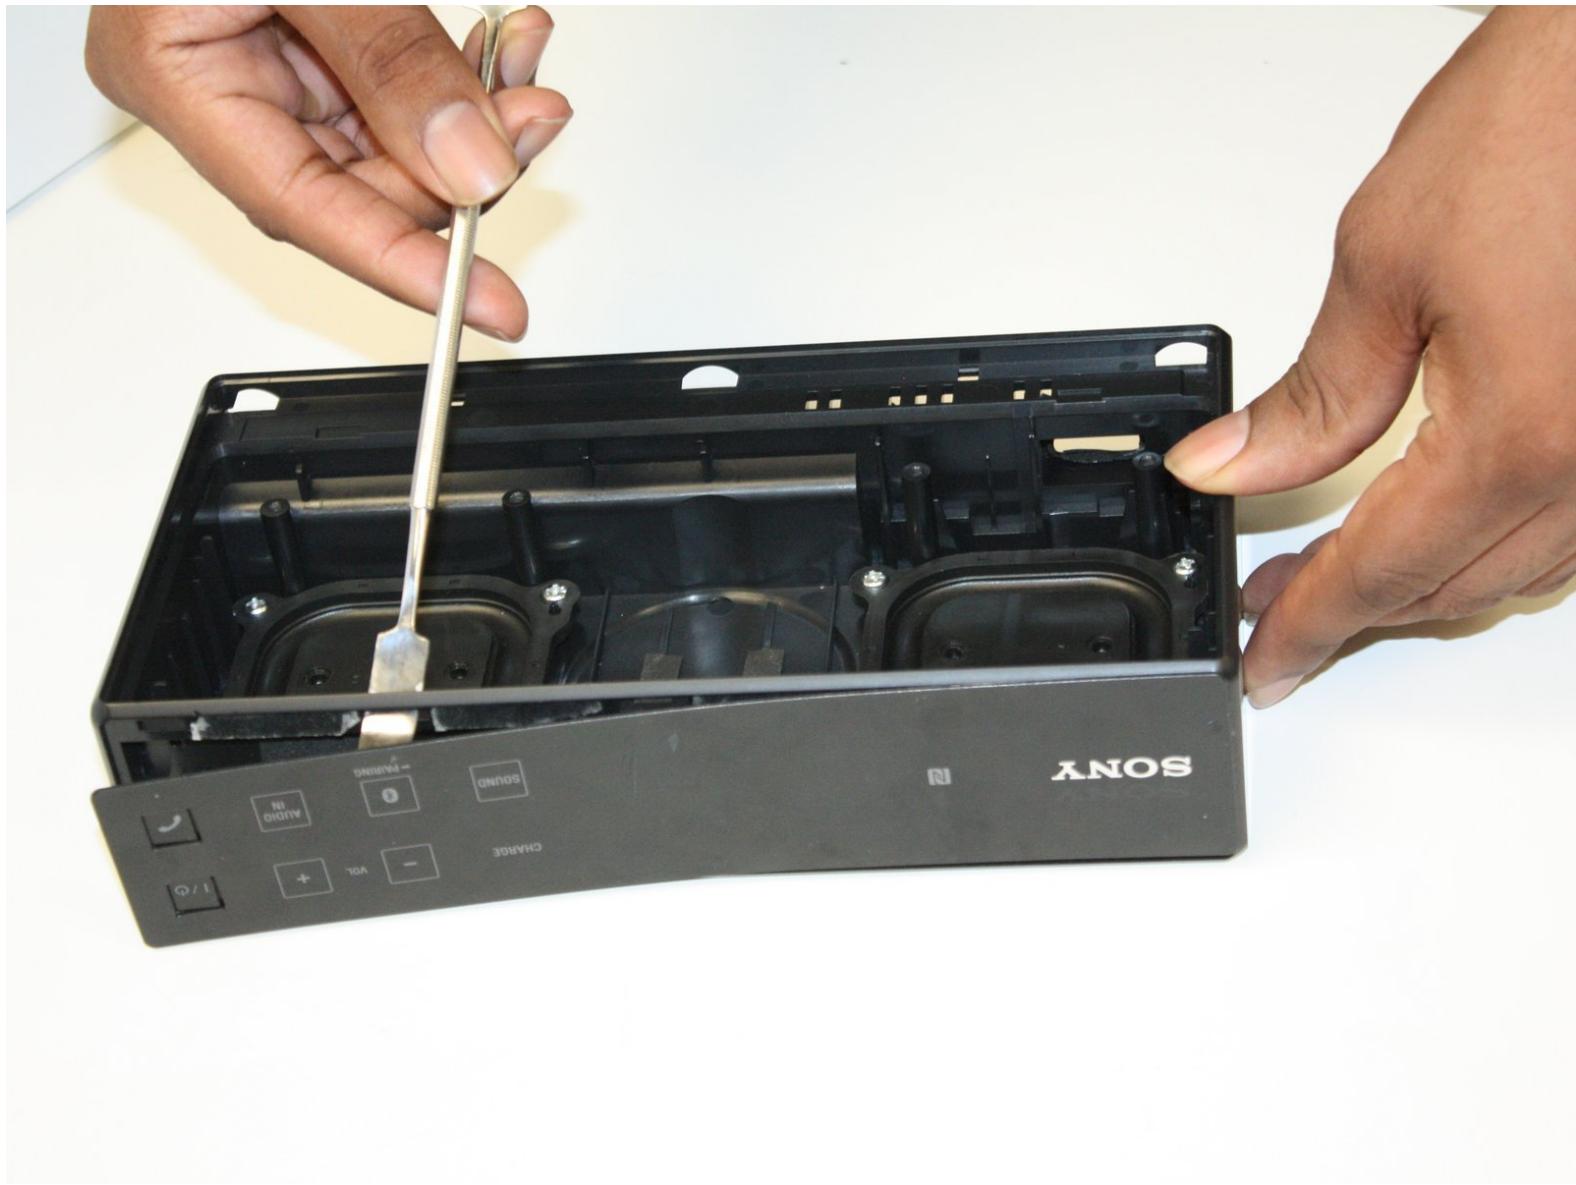

## INTRODUCTION

If the controls or indicator LEDs of your Sony SRS-X55 have stopped working, use this guide to replace the speaker's button board.

### TOOLS:


- [Spudger \(1\)](#)
- [Metal Spudger \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)

## Step 1 — Battery




- Remove the six screw covers with a spudger.
- Remove the six 11 mm Phillips screws from the bottom panel.
- Remove the bottom panel of the speaker.

## Step 2

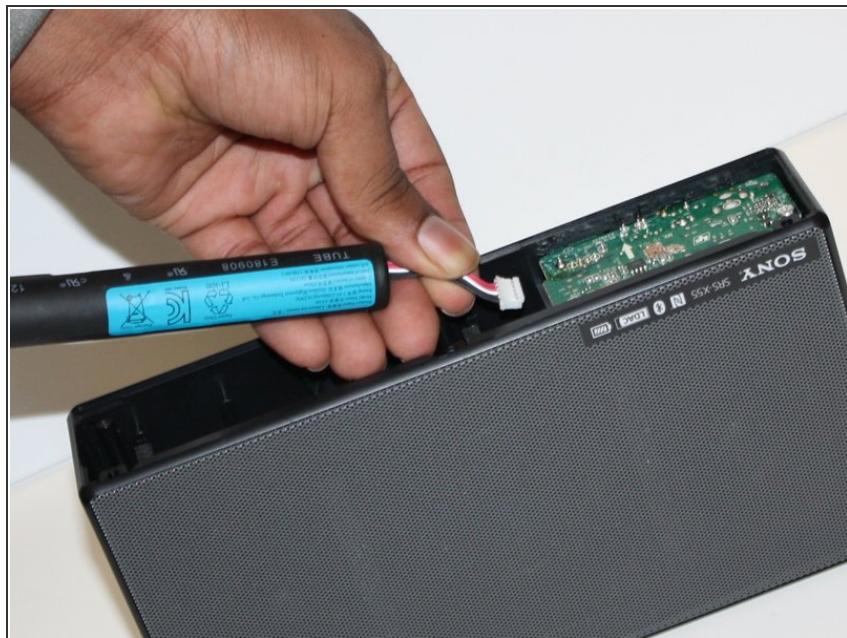

- Disconnect the battery cable from the motherboard.
- Remove the battery.

## Step 3 — Speaker Panel

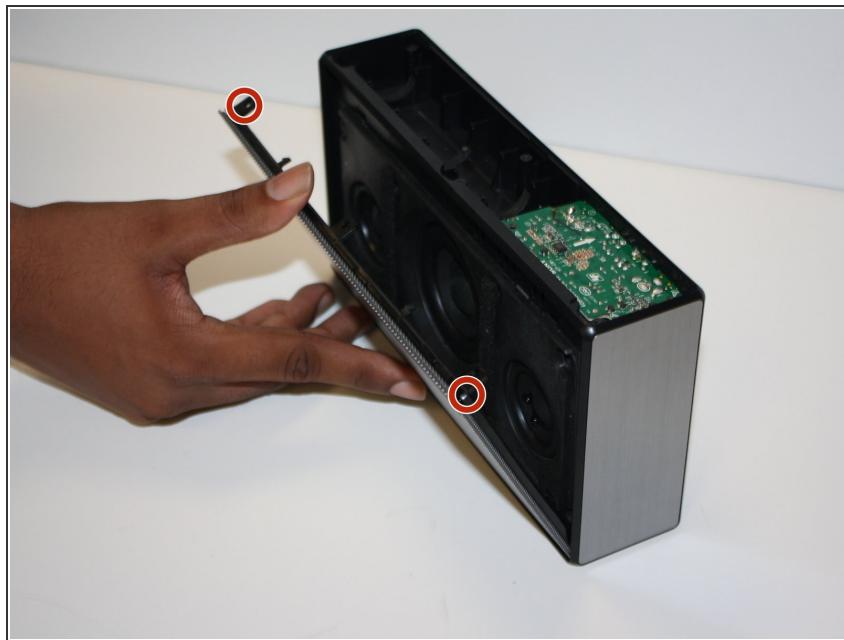


- Remove the speaker grill by pushing on the two tabs in the corners.

## Step 4



- Remove the eight 0.5mm Phillips #1 screws from the speaker panel.


## Step 5 — Button Circuit Board

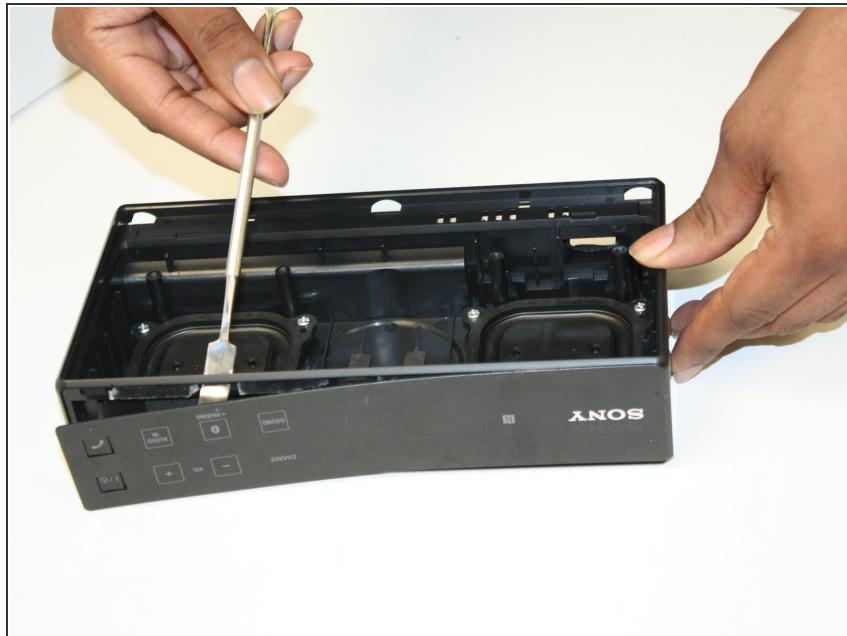

- Using the flat side of the metal spudger, apply pressure to underside of the cover to loosen the adhesive and separate the cover from the top of the speaker.

 When working with electronics, it's important to choose a tool that's ESD-safe to avoid accidental damage to the device. The regular black nylon spudger or a plastic opening tool should be used whenever possible.

## Step 6

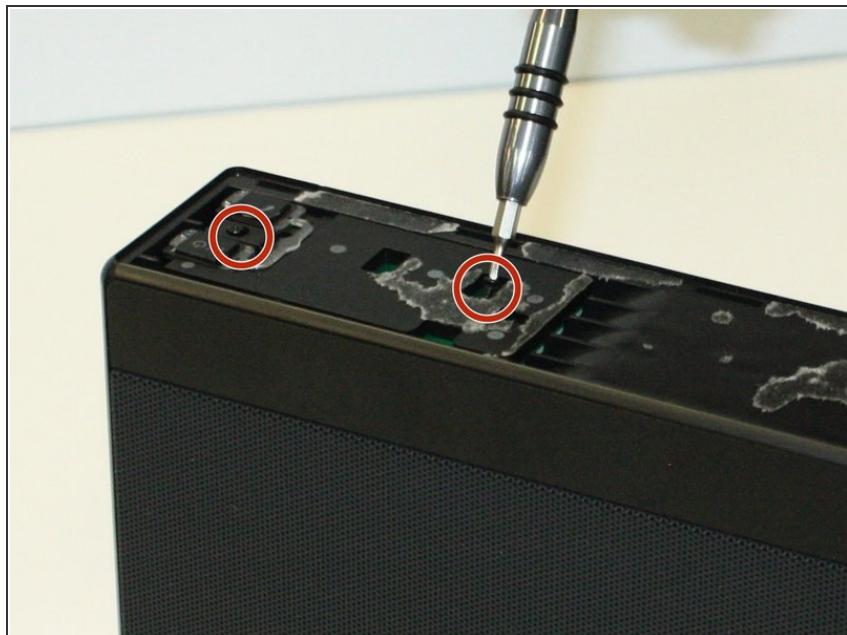

- Using the Phillips #00 screwdriver, pull out the three screws keeping the button board in place.

## Step 7



- Remove the button board from the speaker.

To reassemble your device, follow these instructions in reverse order.