


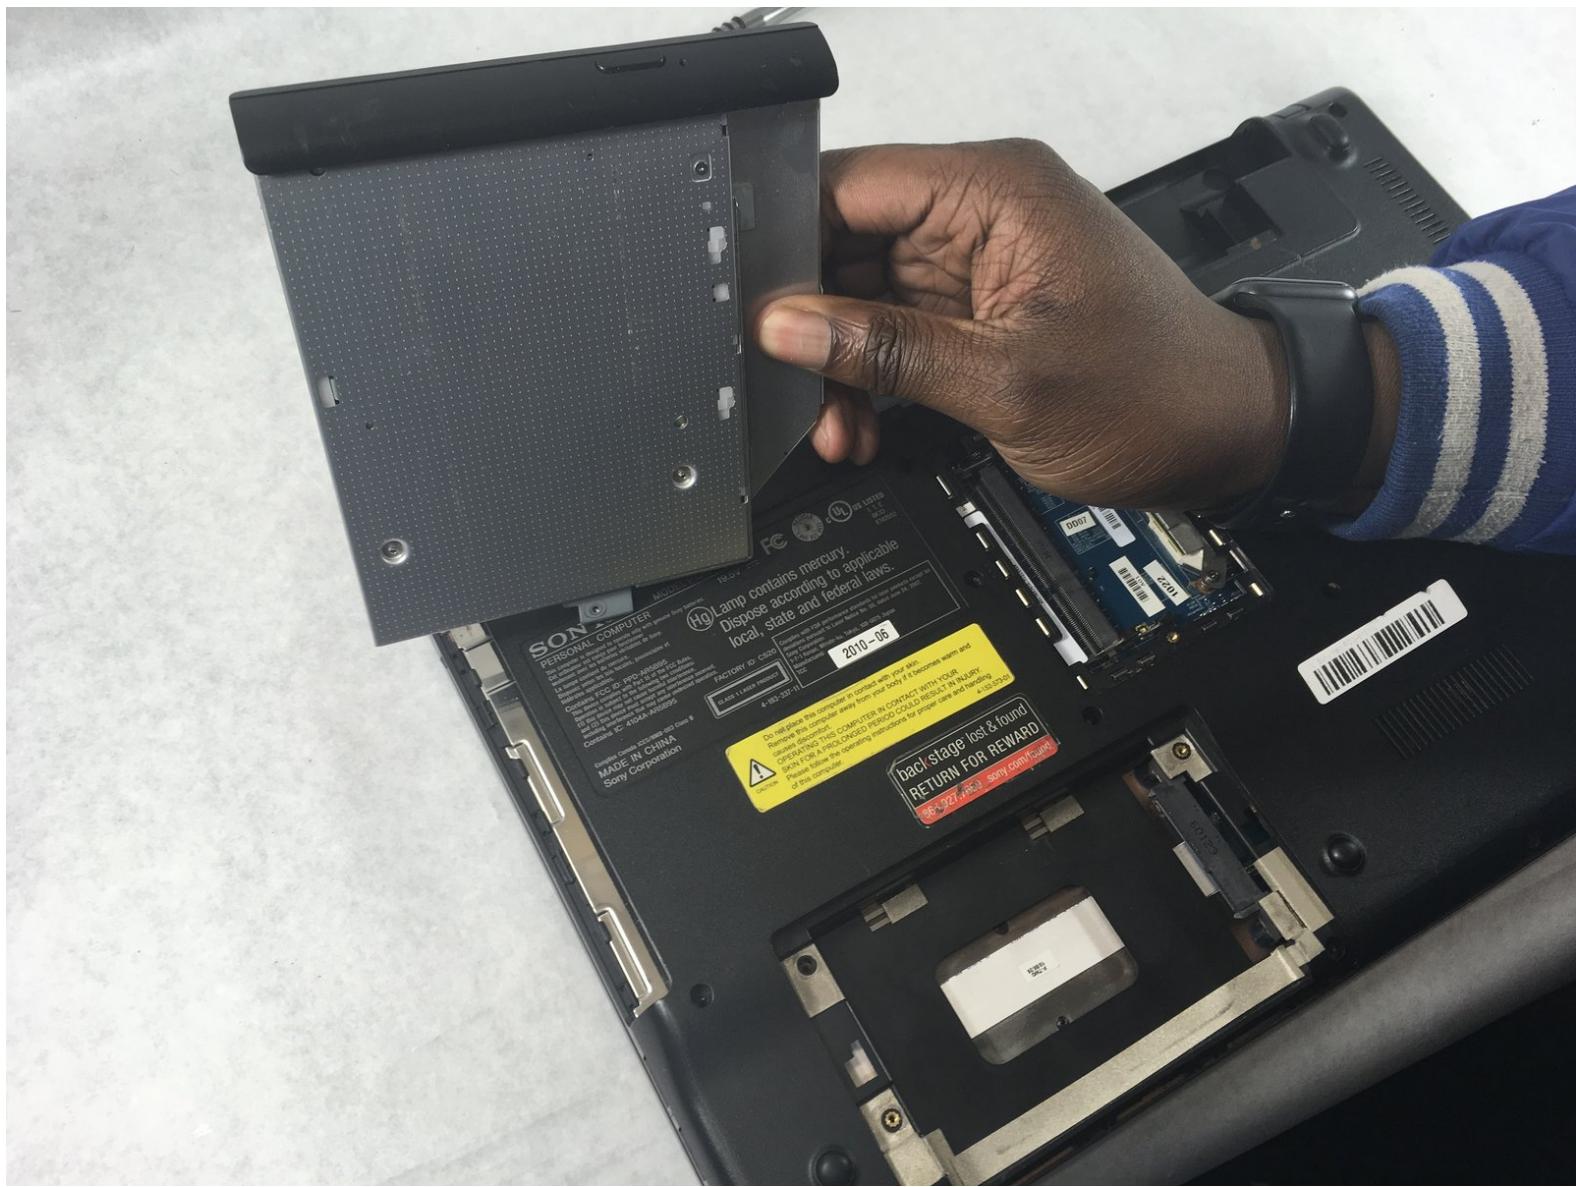

Sony VAIO PCG-61611L Optical Drive Replacement

The guide will showcase how to replace the Optical Drive on the Sony VAIO PCG-61611L.

Written By: Christopher Hover



INTRODUCTION

This guide shows how to remove/replace the CD-ROM/optical drive on the Sony VAIO PCG-61611L laptop computer.

TOOLS:

- JIS #0 Screwdriver (1)


Step 1 — Battery



⚠ Ensure that the laptop is powered off before disconnecting the battery.

- Flip the laptop over so the underside of the laptop is facing up.

Step 2

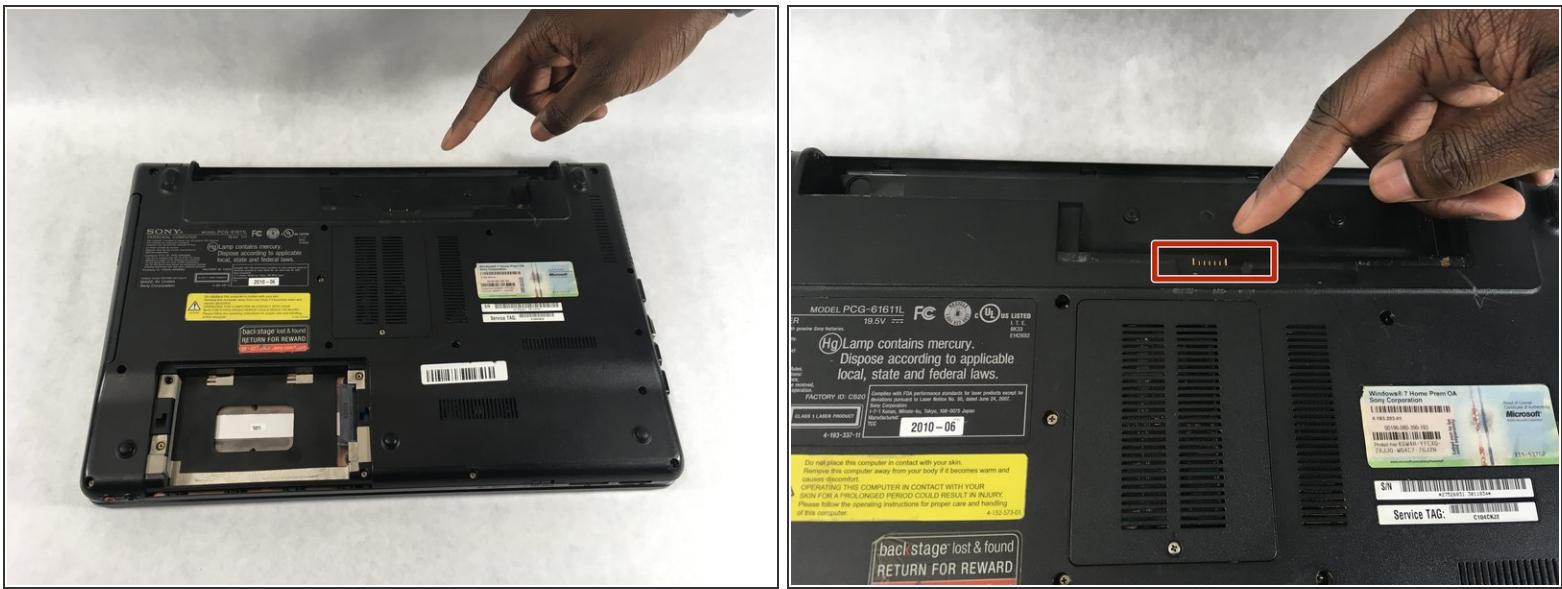

- Slide the two tabs towards each other until the battery disconnects slightly from its position.
- Carefully lift the battery out of its position away from the laptop.


(i) The battery is not pictured here, since it is missing from this particular device.

Step 3 — Optical Drive



- Use a JIS #0 screwdriver to remove the 4mm screw from its place.

Step 4

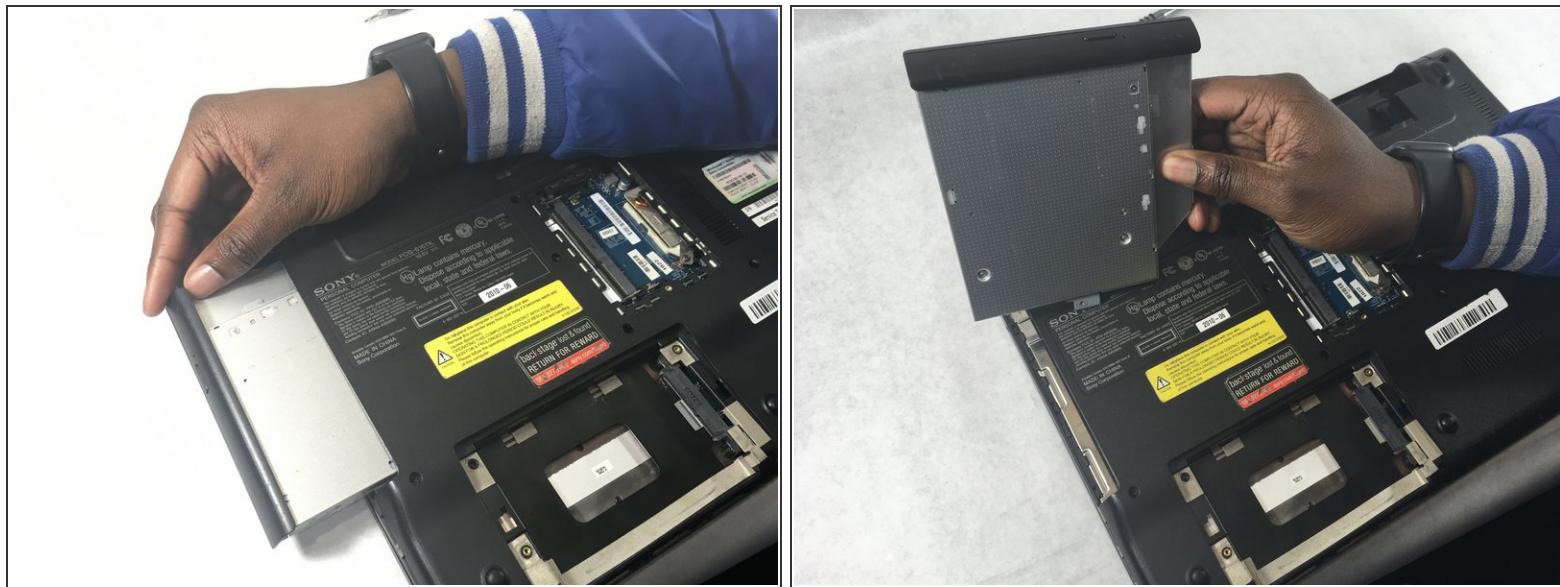

- Remove the optical drive gently away from its holder on the laptop.

To reassemble your device, follow these instructions in reverse order.