



Sony VAIO PCG-61611L RAM Replacement

The guide will showcase how to replace the two RAM sticks on the Sony VAIO PCG-61611L.

Written By: Christopher Hover



INTRODUCTION

This guide shows how to remove/replace the RAM on the Sony VAIO PCG-61611L laptop computer.

TOOLS:


- JIS #0 Screwdriver (1)

Step 1 — Battery



- ⚠ Ensure that the laptop is powered off before disconnecting the battery.
- Flip the laptop over so the underside of the laptop is facing up.

Step 2

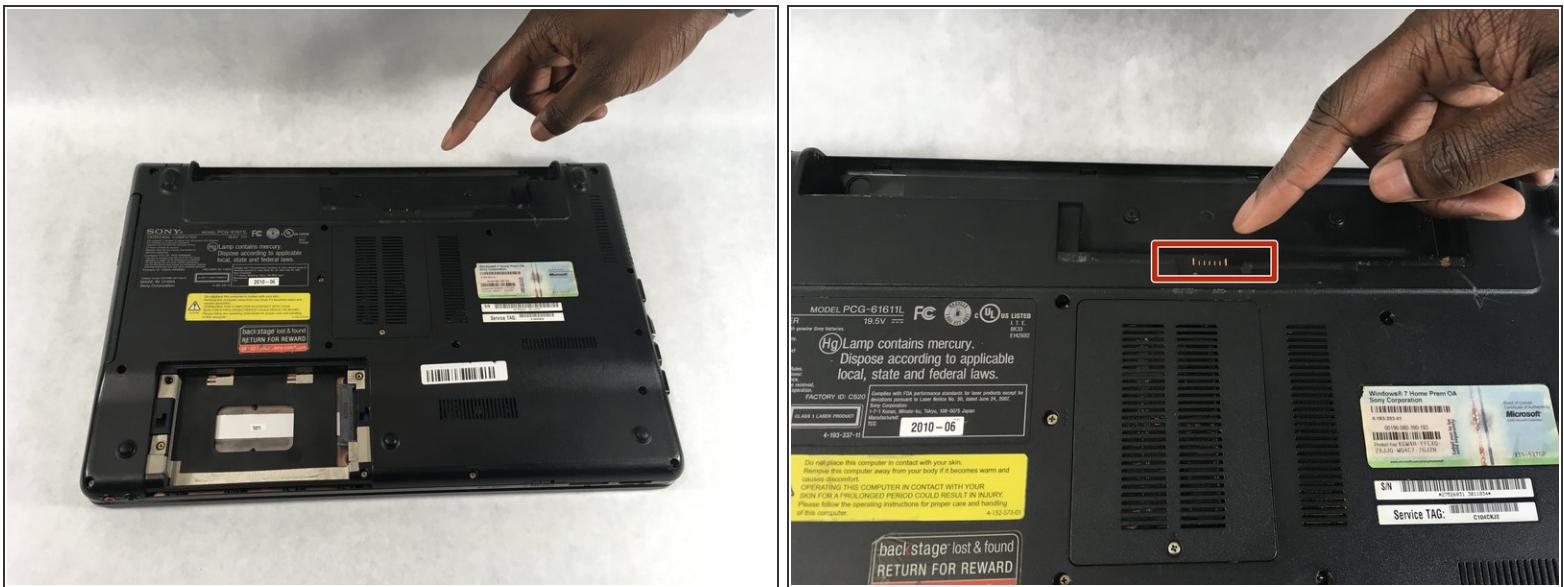

- Slide the two tabs towards each other until the battery disconnects slightly from its position.
- Carefully lift the battery out of its position away from the laptop.


(i) The battery is not pictured here, since it is missing from this particular device.

Step 3 — RAM



- Using a JIS #0 screwdriver, loosen the captive screw attached to the RAM cover.
- (i)* This screw will not come out all the way, but will remain attached to the cover instead.

Step 4

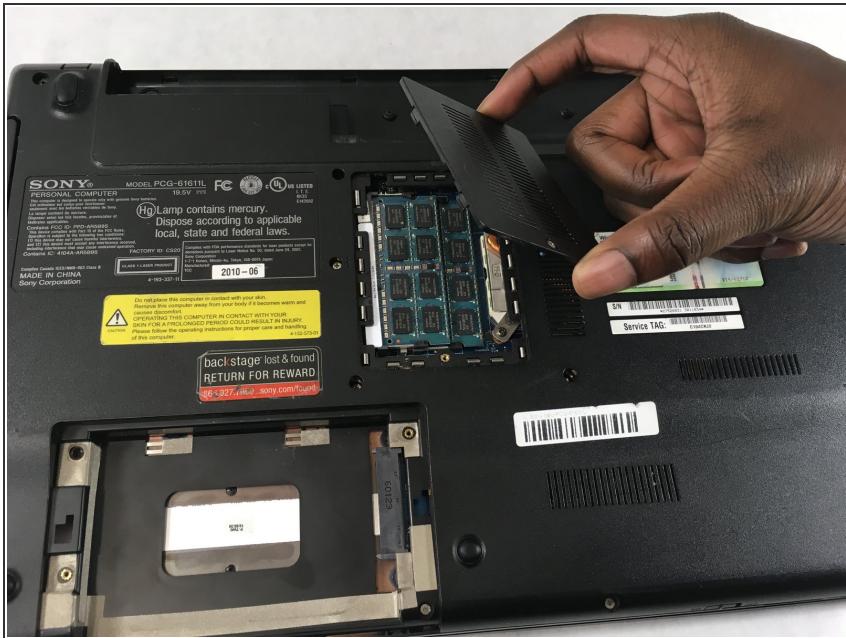

- Remove the cover which will reveal the two RAM sticks.

Step 5



- Push the two tabs holding the RAM sticks in place, away from each other.
- The first RAM stick will pop up out of place. Remove it away from its position.

Step 6



- Push the two tabs holding the second RAM stick in, away from each other.
- The second RAM stick will pop up out of place. Remove it away from its position.

To reassemble your device, follow these instructions in reverse order.