



Sony VAIO PCG-933A Thermal Paste Replacement

Glue the inside of your laptop back together.

Written By: Sara Lillard



INTRODUCTION

How to replace the thermal paste into your laptop.

TOOLS:

- **Phillips #0 Screwdriver** (1)
- **High Content Rubbing Alcohol** (1)

Step 1 — Battery



- Turn the laptop upside down
- The battery is located on the front right side of the laptop; the opposite side from the floppy disk drive.

Step 2



- As shown by the arrow, slide the plastic cover up and then pull out and downwards.
- You should now be able to pull the battery out.

Step 3 — Keyboard



- Remove the four 16mm Phillips screws bordering the edge of the laptop, indicated here.

Step 4



- Remove the 4mm Phillips screw on the right rear side of the laptop next to the audio ports.
- This will release the speaker grille.

Step 5



- Flip the computer back over and open the screen.

Step 6



- Slide the blue speaker grille (located above the keyboard) to the right and gently pull upward. The grille will still be connected by a white electrical strip.
- Carefully pull out the white electrical strip.

Step 7



- Remove the 4mm Phillips screw in the center (located to the left of the green strip).
- Carefully pull the green strip straight up to disconnect it.
- The keyboard can now be removed.

Step 8 — Thermal Paste



- Remove the two 4mm Phillips screws in the center of the computer located on each side of the copper electrical strip.

Step 9




- Remove the four 4mm Phillips screws around the hard drive cage.

⚠ WARNING: DVD drive is now loose as well.


- Lift hard drive cage straight up.
- Carefully disconnect the copper strip to pull out the hard drive.

Step 10

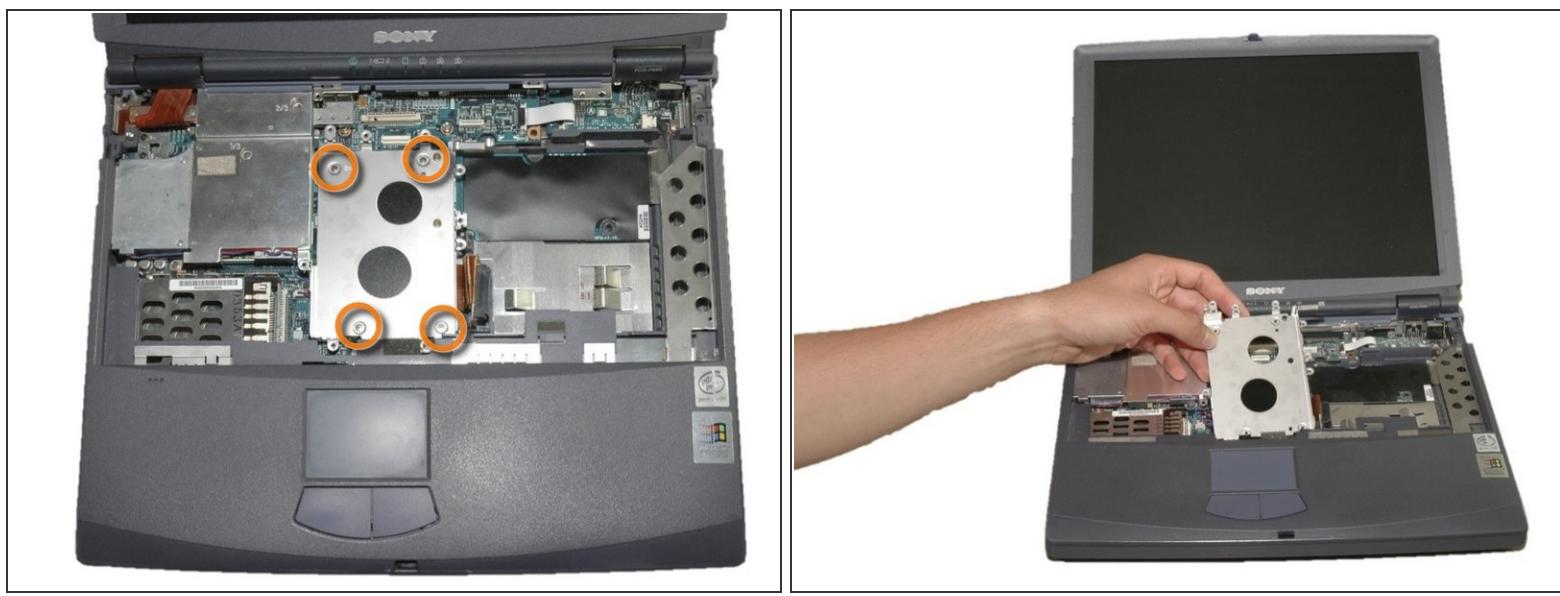



- With the hard drive removed, unscrew the four 6mm brass colored, Phillips screws under the hard drive cage
- This will allow you to remove the hard drive mounting bracket

Step 11

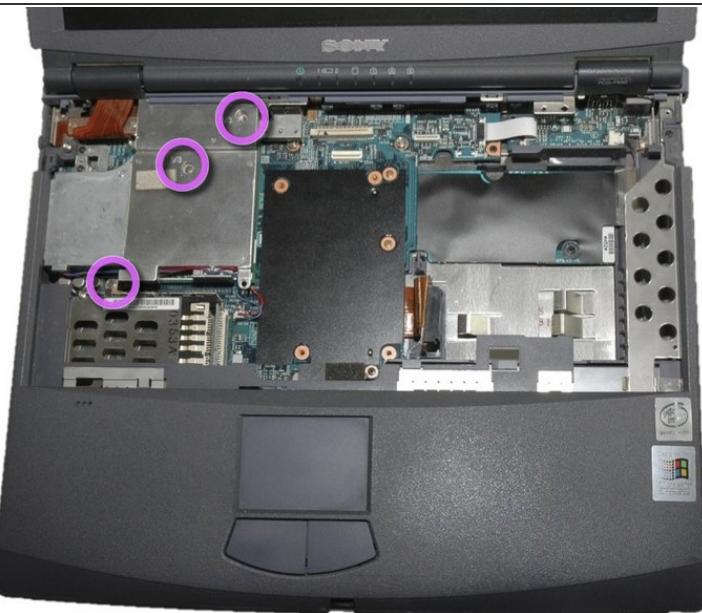


- Remove the three 6mm brass colored, Phillips screws that hold the fan cage in place.

Step 12

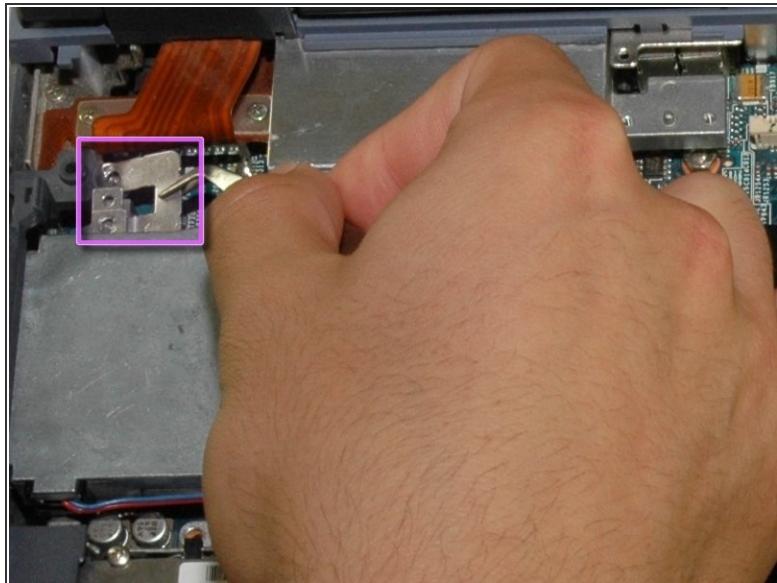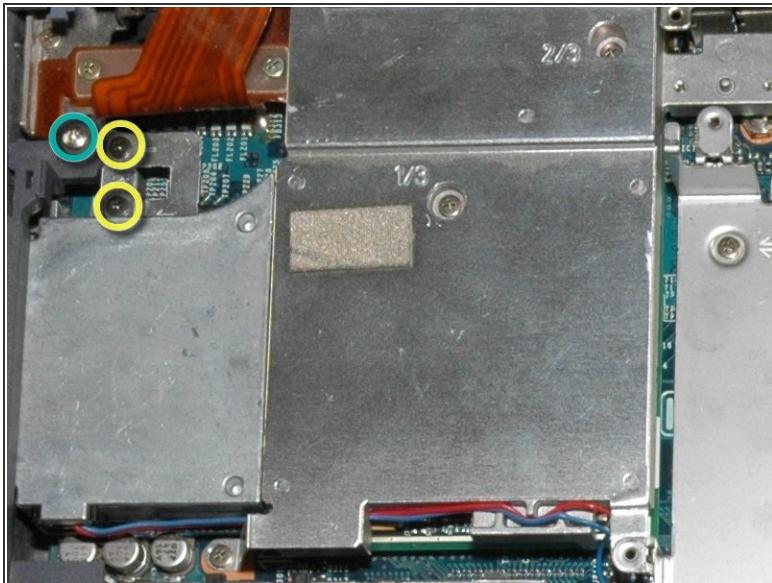

- Remove the two 4mm black Phillips screws shown here.
- Remove the 18mm silver Phillips screw shown here.
- Now remove the silver tab.

Step 13

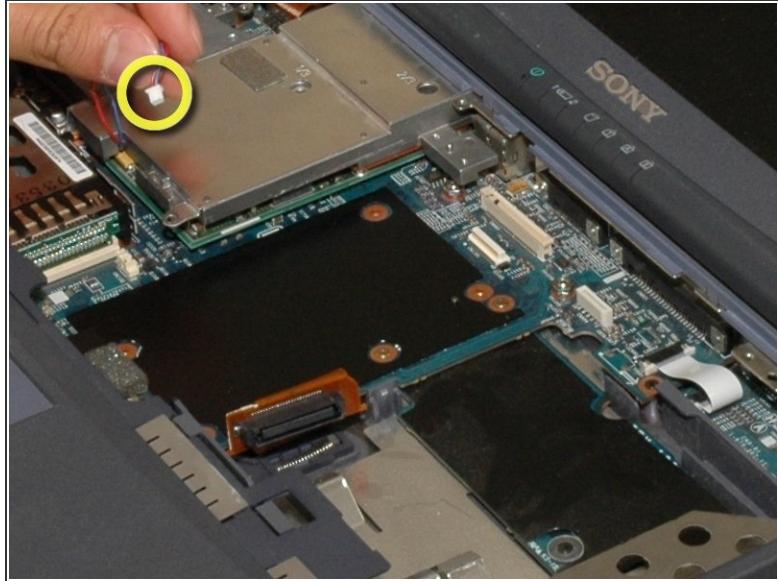


- Remove the blue and red fan power cords.

Step 14



- Carefully pull up and out on the metal heat sink and fan bracket.
- You should be able to see the thermal paste.

Step 15

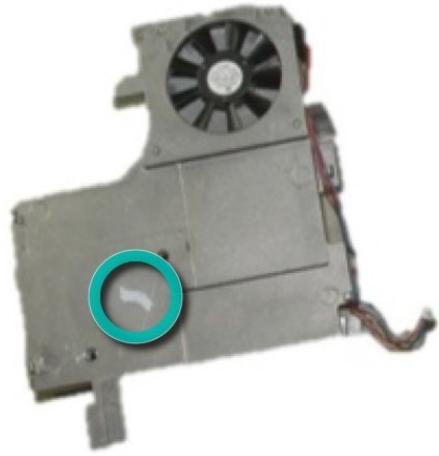

- To remove thermal paste thoroughly, put isopropyl alcohol (70% or greater) on a paper towel and wipe thermal paste off. Some force may be required.
- Apply new thermal paste to CPU.

To reassemble your device, follow these instructions in reverse order.