



# Sony VAIO PCG-F420 Floppy Drive Replacement

The floppy drive slides in and out for easy removal. This means no tools are required for its replacement.

Written By: Tim Cowley




This document was generated on 2019-09-18 03:02:40 PM (MST).

## INTRODUCTION

This guide will show how to remove the floppy drive for replacement.

## Step 1 — Floppy Drive

- Locate the release tab on the bottom of the device.

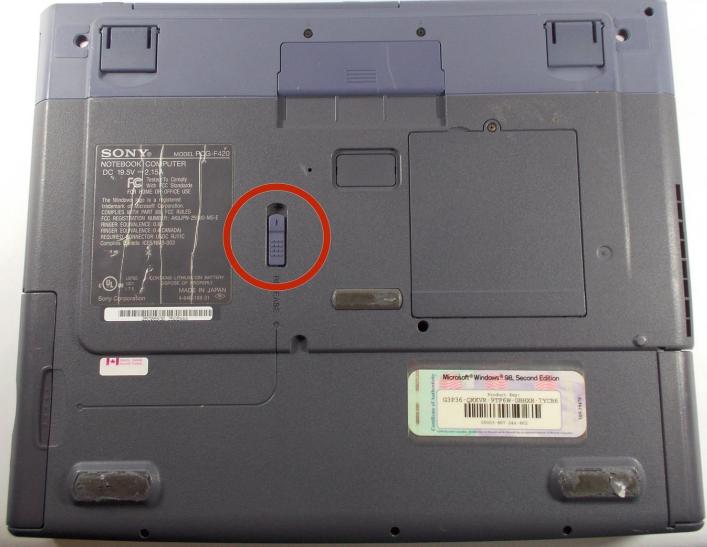

## Step 2



- Slide tab in the direction of the arrow and pull out the floppy drive.

To reassemble your device, follow these instructions in reverse order.